

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karinear](#) /

› [Karinear Induction Hob User Manual](#)

Karinear KNI-602S1

Karinear Induction Hob User Manual

Model: KNI-602S1

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installing or using your new induction hob. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the hob is installed by a qualified person.
- Do not touch hot surfaces. Use handles or knobs.
- Never leave the hob unattended during operation.
- Do not store flammable materials on or near the hob.
- Keep children away from the appliance.
- Disconnect power before cleaning or servicing.
- Use only induction-compatible cookware.

2. PRODUCT OVERVIEW

The Karinear Induction Hob KNI-602S1 is a 60 cm electric hob featuring 4 cooking zones, a boost function, and slider control. It includes a flexible zone for larger cookware.

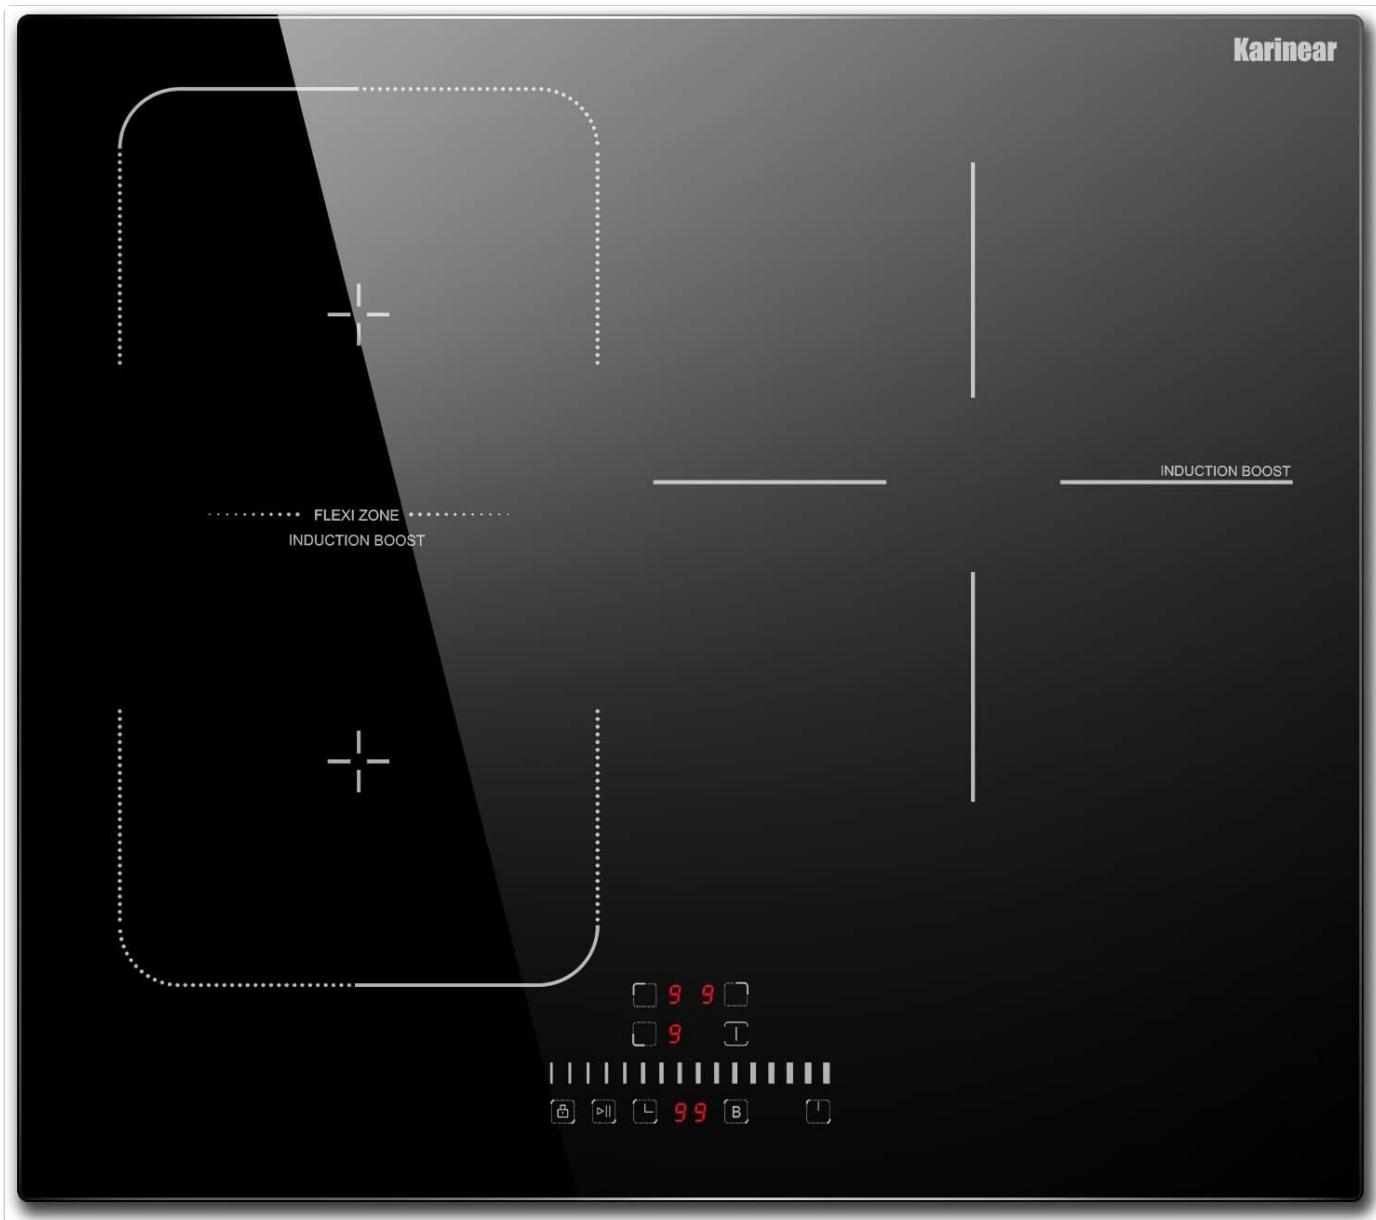


Figure 2.1: Karinear Induction Hob KNI-602S1. This image displays the sleek black glass surface of the hob, highlighting the four cooking zones, including a flexible zone on the left, and the touch control panel at the bottom center. The Karinear logo is visible in the top right corner.

2.1 Key Features:

- 4 Induction Cooking Zones
- Boost Function for rapid heating
- Slider Touch Control
- Flexible Zone for versatile cooking
- Child Lock Function
- Timer Function

3. SETUP AND INSTALLATION

Installation should only be performed by a qualified electrician or technician in accordance with local regulations and standards.

3.1 Unpacking:

- Carefully remove the hob from its packaging.

- Inspect for any damage during transit. Report any damage immediately to your supplier.
- Retain packaging materials for future transport or disposal.

3.2 Cut-out Dimensions:

Ensure the countertop cut-out dimensions match the hob's requirements. Refer to the installation diagram provided with the product for precise measurements.

3.3 Electrical Connection:

The hob requires a dedicated electrical circuit. The electrical connection must comply with local wiring rules and regulations. Ensure the power supply is disconnected before making any electrical connections.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off:

Press and hold the Power button () for 3 seconds to turn the hob on or off.

4.2 Selecting a Cooking Zone and Power Level:

1. Turn on the hob.
2. Place an induction-compatible pan on the desired cooking zone.
3. Select the cooking zone by touching its corresponding sensor.
4. Adjust the power level using the slider control from 1 (low) to 9 (high).

4.3 Boost Function:

To activate the Boost function for rapid heating, select a cooking zone and then touch the Boost button **B**). The zone will operate at maximum power for a limited time.

4.4 Timer Function:

The timer can be set for individual zones or as a general minute minder. Touch the Timer button () and use the slider to set the desired time.

4.5 Child Lock:

To activate the child lock, press and hold the Lock button () for 3 seconds. This prevents accidental operation. Repeat to deactivate.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

5.1 Daily Cleaning:

- Ensure the hob is cool before cleaning.
- Wipe the glass surface with a soft cloth and mild detergent.
- For stubborn stains, use a ceramic hob cleaner and a non-abrasive sponge.
- Dry thoroughly with a clean cloth to prevent water marks.

5.2 Avoiding Damage:

- Do not use abrasive cleaners, scouring pads, or harsh chemicals.

- Avoid dropping heavy objects on the glass surface.
- Do not drag rough-bottomed cookware across the hob.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check power connection; Deactivate child lock.
Cooking zone not heating.	Non-induction compatible cookware; Pan not centered.	Use induction-compatible pan; Reposition pan.
Display shows "E" error code.	Overheating; Internal fault.	Allow hob to cool; Disconnect power for 5 minutes and reconnect. If error persists, contact service.
Hob makes buzzing noise.	Normal operation with certain cookware.	This is normal for induction hobs and not a fault.

7. SPECIFICATIONS

Feature	Detail
Brand	Karinear
Model	KNI-602S1
Product Dimensions (L x W x H)	59 x 5.6 x 52 cm
Item Weight	9.74 kg
Installation Type	Drop-In
Burner Type	Induction
Number of Heating Elements	4
Fuel Type	Electric
Control Type	Slider Touch Control
Power Source	Corded Electric

8. WARRANTY AND SUPPORT

Karinear products are manufactured to high quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Karinear website. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Karinear customer service through the details provided on their official website or your purchase documentation.

Note: Unauthorized repairs or modifications will void the warranty.

© 2023 Karinear. All rights reserved.

Manual Version: 1.0