

[Manuals.plus](#) /

› [Ufree](#) /

› Ufree Multi-Functional Grooming Kit Instruction Manual

Ufree U-2216

Ufree Multi-Functional Grooming Kit Instruction Manual

Model: U-2216

INTRODUCTION

Thank you for choosing the Ufree Multi-Functional Grooming Kit. This comprehensive kit is designed to provide a versatile and efficient grooming experience for your beard, hair, nose, and body. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.



Figure 1: Complete Ufree Multi-Functional Grooming Kit including the main trimmer unit, various interchangeable heads, and charging stand.

SAFETY INFORMATION

For safe use, keep the trimmer away from water sources and avoid using it near children. Discontinue use if skin irritation occurs. This product is waterproof but check the user manual for specific usage instructions.

Warning:

- Do not immerse the main unit in water for extended periods, despite its waterproof rating.
- Ensure the charging port is completely dry before connecting the charging cable.
- Keep out of reach of children.
- Do not use if the blades are damaged or bent, as this may cause injury.
- Avoid using the trimmer on irritated or broken skin.

PACKAGE CONTENTS

Your Ufree Multi-Functional Grooming Kit includes the following items:

- 1 x Main Trimmer Unit
- 1 x T-blade Trimmer Head

- 1 x Precision Trimmer Head
- 1 x Electric Razor Head
- 1 x Nose and Body Hair Trimmer Head
- Multiple Guide Combs (various lengths)
- 1 x Rechargeable Storage Base
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Comb
- 1 x Lubricating Oil



Figure 2: Visual representation of all items included in the Ufree grooming kit.

SETUP

Charging the Trimmer

Before first use, fully charge the trimmer for approximately 1.5 hours. A full charge provides up to 90 minutes of cordless use.

1. Connect the USB charging cable to the trimmer's charging port (USB-C).

2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or the rechargeable storage base.
3. The LCD display will show the battery percentage and charging status.
4. Once fully charged, the display will indicate 100% or 99 minutes.



Figure 3: The LCD display indicates battery life and charging status. A full charge provides up to 90 minutes of use.



Figure 4: The convenient rechargeable storage base keeps your trimmer and accessories organized while charging.

Attaching and Detaching Trimmer Heads

The Ufree grooming kit features interchangeable heads for various grooming tasks. To change a head:

1. Ensure the trimmer is turned off.
2. Grip the main unit firmly and gently pull the current head upwards to detach it.
3. Align the desired head with the main unit and push it down until it clicks securely into place.

OPERATING INSTRUCTIONS

Power On/Off and Speed Settings

To turn the trimmer on, press the power button. The LCD display will illuminate, showing the current battery percentage. Press the power button again to cycle through two different speed settings. To turn off the trimmer, press and hold the power button for 3 seconds.

The trimmer also features a travel lock. To activate, press and hold the power button for 5 seconds until a lock icon appears on the display. Repeat the process to unlock.



Figure 5: The trimmer features a travel lock for convenience and a powerful 7500 RPM motor for efficient grooming.

Using Specific Attachments

Select the appropriate head and guide comb for your desired grooming task:

- **T-blade Trimmer:** Ideal for precise lines, edging, and detailing beards and hairlines. Use without a guide comb for a close trim.
- **Precision Trimmer:** For intricate designs and fine detailing.
- **Electric Razor/Foil Shaver:** Provides a smooth, close shave for facial hair or body hair.
- **Nose and Body Hair Trimmer:** Safely and comfortably removes unwanted hair from the nose, ears, and other sensitive body areas.
- **Hair Clippers:** Use with various guide combs for different hair lengths and styles.



Figure 6: The versatile Ufree grooming kit can be used for various areas including beard, hair, nose, and body.



Figure 7: Detailed view of the 7 interchangeable heads: T-blade Trimmer, Nose Trimmer, Foil Shaver, Design Trimmer,

MAINTENANCE

Cleaning the Trimmer

The Ufree grooming kit and its attachments are fully washable for easy cleaning.

1. Ensure the trimmer is turned off and disconnected from the charging cable.
2. Detach the trimmer head.
3. Use the included cleaning brush to remove any loose hairs from the blades and the trimmer unit.
4. Rinse the trimmer head and the main unit under running water. You can use it in the shower.
5. Allow all parts to air dry completely before reattaching the head or storing.
6. Apply a small drop of lubricating oil (included) to the blades periodically to maintain optimal performance.



Figure 8: The Ufree trimmer is fully washable, allowing for easy cleaning under running water or in the shower.

Storage

Store the trimmer and all its accessories in the provided rechargeable storage base to keep them organized and protected.



Figure 9: The rechargeable storage base provides a convenient and organized solution for storing your grooming kit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted. / Travel lock is activated.	Charge the trimmer fully. / Press and hold the power button for 5 seconds to deactivate travel lock.
Trimmer not charging.	Charging cable or adapter issue. / Charging port is wet.	Ensure cable is properly connected and adapter is functional. Use a different adapter if necessary. / Ensure charging port is completely dry before charging.
Blades not cutting effectively.	Blades are dull or clogged with hair. / Insufficient lubrication.	Clean the blades thoroughly. / Apply lubricating oil to the blades. Consider replacing the head if heavily worn.
Attachments do not fit.	Incorrect alignment.	Ensure the attachment is correctly aligned with the main unit before pushing down firmly.

SPECIFICATIONS

- **Model Number:** U-2216
- **Power Source:** Battery Powered
- **Battery Type:** Lithium-Ion
- **Charging Time:** Approximately 1.5 hours
- **Run Time:** Up to 90 minutes
- **Motor Speed:** 7500 RPM
- **Waterproof Rating:** IPX7

- **Manufacturer:** Ufree
- **Country of Origin:** China

WARRANTY AND SUPPORT

Ufree products are designed for durability and performance. If you encounter any issues or have questions regarding your grooming kit, please contact Ufree customer support.

- **Warranty:** Please refer to your purchase documentation for specific warranty details.
- **Customer Support:** For assistance, visit the [Ufree Store on Amazon](#) or contact their support channels as provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question