

[Manuals.plus](#) /

› [G-Mee](#) /

› G-Mee Play Pro-64GB Android 12 Smartplayer Instruction Manual

G-Mee Play Pro

G-Mee Play Pro-64GB Android 12 Smartplayer Instruction Manual

Model: Play Pro

1. SETUP

1.1 What's in the Box

Verify that all components are present in the package:

- 1 x G-Mee Play Pro Device
- 1 x Micro-USB Charging Cable (power adapter not included)
- 1 x Wired Earbuds
- 1 x Clear Protective Case
- 1 x Screen Protector (pre-installed)

Video: [Unboxing the G-Mee Play Pro and its included accessories.](#)

Included Accessories

- 1 x Clear Case
- 1x Earbuds
- 1 x Micro-USB cable
- 1 x Screen Protector (pre-installed)



Image: The G-Mee Play Pro device shown with its included accessories: micro-USB cable, wired earbuds, clear protective case, and pre-installed screen protector.

1.2 Initial Charging

Before first use, fully charge your G-Mee Play Pro. Connect the provided micro-USB cable to the device's charging port and plug the other end into a compatible USB power adapter (not included) or a computer's USB port. The device will indicate when charging is complete.

1.3 Battery and Micro-SD Card Installation

The G-Mee Play Pro features a removable battery and supports expandable storage via a Micro-SD card.

1. Carefully remove the back cover of the device.
2. Insert the battery into its compartment, ensuring the contacts align correctly.
3. If desired, insert a Micro-SD card into the designated slot for additional storage.
4. Replace the back cover securely.



*Playing Toy Story movie via subscription on Disney+

TECHNICAL FEATURES



2.4 GHz



5.5" Display



Bluetooth 4.2



Octacore 1.6 GHz Processor



Android 12



4 GB RAM + 64 GB Storage

Image: Detailed view of the G-Mee Play Pro, illustrating external buttons, ports, and internal components like the battery and Micro-SD slot.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off

- To power on: Press and hold the Power Key until the screen illuminates.
- To power off: Press and hold the Power Key, then select 'Power off' from the options.
- To restart: Press and hold the Power Key, then select 'Restart' from the options.

2.2 Touchscreen Navigation

The G-Mee Play Pro features a 5.5-inch HD+ 1280*720 touchscreen. Navigate by tapping, swiping, and pinching gestures.

2.3 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list and enter the password if prompted.

2.4 Bluetooth Pairing

To pair with Bluetooth devices like headphones or speakers:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices to pair.



Image: Icons representing Wi-Fi and Bluetooth connectivity on the G-Mee Play Pro.

2.5 App Installation and Media Playback

The G-Mee Play Pro allows you to download and install various applications from the Google Play Store for music, videos, audiobooks, games, and more.

1. Open the **Play Store** app on your device.
2. Search for your desired app (e.g., Spotify, Netflix, Disney+, Audible).
3. Select the app and tap **Install**.
4. Once installed, open the app to enjoy your content.

Video: Demonstrates how to install music, games, movies, and other streaming apps on the G-Mee Play Pro.

Unlock your Digital World with G-mee Play Pro

MP3 & MP4 Player



Stream Movies or Shows



Stream Music, Podcast, Audiobooks



Control your Tracker



Connect to Smart Homes



Practrtice Mindfulness



Play Games



A Tool for Learning



Image: Visual representation of the diverse functionalities of the G-Mee Play Pro, including media playback, smart home connectivity, and educational uses.

2.6 Parental Controls

The G-Mee Play Pro includes built-in parental control features to manage app access and screen time.

- **G-mee App Locker:** To lock specific applications, navigate to **Settings > Security > App Locker**. Create a PIN to secure selected apps.
- **G-mee Co-Pilot:** For remote parental control, utilize the G-mee Co-Pilot system. This allows you to manage app access and schedule locking times from your own phone. Visit g-mee.com for detailed setup instructions and more information.

Video: Tutorial on how to block in-app videos using the G-mee Co-Pilot (beta) feature.

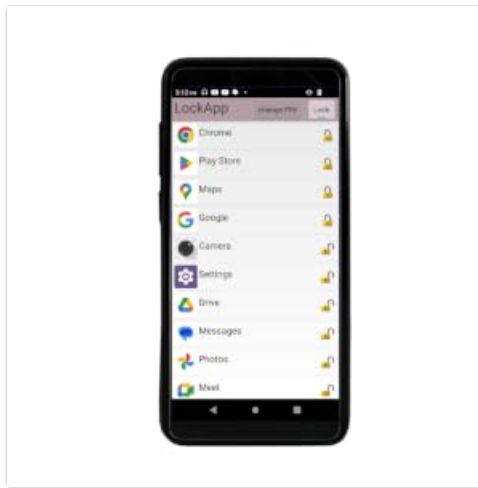


Image: The G-mee App Locker screen, demonstrating how to lock or unlock individual applications for parental control.

3. MAINTENANCE

3.1 Charging

Regularly charge your device using the provided micro-USB cable to maintain optimal battery performance. Avoid using damaged cables or non-compatible chargers.

3.2 Cleaning

To clean the device, use a soft, dry, lint-free cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, which can damage the screen or internal components.

3.3 Software Updates

Keep your G-Mee Play Pro updated to ensure enhanced security, bug fixes, and access to new features. System updates are delivered over-the-air (OTA).

1. Connect your device to Wi-Fi.
2. Go to **Settings** > **System** > **System update**.
3. Follow the on-screen prompts to download and install any available updates.

Video: Guide on performing a system update on your G-Mee Play Pro device.



Image: Announcement of a software update for the G-Mee Play Pro, detailing benefits such as enhanced security and new Co-Pilot features.

4. TROUBLESHOOTING

If you encounter issues with your G-Mee Play Pro, refer to the following common solutions:

- **Device is sluggish or unresponsive:**
Try closing unused applications running in the background. If the issue persists, restart the device. Ensure you have sufficient free storage space.
- **Bluetooth pairing issues:**
Ensure both the G-Mee Play Pro and the target Bluetooth device are in pairing mode and within range. Try unpairing and re-pairing the device. Verify that the Bluetooth device is compatible.
- **Parental controls not working as expected:**
Check the settings in the G-mee App Locker on the device. If using G-mee Co-Pilot, ensure your remote settings are correctly applied and the device has an active internet connection. Perform a system update to ensure you have the latest parental control features and bug fixes.
- **Device not charging:**
Ensure the micro-USB cable is securely connected to both the device and the power source. Try a different compatible power adapter or USB port. Inspect the charging cable for any damage.

5. SPECIFICATIONS

Feature	Detail
Brand	G-Mee
Model Name	Play Pro

Operating System	Android 12
Processor	Octa-core 1.6 GHz
RAM	4 GB
Internal Storage	64 GB
Expandable Storage	Micro SD (up to 128+ GB)
Screen Size	5.5 inches
Display Technology	LCD, HD+ 1280*720
Connectivity	2.4 GHz Wi-Fi, Bluetooth 4.0, Aux
Battery Capacity	3000 mAh
Battery Life (Music)	Up to 12 hours
Battery Life (HD Video)	Up to 8 hours
Special Features	Built-in App Locker, Parental Control (G-mee Co-Pilot), Touch Screen, Video Playback, No Camera
Dimensions (D x W x H)	0.37"D x 3.05"W x 6.51"H
Item Weight	160 Grams

FRONT

VOLUME KEY

POWER KEY

TOUCHSCREEN

OVERVIEW

HOME

BACK



BACK

HEADSET JACK

MICRO-USB PORT

FLASHLIGHT



Micro-SD Slot

BATTERY



INSIDE BACK

Image: Overview of the G-Mee Play Pro's technical specifications, including connectivity, display, processor, and memory.

6. WARRANTY AND SUPPORT

6.1 Warranty Information

The G-Mee Play Pro comes with a **1-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For any questions, concerns, or technical assistance, please contact G-Mee customer support:

- Visit our official website: g-mee.com
- Email support: support@g-mee.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4SWXW4X>

More documents and user manuals: <https://manuals.plus/>