

[Manuals.plus](#) /

› [FRESKO](#) /

› Fresko V8 Pro Automatic Food Vacuum Sealer User Manual

## FRESKO V8 Pro

# Fresko V8 Pro Automatic Food Vacuum Sealer

User Manual

Model: V8 Pro | Brand: FRESKO

## INTRODUCTION

Thank you for choosing the Fresko V8 Pro Automatic Food Vacuum Sealer. This appliance is designed to preserve the freshness of your food for extended periods, reducing waste and promoting a healthier, more economical lifestyle. Its advanced features, including hands-free operation and intelligent liquid detection, make food preservation simple and efficient.



*Image: The Fresko V8 Pro Automatic Food Vacuum Sealer, a sleek black device designed for efficient food preservation.*

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions thoroughly before operating the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep out of reach of children. Close supervision is necessary when used near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Always ensure the vacuum chamber is clean and dry before use, especially after sealing moist foods.

## PACKAGE CONTENTS

---

Verify that all items are included in your package:

- 1 x Fresko V8 Pro Automatic Food Vacuum Sealer
- 10 x Quart Bags
- 1 x External Accessory (Hose for canisters/bottles)
- 1 x User Manual

# Full Starter Kit



1 FRESKO V8 Pro



10 Quart Bags



1 External Accessory



1 User Manual

Image: Contents of the Fresko V8 Pro starter kit, including the vacuum sealer, quart bags, external accessory, and user manual.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface.
3. **Power Connection:** Plug the power cord into a standard electrical outlet. The unit will enter standby mode.
4. **Initial Cleaning:** Before first use, wipe down the exterior of the unit with a damp cloth. Ensure the detachable vacuum chamber is clean and dry.

## OPERATING INSTRUCTIONS

### 1. Hands-Free Automatic Vacuum Sealing (Dry/Moist Food)

The Fresko V8 Pro automatically detects the bag and food type (dry/moist) for optimal sealing.

1. **Prepare Bag:** Place your food item into a Fresko vacuum sealer bag. Ensure the open end of the bag is clean, dry, and free of wrinkles.
2. **Insert Bag:** Gently insert the open end of the bag into the vacuum chamber slot. The machine will automatically detect the bag and begin the vacuuming and sealing process.
3. **Monitor Progress:** The intelligent touch screen and LED display will show the work progress indicator.
4. **Completion:** Once the process is complete, the machine will release the bag. Remove the sealed bag.

# True Fully Automatic Vacuum Sealer

Auto detecting bags, dry/moist food, hands-free operation

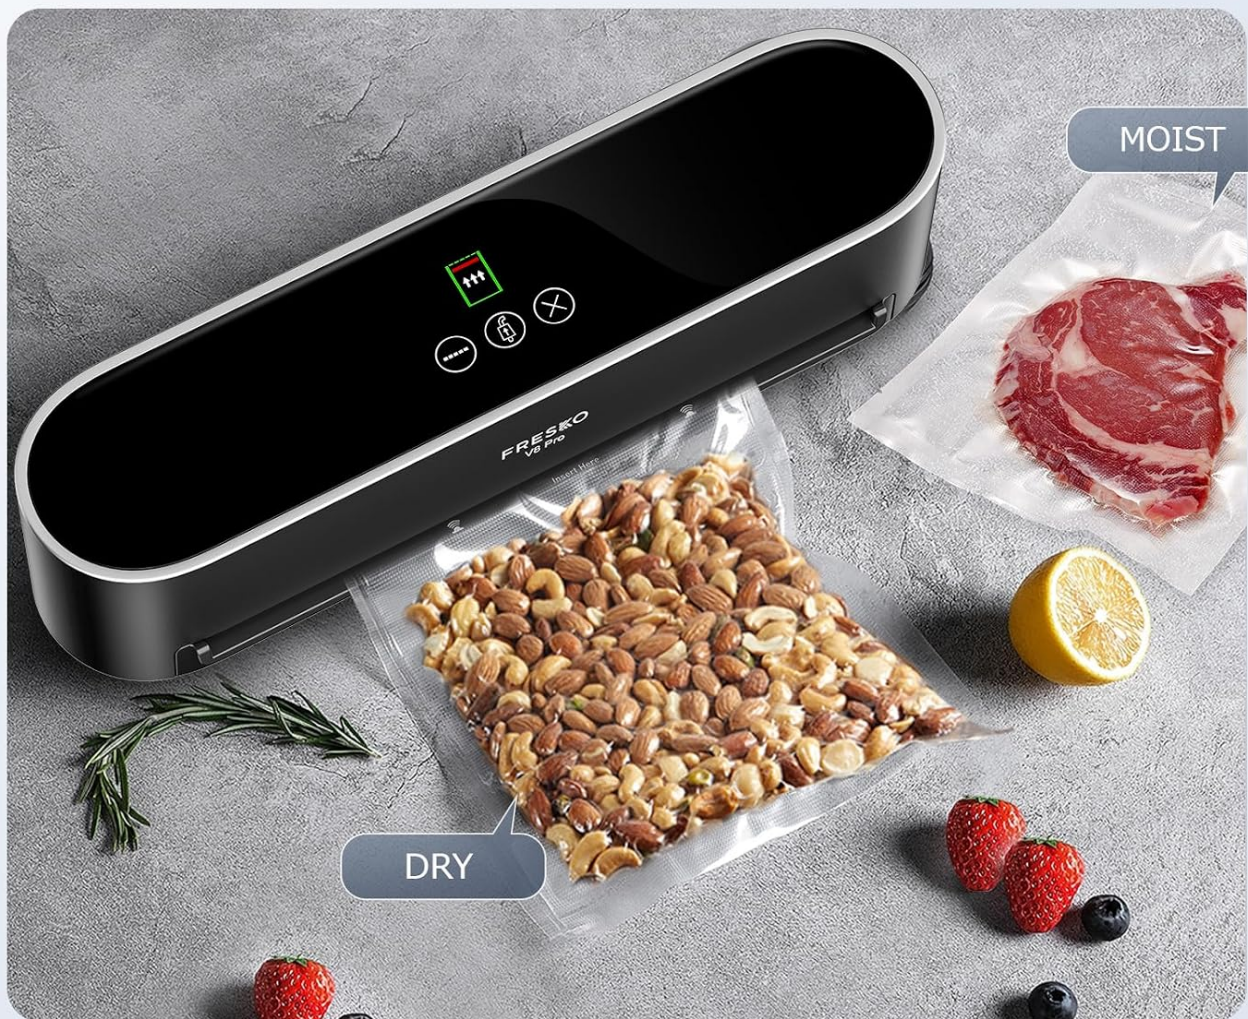 


Image: The Fresko V8 Pro demonstrating automatic vacuum sealing for both dry foods (pistachios) and moist foods (meat), with indicators for each mode.

## Fully Automatic Vacuum Sealer



Image: Comparison showing the simplicity of the Fresko V8 Pro's one-step automatic operation versus other manual vacuum sealers.

## Automatic Moisture Detection

Smart Auto Detecting Bag, DRY & MOIST food, true hands-free operation



Image: The Fresko V8 Pro's automatic moisture detection feature, illustrating how it adapts to dry and moist food types.

## 2. Single Sealing Function

Use this function to seal bags without vacuuming, ideal for delicate items or chip bags.

1. **Activate Seal Mode:** Touch the "Seal" icon on the control panel.
2. **Insert Bag:** Place the open end of the bag into the sealing slot.
3. **Seal:** The machine will automatically seal the bag. Remove once complete.

## Single Sealing Function

Touch the Seal Icon firstly, then insert the bag, the vacuum sealer will finish sealing.



Image: Demonstrating the single sealing function of the Fresko V8 Pro, used for sealing bags without vacuuming, such as a bag of chips.

## 3. External Vacuum System

The Fresko V8 Pro includes an external vacuum system for use with wine bottles, vacuum canisters, and zipper bags.

1. **Connect Hose:** Attach the external accessory hose to the designated port on the side of the vacuum sealer.
2. **Connect to Container:** Attach the other end of the hose to the vacuum port on your compatible wine bottle stopper, vacuum canister, or zipper bag.
3. **Activate External Vacuum:** Touch the "External Vacuum Sealer" icon on the control panel.
4. **Monitor Progress:** The machine will begin to vacuum the container.
5. **Completion:** The machine will stop automatically when the desired vacuum level is reached.

# External Vacuum System

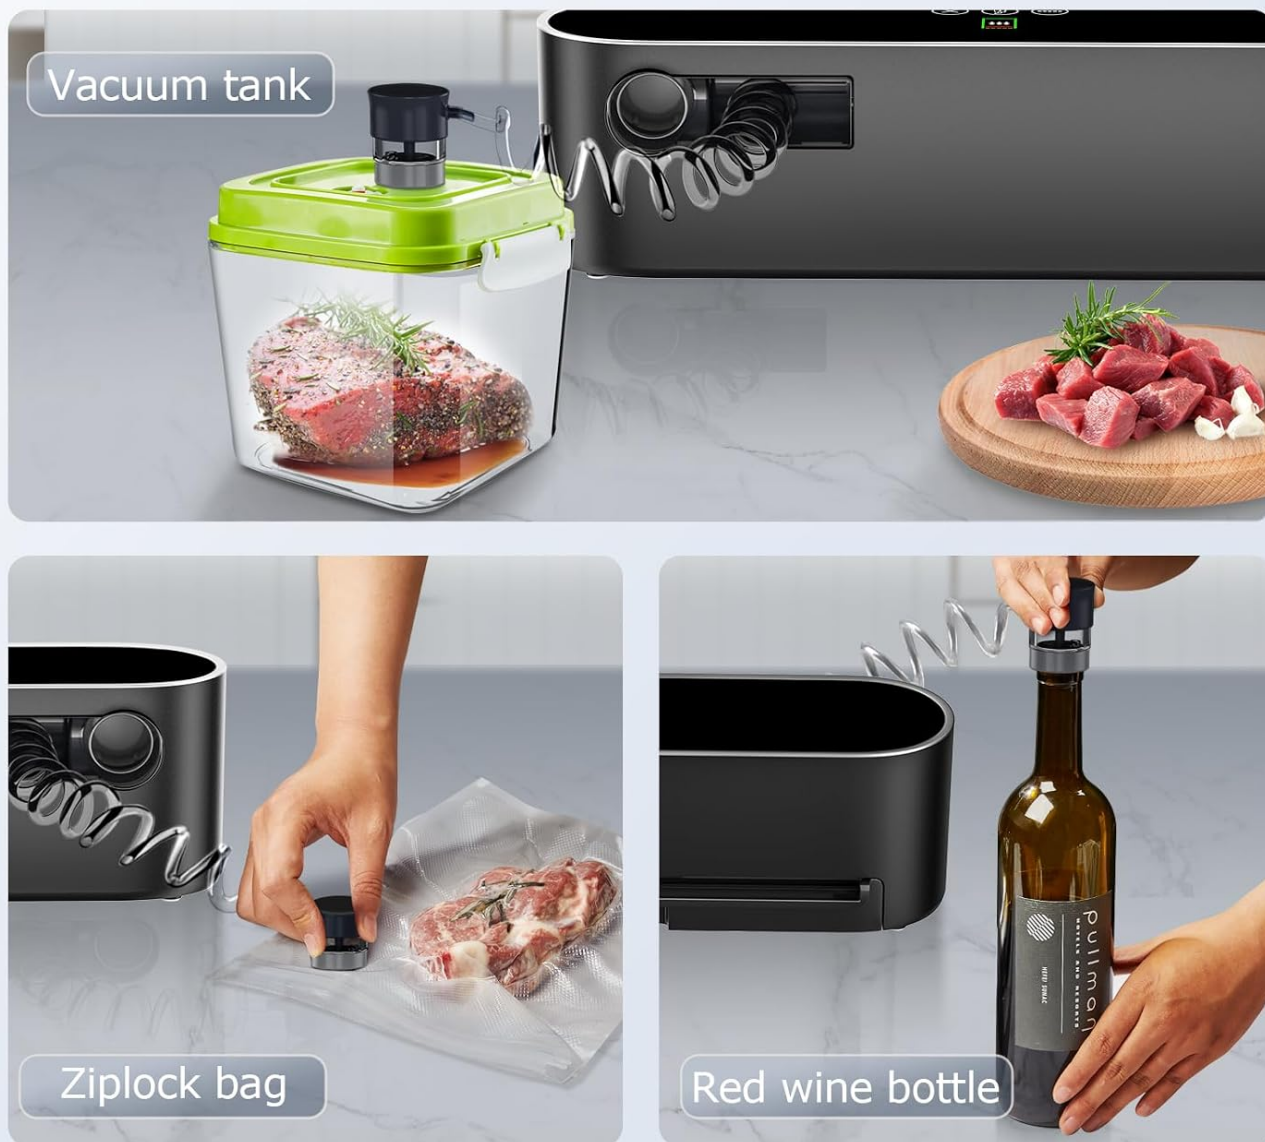 


Image: The Fresko V8 Pro's external vacuum system in use, showing connections to a vacuum tank and a red wine bottle for extended freshness.

## 4. Smart Liquid Reminder

The intelligent liquid detection system alerts you if excess liquid accumulates in the vacuum chamber.

- If excess liquid is detected, the indicator light will flash and a buzzing sound will alert you.
- Immediately clean the detachable magnetic vacuum chamber as described in the Maintenance section.

# Smart Liquid Reminder

Detachable Vacuum Chamber for Easy Cleaning



Image: The Fresko V8 Pro's smart liquid reminder feature, showing the detachable vacuum chamber being removed for cleaning after liquid detection.

## Compact and Lightweight

Compact size is convenient for storing or moving around.




Image: A person cleaning the detachable vacuum chamber of the Fresko V8 Pro under running water, highlighting its easy maintenance.

## 5. Auto Standby Mode

The machine will enter Sleep mode after 10 minutes of no operation. Touch the "Cancel" icon to wake it up.

## 6. Using Recommended Bags

For optimal vacuum sealing results, it is recommended to use FRESKO vacuum sealer bags with a round texture. Bags with no texture, rectangular texture, or double-sided texture may not provide the best seal.

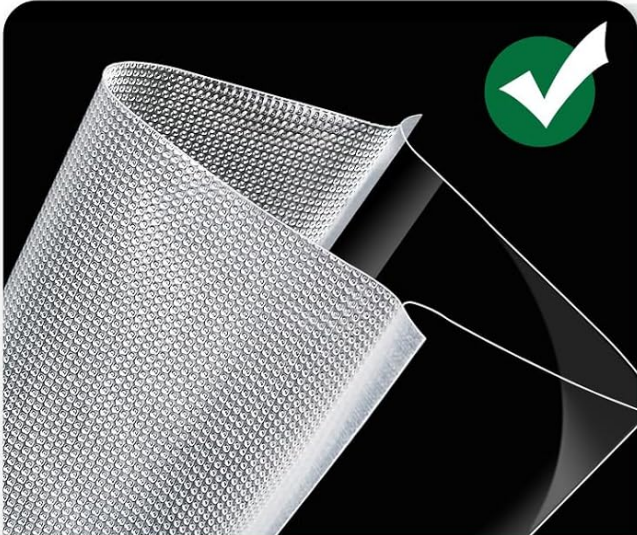

To achieve the best vacuum sealing effect, please use **FRESKO** vacuum sealer bags

**Round Texture**



No Texture



Rectangular Texture



Double Sided Texture

Image: Illustration showing the recommended round texture for Fresko vacuum sealer bags for best sealing results, contrasting with unsuitable bag textures.

## 7. Official Product Video

Watch this official video from the seller for a demonstration of the Fresko V8 Pro's features and operation.

Your browser does not support the video tag.

Video: A comprehensive overview of the FRESKO V8 Pro Fully Automatic Vacuum Sealer, demonstrating its ease of use and various functions.

## Cleaning the Detachable Vacuum Chamber

The detachable magnetic vacuum chamber should be cleaned regularly, especially after sealing moist foods or when the liquid reminder activates.

1. **Remove Chamber:** Gently pull the detachable chamber out from the front of the unit.
2. **Wash:** Wash the chamber with warm, soapy water.
3. **Rinse & Dry:** Rinse thoroughly and ensure it is completely dry before reinserting.
4. **Reinsert:** Slide the dry chamber back into its position until it clicks securely.

## General Cleaning

- Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners.
- Ensure the sealing strip and vacuum gasket are clean and free of food debris.

## TROUBLESHOOTING

| Problem                               | Possible Cause                                                                           | Solution                                                                                                                                                    |
|---------------------------------------|------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Machine does not turn on.             | No power supply.                                                                         | Ensure the power cord is securely plugged into a working outlet.                                                                                            |
| Bag is not vacuuming properly.        | Bag not inserted correctly; bag is damaged; vacuum gasket/sealing strip is dirty or wet. | Ensure the bag is flat and fully inserted into the vacuum chamber. Check the bag for holes or tears. Clean and dry the vacuum gasket and sealing strip.     |
| Bag is not sealing.                   | Sealing strip is dirty or wet; bag material is incompatible.                             | Clean and dry the sealing strip. Use only FRESKO recommended vacuum sealer bags.                                                                            |
| Liquid reminder activates frequently. | Excess liquid in the vacuum chamber.                                                     | Remove and clean the detachable vacuum chamber immediately. For very moist foods, pre-freeze or use a paper towel inside the bag to absorb excess moisture. |

## SPECIFICATIONS

| Feature            | Detail                    |
|--------------------|---------------------------|
| Brand              | FRESKO                    |
| Model Number       | V8 Pro                    |
| Color              | Black                     |
| Product Dimensions | 16.57"L x 4.45"W x 4.41"H |
| Operation Mode     | Automatic                 |
| Wattage            | 110 watts                 |
| Voltage            | 120 Volts                 |
| Item Weight        | 4.77 pounds               |

| Feature           | Detail |
|-------------------|--------|
| Country of Origin | China  |

## WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official FRESKO website. Keep your purchase receipt for warranty claims.