

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MOYLEAF](#) /

› [MOYLEAF Karaoke Machine User Manual](#)

MOYLEAF HHCC-A9

MOYLEAF HHCC-A9 Portable Karaoke Machine

User Instruction Manual

INTRODUCTION

Thank you for choosing the MOYLEAF HHCC-A9 Portable Karaoke Machine. This versatile system is designed to deliver unmatched sound quality and a fun, immersive karaoke experience for adults and kids alike. Featuring advanced high and low bass separation technology, colorful disco lights, and multiple connectivity options, it's perfect for personal gatherings, outdoor events, and more. This manual provides detailed instructions to help you set up, operate, and maintain your new karaoke machine.

WHAT'S IN THE Box

- 1x Karaoke Machine
- 2x Wireless Microphones
- 1x Charging Cable for Karaoke Machine
- 1x User Manual



Image: The MOYLEAF HHCC-A9 Karaoke Machine, two wireless microphones, and the charging cable, as included in the package.

SETUP

1. Charging the Karaoke Machine

Before first use, fully charge the karaoke machine using the provided charging cable. Connect the USB-C end of the cable to the DC 5V port on the machine and the USB-A end to a compatible power adapter (not included). The charging indicator light will show charging status.

SIMPLE OPERATION

Instructions for Pairing Keys and Interfaces



Image: Detailed view of the control panel, highlighting the DC 5V charging port.

2. Installing Microphone Batteries

Each wireless microphone requires 2 AA batteries (not included). Unscrew the bottom part of the microphone to insert the batteries, ensuring correct polarity. Screw the bottom back on securely.

3. Powering On and Bluetooth Pairing

1. Turn the main volume knob on the karaoke machine clockwise to the "ON" position. The LED display will light up,

and the speaker will announce "Bluetooth Mode".

2. Turn on the wireless microphones by pressing their power buttons. They will automatically pair with the karaoke machine.
3. On your smartphone, tablet, or other Bluetooth-enabled device, search for "HHCC-A9" in the Bluetooth settings and connect. The speaker will confirm "Bluetooth Connected".



Image: People using the karaoke machine, illustrating its Bluetooth 5.0 stable transmission range and compatibility with various devices.

4. TWS (True Wireless Stereo) Mode Setup

If you have two MOYLEAF HHCC-A9 karaoke machines, you can pair them for a stereo experience:

1. Ensure both machines are powered on and in Bluetooth mode, but not connected to any device.
2. On one machine, long-press the "M" (Mode/LED) button. It will announce "TWS Mode" and automatically search for the second machine.
3. Once connected, the main machine will announce "TWS Connected". You can now connect your Bluetooth device to the main machine, and audio will play through both speakers in stereo.

5. Other Connectivity Options

- **USB Disk:** Insert a USB flash drive into the USB port to play audio files directly.
- **Micro TF Card:** Insert a TF (MicroSD) card into the TF card slot to play audio files.
- **AUX Input:** Connect external audio devices (e.g., MP3 players, computers) using a 3.5mm AUX cable to the AUX port.
- **FM Radio:** Press the "M" (Mode/LED) button to switch to FM radio mode. Use the play/pause button to auto-scan for stations.

OPERATING INSTRUCTIONS

1. Basic Controls

- **Main Volume Knob:** Controls the overall volume of the speaker. Turn clockwise to increase, counter-clockwise to decrease. Also acts as the power ON/OFF switch.
- **Play/Pause Button:** Press to play or pause the current track.
- **Previous/Next Track Buttons:** Press to skip to the previous or next song.
- **Mode/LED Button ("M"):** Short press to switch between Bluetooth, USB, TF Card, AUX, and FM Radio modes. Long press to change the LED lighting effects.

2. Microphone Usage

- **MIC VOL Knob:** Adjusts the volume of the microphones.
- **MIC ECHO AUX Knob:** Controls the echo effect for the microphones. Turn clockwise for more echo, counter-clockwise for less.
- Ensure microphones are powered on and paired for optimal performance.

3. Colorful Lighting Modes

The speaker features six modes of colorful disco lights. Long-press the "M" (Mode/LED) button to cycle through different lighting effects, creating a dynamic party atmosphere.

COLORFUL LIGHTING DESIGN

Long press the LED button to change different lighting effects



Image: The karaoke machine showcasing its vibrant, customizable LED lighting effects.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the machine and microphones. Do not use abrasive cleaners or liquids.
- **Battery Care:** For optimal battery life, fully charge the machine before long periods of disuse. Remove batteries from microphones if not used for an extended period.

- Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

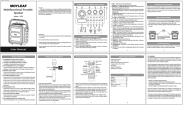
- No Sound:** Check the main volume knob and ensure it's turned up. Verify that your connected device's volume is also up.
- Microphone Not Working:** Ensure microphone batteries are correctly inserted and charged. Confirm the microphone is powered on and paired with the machine. Adjust the MIC VOL knob.
- Bluetooth Disconnection:** Ensure the device is within the 10-meter Bluetooth range. Disconnect and re-pair the device if issues persist.
- Distorted Sound:** Reduce the volume of the speaker or the connected device. Ensure the microphones are not too close to the speaker.

SPECIFICATIONS

Feature	Detail
Brand	MOYLEAF
Model Number	HHCC-A9
Item Weight	6.63 pounds
Product Dimensions	10.7 x 6.3 x 11 inches
Speaker Count	1 (6.5-inch full frequency speaker)
Power Source	Battery Powered (5500mAh high capacity battery)
Playtime	6-8 hours (on full charge)
Connectivity	Bluetooth 5.0, Micro TF cards, Flash USB, AUX (3.5mm Jack)
Microphones	2 Wireless Microphones (requires 2 AA batteries each)
Special Features	Portable, TWS Mode, Six Modes of Color Disco Lights, Recording Function

WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please refer to the official MOYLEAF customer service channels. A detailed User Manual (PDF) is available for download [here](#).

	<p><u>HHCC-A9 Wireless Karaoke System User Manual</u></p> <p>User manual for the HHCC-A9 Wireless Karaoke System, detailing product features, button functions, connectivity, charging, and safety precautions.</p>
	<p><u>MOYLEAF K253 Multifunctional Portable Speaker User Manual</u></p> <p>User manual for the MOYLEAF K253 Multifunctional Portable Speaker, detailing operation instructions, troubleshooting, Bluetooth and TWS connection, charging, product parameters, and FCC compliance.</p>
	<p><u>A9 Karaoke Microphone with Speaker User Manual</u></p> <p>User manual for the A9 Karaoke Microphone with Speaker, detailing its features, controls, technical specifications, troubleshooting, and safety precautions. Includes Bluetooth connectivity, voice changing, and speaker functions.</p>
	<p><u>Samsung Galaxy Tab A9 User Manual: Getting Started and Features</u></p> <p>Comprehensive user manual for the Samsung Galaxy Tab A9 (models SM-X110, SM-X115, SM-X117), covering device setup, features, apps, settings, and troubleshooting.</p>
	<p><u>Samsung Galaxy Tab A9+ User Manual</u></p> <p>Comprehensive user manual for the Samsung Galaxy Tab A9+ tablet, covering setup, features, settings, and troubleshooting. Learn about device layout, charging, SIM and microSD card insertion, and various software functionalities.</p>
	<p><u>MOYLEAF K500 Multifunctional Portable Speaker User Manual</u></p> <p>User manual for the MOYLEAF K500 Multifunctional Portable Speaker, detailing operation, features, troubleshooting, and specifications. Includes Bluetooth pairing, charging, and FCC compliance information.</p>

Documents - MOYLEAF – HHCC-A9



[HHCC-A9 Wireless Karaoke System User Manual](#)

User manual for the HHCC-A9 Wireless Karaoke System, detailing product features, button functions, connectivity, charging, and safety precautions.

lang: **score:36** filesize: 4.38 M page_count: 1 document date: 2023-06-10