

jutyum npq01

jutyum USB Rechargeable Electric Milk Frother User Manual

Model: npq01

INTRODUCTION

Thank you for choosing the jutyum USB Rechargeable Electric Milk Frother. This versatile device is designed to efficiently mix and froth various beverages, including milk for coffee, hot chocolates, matcha lattes, cappuccinos, and macchiatos. Its powerful motor and multiple speed settings ensure smooth and consistent results. Made with high-quality, food-grade stainless steel, it is durable and easy to clean. This manual provides detailed instructions for safe operation, maintenance, and troubleshooting to help you get the most out of your frother.

SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the frother away from children.
- Do not immerse the main body of the frother in water or other liquids. Only the whisk attachments are washable.
- Ensure the frother is fully charged before first use.
- Do not operate the frother with damaged attachments or if the device itself is damaged.
- Use only the provided USB charging cable.
- Avoid touching moving parts during operation.
- Do not use abrasive cleaners or scouring pads on any part of the frother.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 x jutyum Electric Milk Frother (Main Unit)
- 1 x Milk Frothing Whisk Head (Coil shape)
- 1 x Egg Beating Whisk Head (Balloon shape)
- 1 x USB Charging Cable



Image: Overview of the Jutyum Milk Frother and its included accessories, showing the main unit, two interchangeable whisk heads, and the USB charging cable, alongside a cup of coffee.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Jutyum Milk Frother:

Main Unit: The handheld body containing the motor and controls.

Charging Port: Located at the top of the main unit, for USB charging.

ON/OFF Button: Power button to turn the frother on and off, and cycle through speeds.

Speed Indicator Lights: Three LED lights indicating the current speed setting.

Charging Indicator Light: An LED light that indicates charging status.

Connection Port: Where the whisk heads attach to the main unit.

Whisk Heads: Interchangeable attachments for frothing and beating.

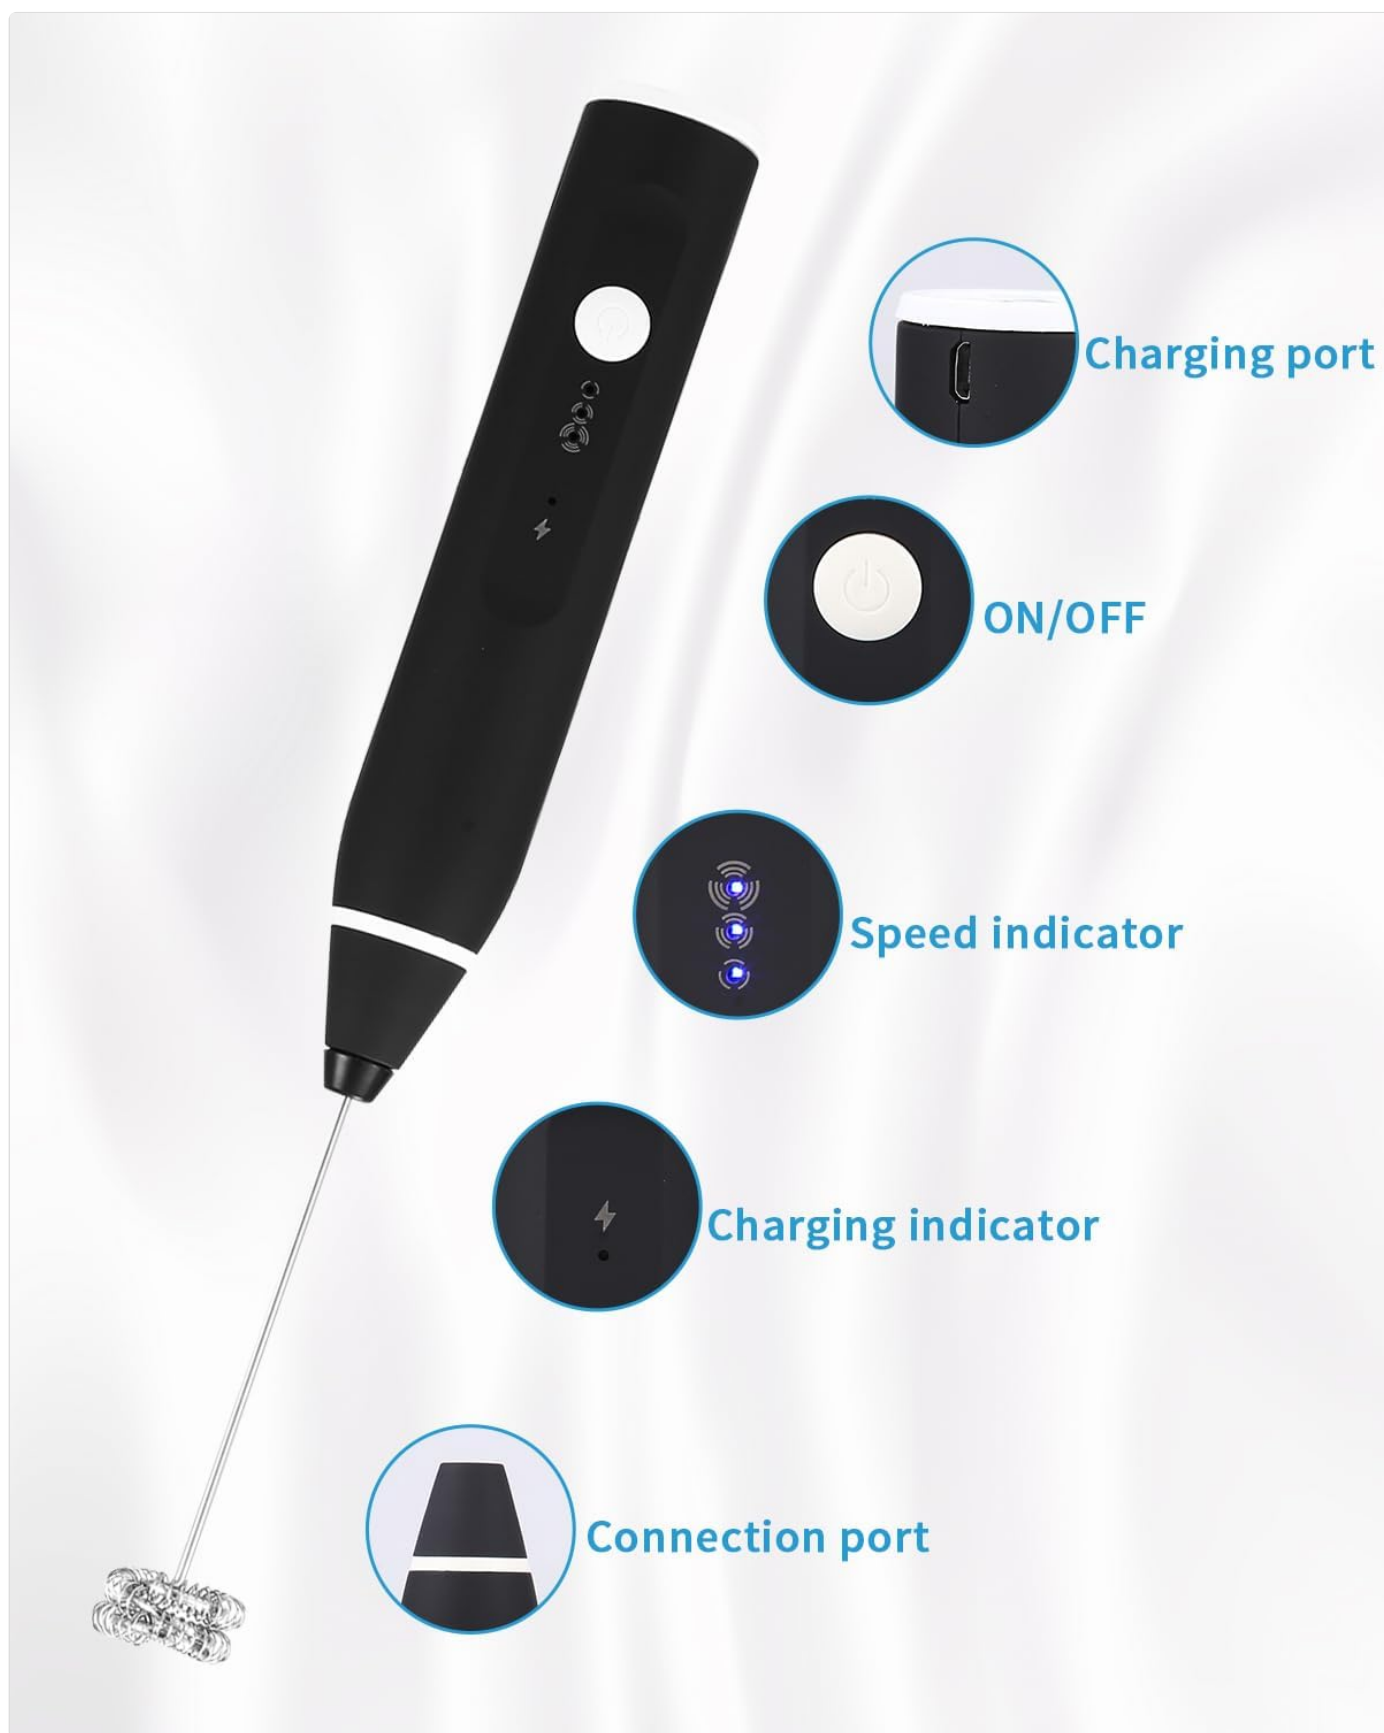 


Image: Detailed diagram highlighting the key components of the frother, including the charging port, ON/OFF button, speed indicator lights, charging indicator light, and the whisk connection port.

SETUP

Charging the Frother

1. Before first use, fully charge the frother.
2. Connect the USB charging cable to the charging port on the top of the main unit.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
4. The charging indicator light will illuminate during charging and turn off when fully charged.

Attaching Whisk Heads

1. Select the desired whisk head (milk frothing or egg beating).
2. Align the whisk head with the connection port on the main unit.
3. Gently push the whisk head into the port until it clicks securely into place.
4. To remove, pull the whisk head straight out from the connection port.

OPERATING INSTRUCTIONS

The Jutym Milk Frother features multiple speed settings for various mixing and frothing needs.

3-Speed Adjustment for Different Purposes



USB

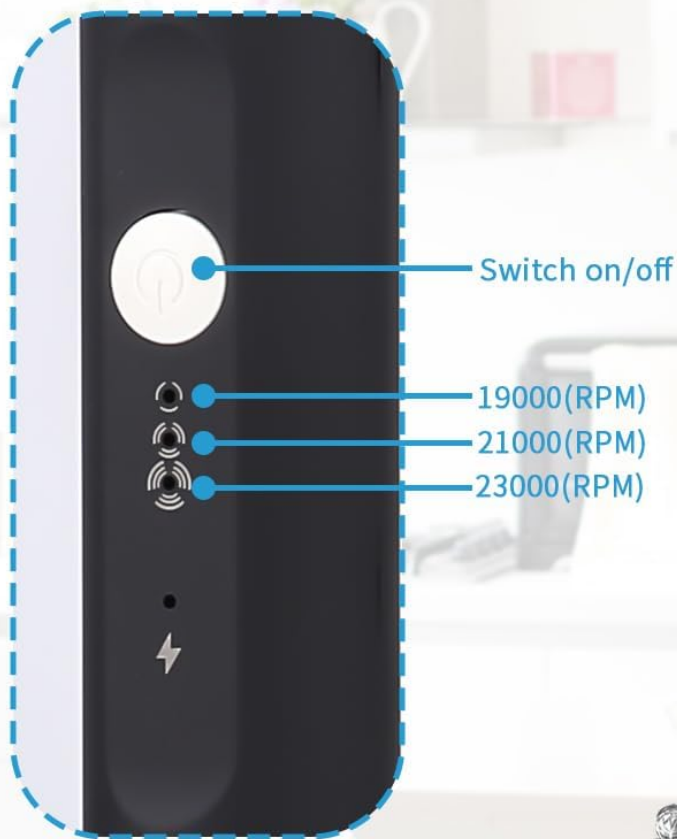 


Image: Visual representation of the frother's three-speed settings (19000 RPM, 21000 RPM, 23000 RPM) and the USB charging port.

Using the Frother

1. Ensure the desired whisk head is securely attached.
2. Insert the whisk head into the liquid you wish to froth or mix.
3. Press the ON/OFF button once to turn on the frother at the lowest speed (19000 RPM). One speed indicator light will illuminate.

4. Press the ON/OFF button again to cycle to the medium speed (21000 RPM). Two speed indicator lights will illuminate.
5. Press the ON/OFF button a third time to cycle to the highest speed (23000 RPM). All three speed indicator lights will illuminate.
6. Press the ON/OFF button a fourth time to turn off the frother.
7. For best frothing results, move the whisk head up and down gently in the liquid.

Applications

Suitable for many kinds of coffee

You can also make your favorite coffee at home



Hot Chocolates



Matcha Latte



Cappuccino

 


Macchiato



Image: Examples of various coffee and beverage types that can be prepared with the frother, including Hot Chocolates, Matcha Latte, Cappuccino, and Macchiato.

2 Replacement Heads

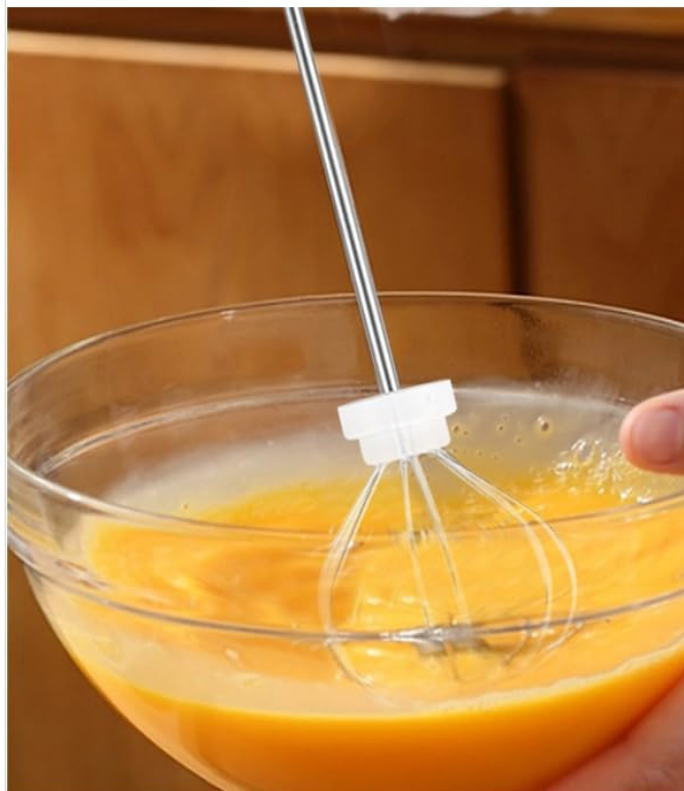

suitable for egg beating



Suitable for frothing milk

Image: Demonstration of the two interchangeable whisk heads; one is shown beating eggs in a bowl, and the other is frothing milk, highlighting their distinct uses.

- **Milk Frothing:** Use the coil whisk head for creating rich, creamy foam for lattes, cappuccinos, and hot chocolates.
- **Egg Beating:** Use the balloon whisk head for whisking eggs, mixing sauces, or light batters.
- **Mixing Beverages:** Ideal for mixing protein shakes, matcha, or other powdered drinks.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.



Easy to Clean

Each mixer is made of 304 stainless steel, just wash it with clean water

Image: The frother's whisk head being rinsed under running water, illustrating the ease of cleaning due to its stainless steel construction.

1. After each use, immediately remove the whisk head from the main unit.

- 2. Rinse the whisk head thoroughly under warm running water. You may use a mild dish soap if necessary.
- 3. For stubborn residue, soak the whisk head in warm soapy water for a few minutes before rinsing.
- 4. Wipe the main unit with a damp cloth. **Do not immerse the main unit in water.**
- 5. Dry all parts completely before storing.
- 6. Store the frother and its attachments in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Battery is low or depleted.	Charge the frother using the USB cable.
Whisk head is loose or falls off.	Whisk head not properly attached.	Ensure the whisk head is pushed firmly into the connection port until it clicks.
Frother is not frothing milk effectively.	Milk is too cold or too hot; insufficient milk quantity; wrong whisk head used.	Use cold milk (around 4-6°C) for best frothing. Ensure enough milk to cover the whisk. Use the coil whisk head for frothing.
Motor sounds weak.	Low battery; whisk head obstructed.	Recharge the frother. Check for any obstructions around the whisk head.

SPECIFICATIONS

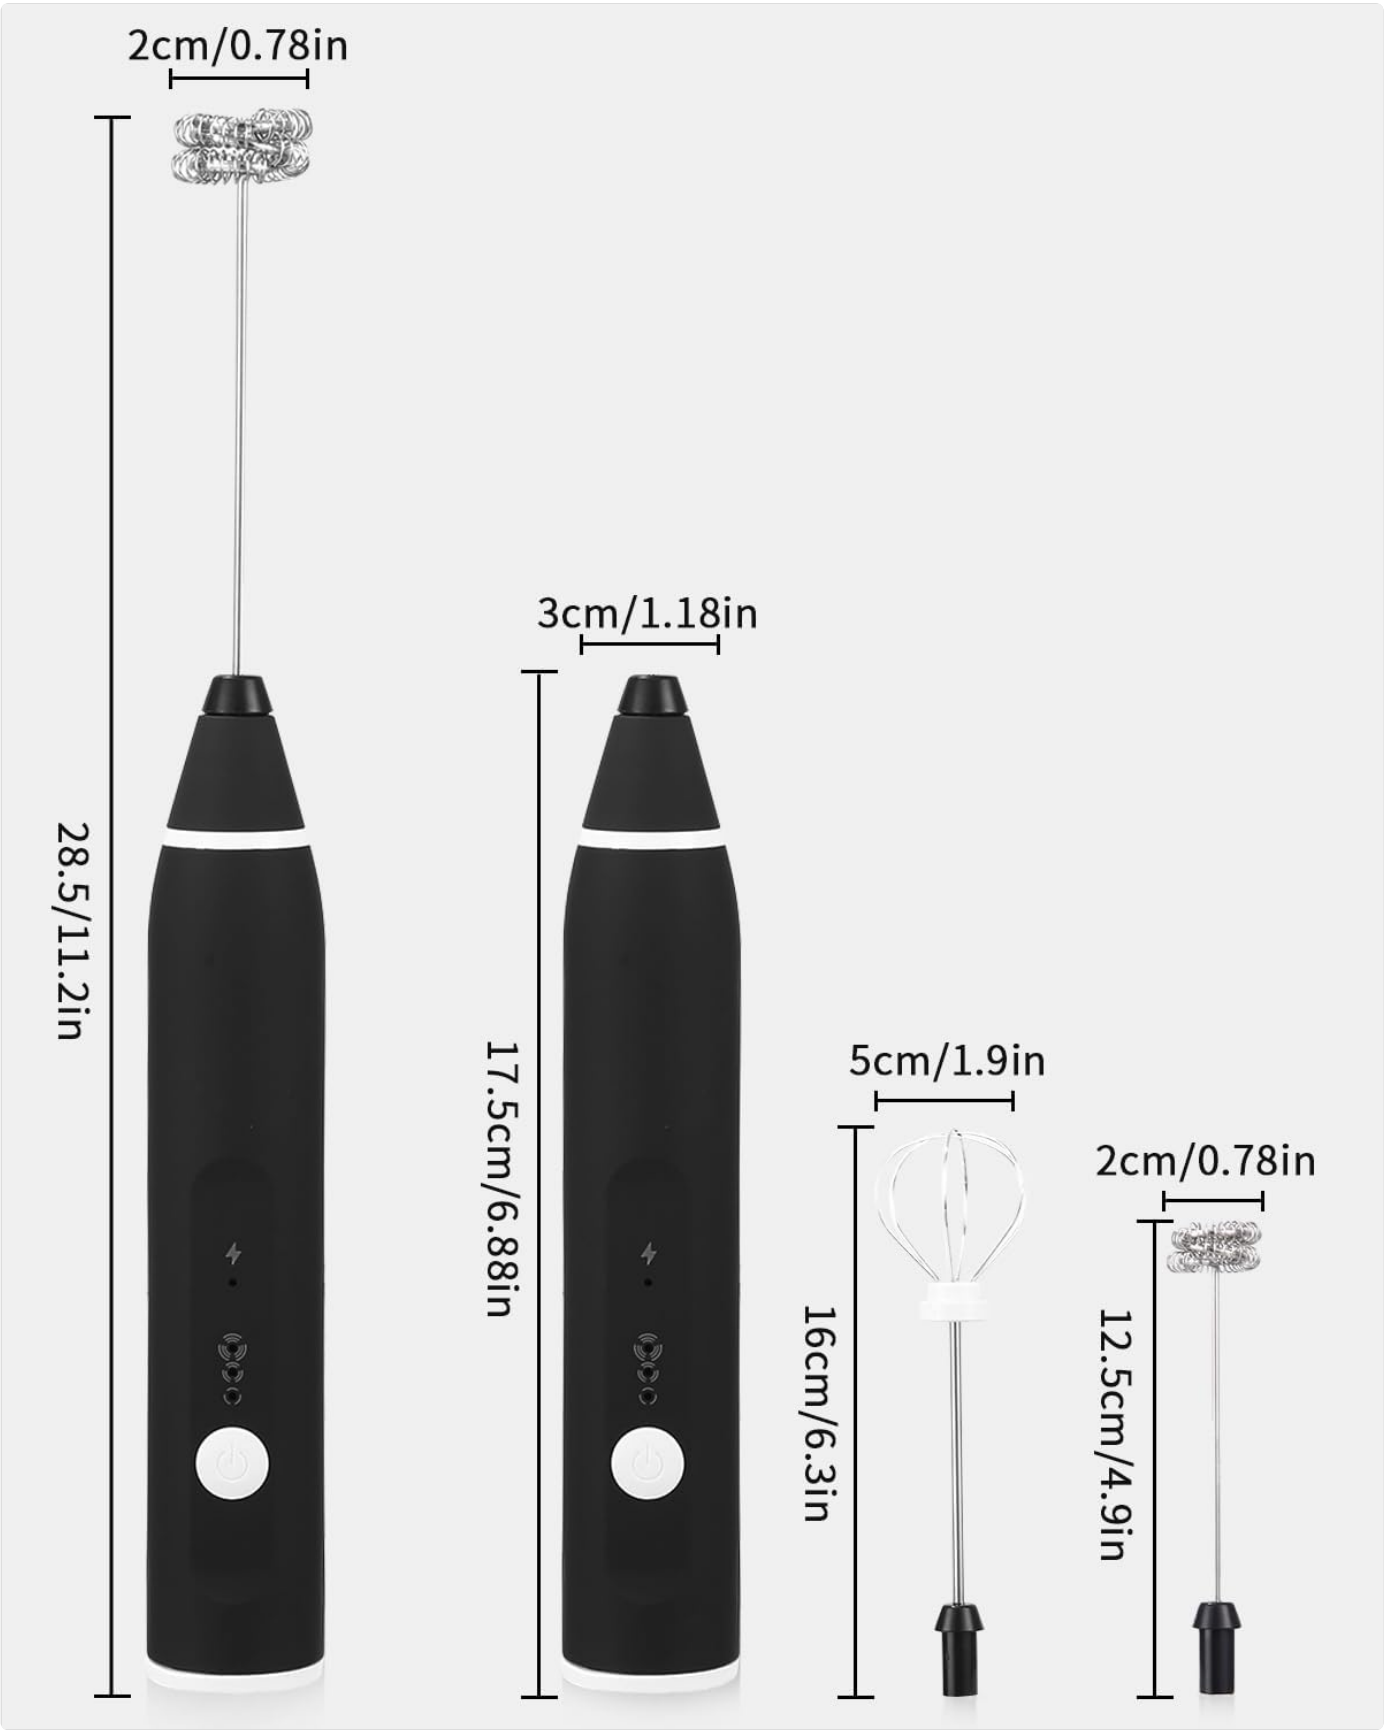 


Image: Technical drawing illustrating the precise dimensions of the frother's main body and both whisk attachments in centimeters and inches.

Feature	Detail
Brand	jutyum
Model Number	npq01

Feature	Detail
Color	Green/Red
Product Dimensions (L x W x H)	23 x 11 x 4.5 cm (9.06 x 4.33 x 1.77 inches)
Item Weight	190 grams (0.42 lbs)
Material	Plastic (main body), Stainless Steel (whisk heads)
Power Source	USB Rechargeable
Speed Settings	3 Speeds (19000 RPM, 21000 RPM, 23000 RPM)
Recommended Uses	Mixing, Beating, Milk Frothing
Care Instructions	Hand wash whisk heads after use; wipe main unit with damp cloth.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact jutyum customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official jutyum website or contact their support team via the contact information provided with your product.

© 2024 jutyum. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question