

[Manuals.plus](#) /

› [shernbao](#) /

› Shernbao Dog Dryer Hose Instruction Manual (Model D52M) - Compatible with DHD-2400F, SHD-2600P, DHD-3000F, PBD701H

shernbao D52M

Shernbao Dog Dryer Hose Instruction Manual

Model: D52M

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Shernbao D52M flexible hose, an accessory designed for Shernbao dog dryers. Please read this manual thoroughly before installation and operation to ensure safe and efficient use.

Compatible Shernbao Dryer Models: DHD-2400F, SHD-2600P, DHD-2400T, PBD-701H.

PRODUCT OVERVIEW

The Shernbao D52M is a durable, flexible hose designed to connect to compatible Shernbao dog dryers, extending the reach and flexibility during grooming. It features an expandable design, ranging from 1.2 meters to 2.4 meters.



Image: Shernbao D52M Flexible Dog Dryer Hose. This image shows the flexible hose in its extended state, highlighting its material and connection points.

SAFETY INSTRUCTIONS

WARNING: Always disconnect the dryer from the power source before attaching or detaching the hose, or performing any maintenance.

- Ensure the hose is securely attached to the dryer and nozzle before operation.
- Do not block the airflow through the hose or nozzle during use.
- Avoid kinking or sharply bending the hose, as this can restrict airflow and damage the hose.
- Keep the hose away from sharp objects and excessive heat sources.
- Inspect the hose for any signs of damage (cracks, tears, melting) before each use. Do not use a damaged hose.

SETUP

1. **Unpack:** Carefully remove the hose from its packaging. Inspect for any shipping damage.
2. **Prepare Dryer:** Ensure your Shernbao dog dryer is turned off and unplugged from the power outlet.
3. **Attach Hose to Dryer:** Locate the hose outlet on your compatible Shernbao dryer. Align the hose connector with the outlet and twist or push firmly until it is securely locked in place. Refer to your dryer's manual for specific attachment instructions if needed.
4. **Attach Nozzle (Optional):** If using a specific nozzle, attach it to the free end of the hose. Ensure it is also securely fastened.



Image: Shernbao D52M Flexible Dog Dryer Hose. This image illustrates the hose, which connects to the dryer unit. Ensure a secure connection for optimal performance.

OPERATING INSTRUCTIONS

Once the hose is securely attached to your Shernbao dog dryer, you can begin operation.

1. **Power On:** Plug in your Shernbao dog dryer and turn it on according to its specific operating instructions.

- 2. **Adjust Length:** The D52M hose is flexible and can extend from 1.2m to 2.4m. Gently pull the hose to achieve the desired length. Avoid overstretching.
- 3. **Direct Airflow:** Use the hose to direct the warm air from the dryer towards the pet. Maintain a safe distance to prevent overheating the animal's skin.
- 4. **Monitor Performance:** Ensure consistent airflow. If airflow is restricted, check for kinks in the hose or blockages in the nozzle.
- 5. **Power Off:** After use, turn off the dryer and unplug it from the power source.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Shernbao D52M hose.

- **Cleaning:** After each use, wipe the exterior of the hose with a damp cloth to remove any pet hair or debris. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the hose for any signs of wear, cracks, or damage. Pay close attention to the connection points.
- **Storage:** Store the hose in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid storing it in a tightly coiled or kinked position to prevent permanent deformation.
- **Replacement:** If the hose shows significant signs of wear or damage, replace it immediately with a genuine Shernbao replacement hose to ensure safety and compatibility.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced Airflow	Hose is kinked or blocked. Nozzle is clogged. Dryer filter is dirty.	Straighten the hose. Check and clear any blockages in the hose or nozzle. Clean the dryer's air filter (refer to dryer manual).
Hose Detaches During Use	Hose not securely attached. Connection point worn.	Ensure the hose is firmly twisted/pushed onto the dryer outlet until locked. If connection is worn, consider replacing the hose.
Hose Damage (Cracks/Tears)	Wear and tear. Improper handling or storage.	Discontinue use immediately. Replace the hose with a genuine Shernbao replacement.

SPECIFICATIONS

- **Model:** D52M
- **Brand:** Shernbao
- **Compatible Dryer Models:** DHD-2400F, SHD-2600P, DHD-2400T, PBD-701H
- **Hose Length (Flexible):** 1.2 meters (min) to 2.4 meters (max)
- **Product Dimensions (L x W x H):** 36 x 30 x 6 cm (packaged)
- **Product Weight:** 1.13 kilograms (packaged)
- **Manufacturer:** SHERNBAO

WARRANTY AND SUPPORT

For warranty information and customer support regarding your Shernbao D52M hose or compatible dryer, please refer to the documentation provided with your original Shernbao dryer unit or visit the official Shernbao website.

Official Shernbao Website: www.shernbao.com

When contacting support, please have your product model number (D52M) and the model number of your Shernbao dryer readily available.

© 2023 Shernbao. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question