

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› [VINABTY Replacement Remote Control User Manual for Philips Soundbar HTL1510B and HTL1520B Series](#)

VINABTY HTL1510B, HTL1520B

VINABTY Replacement Remote Control User Manual

For Philips Soundbar Models: HTL1510B/12, HTL1520B/37, HTL1510B/98, HTL1520B/12

1. PRODUCT OVERVIEW

This VINABTY replacement remote control is designed to operate various Philips Soundbar models. It provides essential functions for controlling your soundbar's audio settings, input sources, and playback. This remote is a direct replacement and does not require programming.





Image 1.1: Front view of the VINABTY replacement remote control. This image displays the layout of all buttons, including power, input selectors (COAX, OPTICAL, AUX, AUDIO IN, HDMI ARC, USB), playback controls (rewind, play/pause, fast forward), volume, bass, treble, mute, surround sound, DIM, and NIGHT mode.

2. COMPATIBLE MODELS

This remote control is compatible with the following Philips Soundbar models:

- HTL1510B
- HTL1510B/37
- HTL1510B/12
- HTL1520B/98
- HTL1520B/12
- HTL1520B/37

3. PACKAGE CONTENTS

The package includes:

- 1 x VINABTY Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

To install batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two AAA (UM-4) 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 4.1: Back view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

4.2 Initial Use

This replacement remote control is designed to function immediately after battery installation. No programming or pairing is required. Simply point the remote at your Philips Soundbar and begin operation.

5. OPERATING INSTRUCTIONS

The remote control features an infrared signal for communication with your soundbar. Ensure a clear line of sight between the remote and the soundbar's IR receiver for optimal performance. The effective range is approximately 10 meters (33 feet).

5.1 Button Functions

- **Power ()**: Turns the soundbar on or off.
- **COAX, OPTICAL, AUX, AUDIO IN, HDMI ARC, USB**: Selects the corresponding audio input source.
- **Bluetooth (📶)**: Activates Bluetooth pairing mode or switches to Bluetooth input.
- **Playback Controls (, ,)**: Rewind, Play/Pause, Fast Forward for media playback (e.g., via USB or Bluetooth).
- **Volume (+/-)**: Increases or decreases the master volume.
- **Mute ()**: Mutes or unmutes the sound.
- **BASS (+/-)**: Adjusts the bass level.
- **TREBLE (+/-)**: Adjusts the treble level.
- **SOUND**: Cycles through preset sound modes (e.g., Movie, Music, News).
- **SURROUND ON/OFF**: Toggles surround sound effect.
- **DIM**: Adjusts the brightness of the soundbar's display.
- **NIGHT**: Activates Night Mode for reduced dynamic range.
- **AUDIO SYNC (+/-)**: Adjusts audio delay for synchronization with video.

6. MAINTENANCE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new alkaline batteries.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

7. TROUBLESHOOTING

If you experience issues with your VINABTY replacement remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed (check polarity).
 - Verify there are no obstructions between the remote and the soundbar's infrared receiver.
 - Confirm the remote is pointed directly at the soundbar.
 - Check if the soundbar itself is powered on and functioning.
- **Limited range or intermittent response:**

- Replace batteries with new ones.
 - Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.
- **Remote does not control all functions:**
 - While this remote is designed for broad compatibility, some specific advanced functions of your original soundbar remote might not be replicated. Refer to your soundbar's original manual for any unique features.
 - Double-check that your soundbar model is listed in the compatible models section (Section 2).

8. SPECIFICATIONS

Feature	Description
Brand	VINABTY
Connectivity Technology	Infrared (IR)
Special Features	No programming required, Ergonomic design
Compatible Devices	Philips Soundbar (Home Cinema)
Maximum Range	10 meters (33 feet)
Battery Type	2 x AAA (Alkaline)
Number of Buttons	26

9. WARRANTY AND SUPPORT

For any questions or issues regarding your VINABTY replacement remote control, please contact the seller or retailer from whom you purchased the product. They can provide assistance with troubleshooting or warranty claims according to their policies.