

## Goplus SU-4031GN-TG

# Goplus Rolling Garden Seat Instruction Manual

Model: SU-4031GN-TG | Brand: Goplus

### 1. INTRODUCTION

Thank you for choosing the Goplus Rolling Garden Seat. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new garden cart. Please read all instructions carefully before use and retain this manual for future reference. This rolling garden seat is designed to provide comfort and convenience for various outdoor tasks, featuring an adjustable swivel seat, robust wheels, and integrated storage options.



Image: The Goplus Rolling Garden Seat in use, demonstrating its comfort and utility for gardening tasks.

## 2. SAFETY INFORMATION

- Always ensure all bolts and nuts are securely tightened before each use.
- Do not exceed the maximum weight capacity of 330 lbs (150 kg).
- Use on relatively level ground. Avoid steep slopes or uneven terrain that could cause tipping.
- Keep hands and feet clear of moving parts, especially wheels and steering mechanisms.
- Store the garden seat in a dry, protected area when not in use to prevent rust and damage.

## 3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Frame (1)
- Seat (1)
- Front Axle (2)
- Rear Axle (1)
- Wheels (4)
- Poly Tray (1)
- Handle Support (1)
- Steering Link Connector (1)
- Long "T" Handle (1)
- Short "T" Handle (1)
- Soft Cushion (1)
- Tool Bag (1)
- Small Plates (2)
- Axle Sleeves (2)
- Assorted Bolts, Washers, Nuts, and Cotter Pins
- Basket (1)

## 4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Goplus Rolling Garden Seat. Refer to the assembly video for visual guidance.

Your browser does not support the video tag.

Video: Goplus Garden Cart Assembly Video. This video provides a step-by-step visual guide for assembling the garden seat.

### 1. Step 1: Attach Front Axles

Secure the two front axles to the main frame using the provided bolts, washers, and nuts. Ensure they are tightened with a wrench for stability. Insert cotter pins to secure the assembly.

### 2. Step 2: Install Rear Axle and Steering Link

Attach the handle support and steering link connector to the rear of the frame. Connect the rear axle to these components using the specified hardware.

### 3. Step 3: Mount Poly Tray

Position the poly tray underneath the frame and secure it using the small plates and bolts.

### 4. Step 4: Attach Wheels

Slide the axle sleeves onto the axles, then place the wheels. Secure each wheel with washers and cotter pins. Ensure wheels spin freely.

### 5. Step 5: Install Seat

Place the seat onto the central swivel post and secure it with the appropriate bolts and washers. Tighten with a screwdriver and wrench.

### 6. Step 6: Attach Basket

Hook the storage basket onto the side of the frame.

### 7. Step 7: Choose and Install Handle

Select either the long or short "T" handle and insert it into the designated slot at the rear of the cart.

#### 8. Step 8: Add Cushions and Tool Bag

Place the soft cushion onto the seat. Attach the tool bag to the backrest using its hook and loop fasteners.

## 5. OPERATING INSTRUCTIONS

### 5.1. Adjustable Seat Height and Swivel

## Adjustable Height & 360° Rotation

Makes your gardening job much easier



Image: The adjustable height and 360-degree swivel seat, allowing for comfortable positioning during gardening. The seat height can be adjusted from 16.5 inches to 20.5 inches to suit your preference and task. To adjust, loosen the locking mechanism under the seat, set to the desired height, and re-tighten securely. The 360-degree swivel feature allows you to rotate freely without repositioning the entire cart, reducing strain during work.

### 5.2. Steering Handles



## Available in 2 Steering Handles

Choose the right one as needed to pull the cart easily



Image: The two available steering handles, offering flexibility for pulling the cart.

Your garden seat comes with two steering handles: a long one and a short one. Choose the handle that best suits your comfort and the specific task. The handles allow you to pull and maneuver the cart easily around your garden or patio.

### 5.3. Storage Options



Sowing




Trimming



Harvesting

# Adequate Storage Space

Keep your gardening tools neatly organized

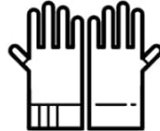

Storage Basket



Storage Tray



Storage Pockets

Image: Various storage compartments including a basket, tray, and pockets to keep gardening tools organized.

The garden seat includes a storage basket, a poly tray located under the seat, and a tool bag with multiple pockets. These features are designed to keep your gardening tools, gloves, and other essentials organized and within easy reach while you work.

## 5.4. Terrain Adaptability





Image: The durable rubber wheels designed for stability and smooth movement across different outdoor surfaces. Equipped with thickened rubber wheels, the garden seat is designed to adapt to various outdoor terrains, including grassland, cobblestone paths, and mud roads. This ensures smooth movement and stability during your gardening activities.

## 6. MAINTENANCE

- **Cleaning:** Wipe down the metal frame and poly tray with a damp cloth after each use to remove dirt and debris. The seat and backrest cushions are machine washable for easy cleaning.
- **Lubrication:** Periodically apply a small amount of lubricant to the wheel axles and seat swivel mechanism to ensure smooth operation.
- **Fasteners:** Regularly check all bolts, nuts, and cotter pins to ensure they are tight and secure. Re-tighten as necessary.
- **Tire Pressure:** Maintain appropriate air pressure in the rubber tires for optimal performance and longevity.
- **Storage:** Store the garden seat in a dry, covered area to protect it from extreme weather conditions, which can prolong its lifespan.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheels do not roll smoothly.	Low tire pressure, debris in axles, lack of lubrication.	Check and inflate tires to recommended pressure. Clean any debris from axles. Apply lubricant to moving parts.
Seat feels unstable or wobbly.	Loose fasteners, incorrect assembly.	Ensure all bolts and nuts securing the seat and frame are tightened. Review assembly steps for correctness.
Difficulty steering the cart.	Steering link obstruction, loose connections.	Check for any obstructions around the steering link. Verify that the steering link connector is securely attached.
Rust appearing on metal parts.	Exposure to moisture, improper storage.	Clean affected areas and apply rust-inhibiting paint if necessary. Store in a dry, covered location.

## 8. SPECIFICATIONS





Image: Diagram illustrating the key dimensions and weight capacity of the garden seat.

Feature	Detail
Product Dimensions	35.5"D x 23"W x 41"H
Brand	Goplus
Material	Metal, Rubber
Color	Green
Special Features	Adjustable Height Seat, 360° Swivel Seat, Ample Tool Storage
Number of Shelves	1 (Poly Tray)
Recommended Uses	Outdoor, Gardening, Lawn Care
Handle Material	Metal

Feature	Detail
Item Weight	34 Pounds
Number of Wheels	4
Weight Limit	330 Pounds
Assembly Required	Yes
Caster Type	Swivel
Frame Material	Metal
Item Model Number	SU-4031GN-TG

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official Goplus website. Keep your purchase receipt as proof of purchase for any warranty claims.