

[Manuals.plus](#) /

› [SQQBZZ](#) /

› Portable DVD Player Instruction Manual

SQQBZZ PD-9806

Portable DVD Player Instruction Manual

SQQBZZ PD-9806

1. PRODUCT OVERVIEW

The SQQBZZ PD-9806 is an 11.5-inch portable DVD player featuring a 9.5-inch swivel screen, designed for versatile entertainment on the go. It includes a 5-hour rechargeable battery and supports various media formats, making it ideal for home or car use.



Figure 1.1: The SQQBZZ PD-9806 Portable DVD Player and its remote control.

2. PACKAGE CONTENTS


Please verify that all items listed below are included in your package:

- Portable DVD Player
- AC Adapter
- Remote Control
- AV Cable
- Car Adapter
- User Manual (this document)

Portable DVD Player



User Manual

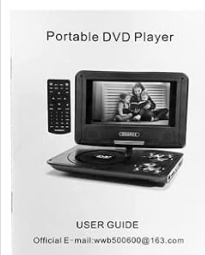

Remote Control



Car Charger



Power Adapter

RCA AV cable

Figure 2.1: All items included in the product package.

3. KEY FEATURES

- **Versatile Charging:** Supports 5-hours of video playback on its rechargeable battery. Includes both an AC charger (1.8m) for home use and a car charger for on-the-go convenience, allowing use while charging.
- **Broad Multimedia Support:** Directly plays CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD. It is region-free. *Note: Does not support Blu-ray DVD, 1080P, or 4K discs.*
- **Optimal Visual Experience:** Features a 9.5-inch eye-protection screen with 270° rotation and 180° flip, offering a resolution of 800x480. Its compact design is suitable for travel and fits perfectly on car seats.
- **Enhanced Audio:** Integrated dual stereo speakers provide louder and clearer sound. A 3.5mm earphone jack is located on the right side for private listening.
- **User-Friendly Design:** Simple operating system and large volume controls make it easy to use for all ages.
- **Last Memory Function:** The player can resume playback from where it was last stopped.



Figure 3.1: Illustrations of dual speakers, USB/SD card support, and the last memory function.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the portable DVD player using either the provided AC adapter or car charger. The player supports charging while in use.

4.2 Powering On/Off

To turn the player ON or OFF, locate and press the ON/OFF switch on the right side of the unit.



Figure 4.1: Side view illustrating the power switch and various input/output ports.

4.3 Screen Adjustment

The 9.5-inch screen can be swiveled up to 270° and flipped 180° for optimal viewing angles. Gently adjust the screen to your desired position.

Easily Swivel Screen



Figure 4.2: Demonstrates the screen's swivel and flip capabilities, along with overall dimensions.

5. OPERATING INSTRUCTIONS

5.1 Playing Discs

1. Open the disc tray gently.
2. Place your CD or DVD onto the spindle, label side up.
3. Close the disc tray. The player will automatically begin playback.
4. Use the remote control or the buttons on the player to control playback (Play, Pause, Stop, Skip, Volume).

5.2 Using SD Card/USB

Insert a compatible SD card or USB drive into the respective slot. The player supports video files up to 720x480 resolution and image files up to 2650x1440 resolution. Navigate through your media using the player's controls or remote.

5.3 Connecting to a Larger TV

To enjoy content on a larger screen, connect the portable DVD player to your TV using the provided RCA AV cable. Ensure the AV cable is connected to the correct input/output ports on both devices (yellow for video, red/white for audio).



Figure 5.1: The portable DVD player connected to a television for synchronized playback.

5.4 Audio Options

The player features dual built-in speakers. For private listening, connect headphones to the 3.5mm earphone jack on the right side of the unit.

6. MAINTENANCE

- Keep the player clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- Handle discs carefully to prevent scratches. Clean discs with a soft, lint-free cloth from the center outwards.
- Do not attempt to disassemble or repair the unit yourself. Refer to the troubleshooting section or contact customer support for assistance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is drained or power adapter is not connected properly.	Connect the AC adapter or car charger and ensure it is plugged in securely. Allow the battery to charge.
No disc detected.	Disc is dirty, scratched, or incompatible format (e.g., Blu-ray).	Clean the disc. Ensure it is a supported format (CD, DVD, VCD, SVCD). Try another disc.
No sound.	Volume is too low or muted. Headphones are connected.	Increase the volume. Check if headphones are plugged in and unplug them if you want sound from speakers.
Poor picture quality.	Disc is dirty/scratched, or video file resolution is too high.	Clean the disc. Ensure video files are 720x480 resolution or lower.
Remote control not working.	Batteries are dead or remote is not pointed correctly.	Replace the remote control batteries. Ensure there are no obstructions between the remote and the player's IR sensor.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	SQQBZZ
Model Number	PD-9806
Screen Size	9.5 Inches (diagonal)
Display Type	LCD
Supported Media Types	DVD, DVD-R/+R, DVD-RW/DVD+RW, SVCD, VCD, CD, CD-R/+R, CD-RW/+RW, MP3/WMA/WAV, JPEG
Battery Type	1 Lithium Polymer battery (included)
Battery Life	Up to 5 hours of video playback
Color	Black
Item Weight	3.21 pounds
Package Dimensions	15.51 x 9.84 x 3.23 inches

9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For detailed warranty information, please refer to the

warranty card included in your package or visit the official SQQBZZ website. For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact SQQBZZ customer service.

Contact information can typically be found on the product packaging or the brand's official website.