

[manuals.plus](#) /

- › [Chipolo](#) /
- › [Chipolo Card Point Bluetooth Wallet Finder User Manual](#)

## Chipolo POINT

# Chipolo Card Point Bluetooth Wallet Finder User Manual

Brand: Chipolo | Model: POINT

[Introduction](#)[Setup](#)[Operating](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

## 1. INTRODUCTION

The Chipolo Card Point is a slim Bluetooth tracker designed to help you locate your personal items. It integrates seamlessly with Google's Find My Device app on Android devices (Android 9 or later with Google Play Services required), allowing you to find misplaced wallets, passports, luggage, and other valuables.

This device offers features such as playing a loud sound, locating items on a map, and pinpointing nearby locations using a distance meter. Its thin, water-resistant design ensures durability and convenience for everyday use.

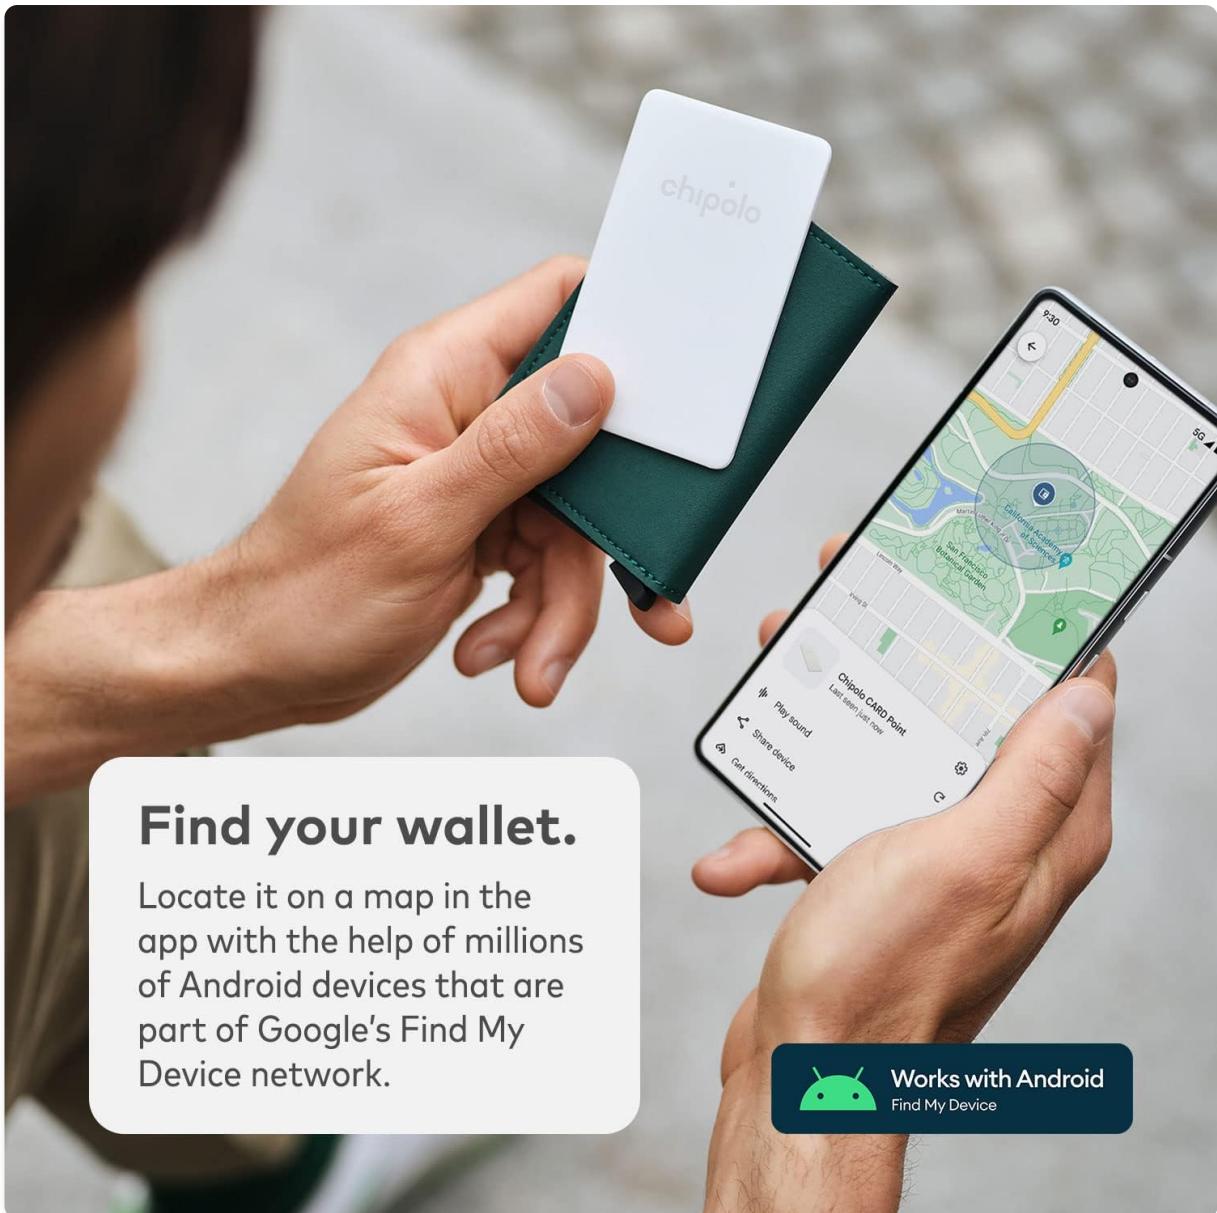


Image: The Chipolo Card Point, an off-white, rectangular Bluetooth tracker, designed to fit discreetly into wallets or passport holders.

## 2. SETUP

### 2.1 Pairing with Google's Find My Device App

1. Ensure your Android device is running Android 9 or later and has Google Play Services installed.
2. Open the Google Find My Device app on your Android smartphone.
3. The app will guide you through the Fast Pair process to connect your Chipolo Card Point. Follow the on-screen instructions to complete the pairing.
4. Once paired, your Chipolo Card Point will appear in the app, ready for use.



## Find your wallet.

Locate it on a map in the app with the help of millions of Android devices that are part of Google's Find My Device network.



Image: A hand holding the Chipolo Card Point next to a smartphone, illustrating the device's integration with Google's Find My Device map interface.

## 2.2 Setup Video Guide

Your browser does not support the video tag.

Video: An official Chipolo video demonstrating the setup process and functionality of the Chipolo Card Point with Google's Find My Device app.

## 3. OPERATING THE CHIPOLO CARD POINT

### 3.1 Finding a Misplaced Item

- Play a Sound:** Open the Google Find My Device app, select your Chipolo Card Point, and tap 'Play sound'. The device will ring with a 105dB melody to help you locate it.
- Pinpoint Location with Distance Meter:** If you are within Bluetooth range but cannot hear the sound, use the animated distance meter feature in the app to guide you to the exact location of your Chipolo Card Point.
- Check Location on a Map:** If your Chipolo Card Point is out of Bluetooth range, the app will display its last known location on a map. The Google Find My Device network, composed of millions of Android devices, helps update its location anonymously.

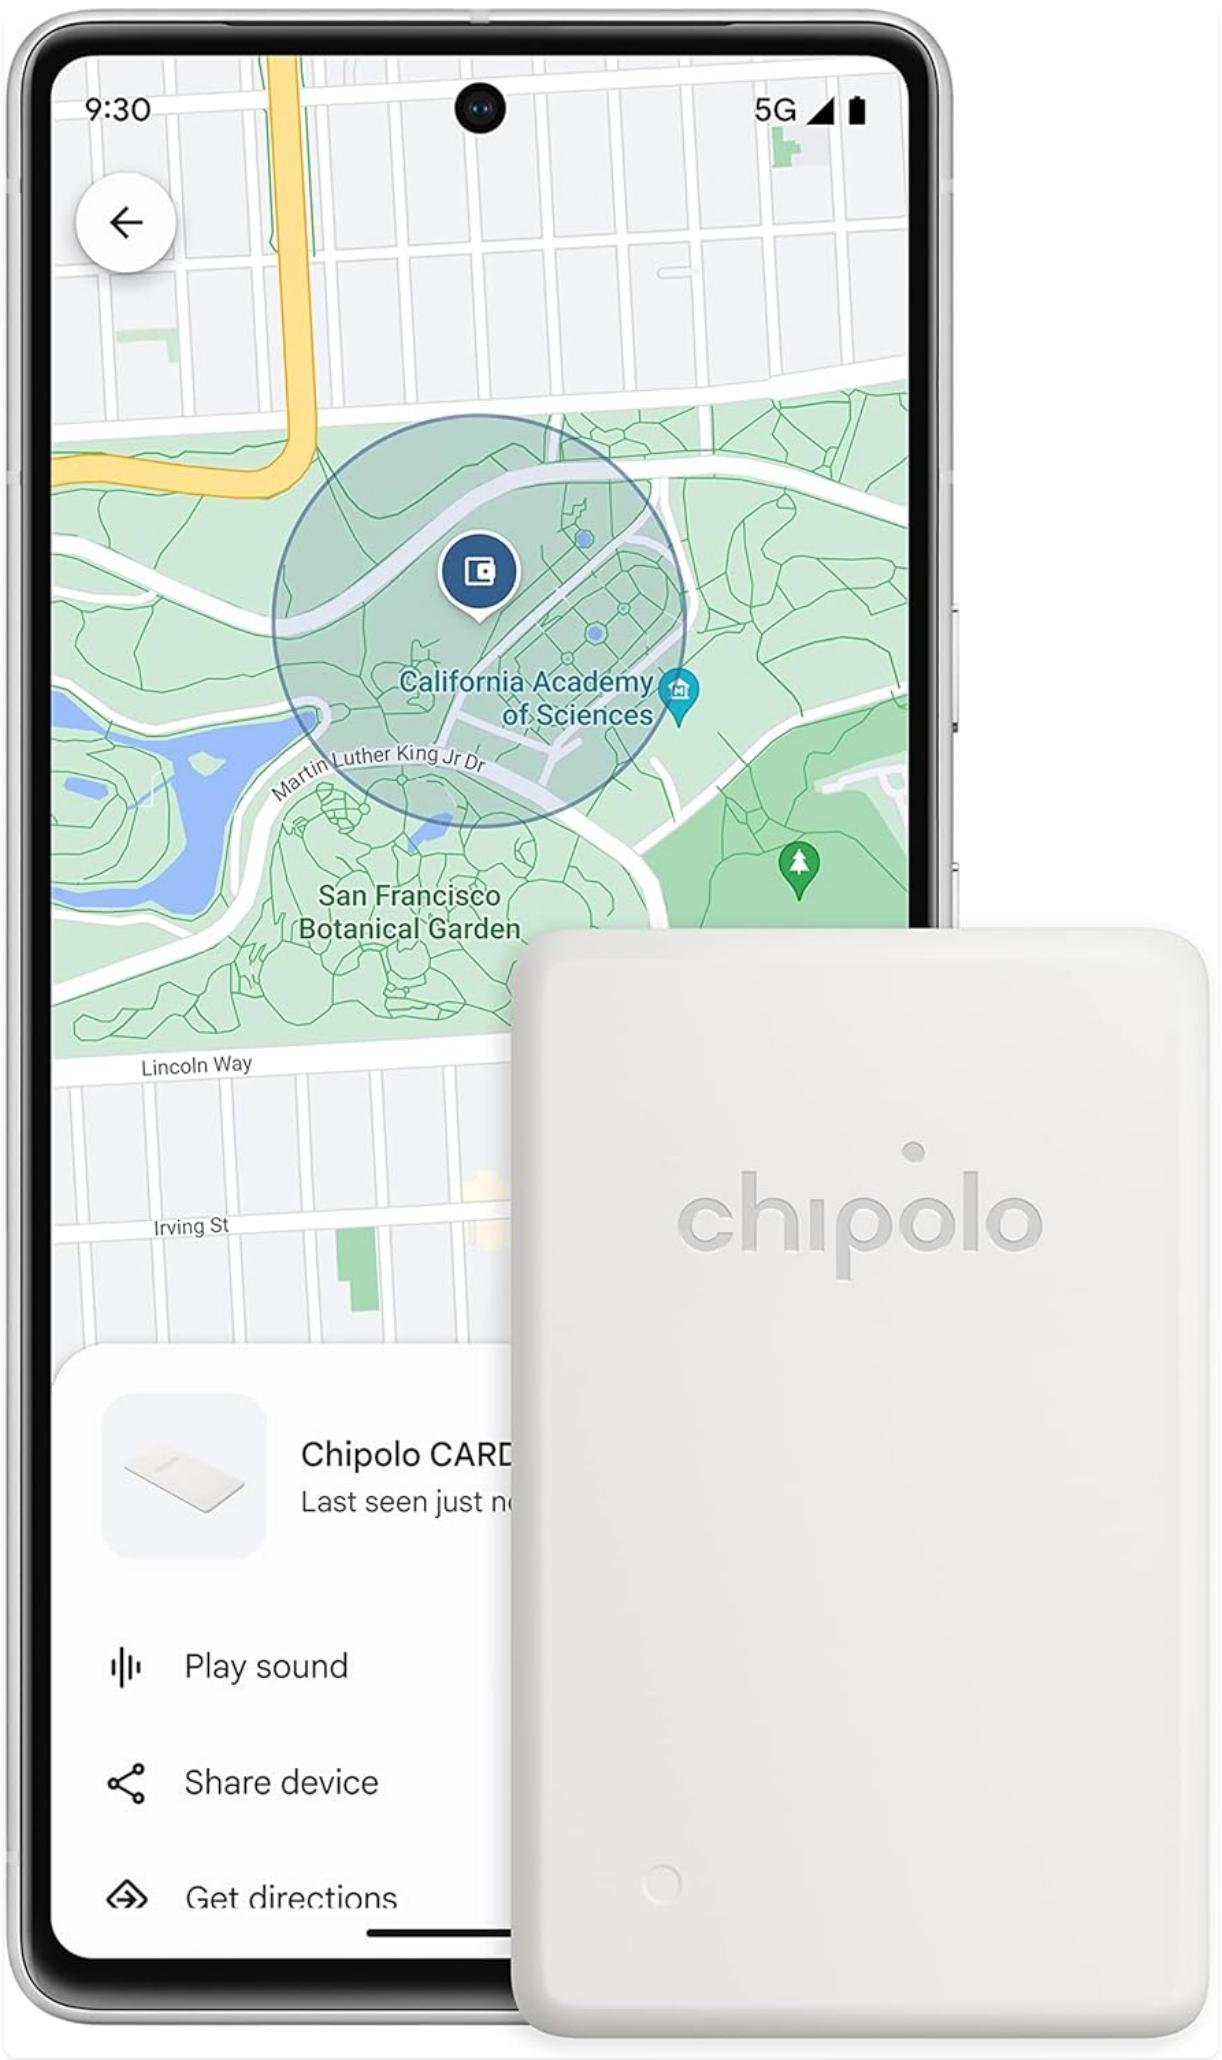


Image: A smartphone screen showing the Google Find My Device app with a map and options to interact with the Chipolo Card Point, positioned beside the actual device.

### 3.2 Marking an Item as Lost

If your item is lost, you can mark it as lost in the Google Find My Device app. This allows you to display a message or your contact information to any Android user who finds your Chipolo Card Point, facilitating its return.

Your browser does not support the video tag.

Video: An official Chipolo video demonstrating how the Chipolo Card Point works with Google's Find My Device app to locate items.

## 4. MAINTENANCE

### 4.1 Battery Life

The Chipolo Card Point features a long-lasting battery that can last up to 2 years. The device is designed for convenience, eliminating the need for frequent battery replacements.

### 4.2 Water Resistance

The Chipolo Card Point is water-resistant with an IPX5 rating. This means it can withstand splashes and light rain, ensuring it remains functional and connected even in adverse weather conditions. It is not designed for submersion in water.



Image: The Chipolo Card Point is shown tucked into a passport holder, highlighting its slim profile and suitability for travel documents.

## 5. TROUBLESHOOTING

- **Device not connecting:** Ensure Bluetooth is enabled on your Android device and that the Chipolo Card Point is within range. Restarting both the device and the app may resolve connection issues.
- **Sound not loud enough:** The Chipolo Card Point emits a 105dB sound. If it's muffled, try to move closer or use the distance meter feature in the app to pinpoint its location.
- **Inaccurate location on map:** Location accuracy depends on the density of the Google Find My Device network. In areas with fewer Android devices, the last known location might be less precise.
- **Battery life concerns:** The battery is designed to last up to 2 years. If you experience significantly shorter battery life, contact customer support.

## 6. SPECIFICATIONS

Feature	Detail
Product Dimensions	4.33 x 0.39 x 4.33 inches
Item Weight	0.282 ounces

Connectivity Technology	Bluetooth
Battery	1 Lithium Metal battery (included)
Battery Life	Up to 2 years
Water Resistance	IPX5 rated
Compatibility	Android 9 or later with Google Play Services

## 7. WARRANTY & SUPPORT

The Chipolo Card Point comes with a standard manufacturer's warranty. For specific details regarding warranty coverage and duration, please refer to the product packaging or the official Chipolo website.

Chipolo also offers a Renew & Recycle program. After approximately 2 years, when the battery life is nearing its end, you may be eligible for a discount on a new Chipolo Card Point by participating in their recycling program. Check the official Chipolo website for more information on this program.

For further assistance, troubleshooting, or to provide feedback, please visit the [Chipolo Store on Amazon](#) or their official support channels.