

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Oreck](#) /

› [Oreck Commercial XL Vacuum Cleaner User Manual](#)

Oreck XL2100RHS

Oreck Commercial XL Vacuum Cleaner User Manual

Model: XL2100RHS | Brand: Oreck

INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Oreck Commercial XL Upright Vacuum Cleaner. Designed for powerful suction and durability, this lightweight vacuum is ideal for tackling tough messes on various floor types, including carpets and hard floors. Please read this manual thoroughly before initial use and retain it for future reference.



Figure 1: Oreck Commercial XL Upright Vacuum Cleaner. This image shows the full upright vacuum cleaner, highlighting its compact and functional design.

SAFETY INFORMATION

WARNING: Cancer and Birth Defect/Reproductive Harm --www.P65Warnings.ca.gov/product

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This includes, but is not limited to, unplugging the vacuum when not in use or before servicing, keeping hair, loose clothing, fingers, and all parts of body away from openings and moving parts,

and not using the vacuum on wet surfaces.

WHAT'S IN THE BOX

Upon unpacking your Oreck Commercial XL Vacuum Cleaner, ensure all components are present:

- Oreck Commercial XL Upright Vacuum Cleaner Unit
- Non-Marring Bumpers (pre-installed or to be attached)
- Disposable Inner Bag (one included, typically pre-installed)
- User Manual (this document)

SETUP

Follow these steps to prepare your vacuum cleaner for first use:

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Handle Assembly:** Insert the handle into the main body of the vacuum until it clicks securely into place. Ensure the handle is firmly attached to prevent detachment during operation.
3. **Bag Installation:** The vacuum typically comes with one disposable inner bag pre-installed. To check or replace, open the outer bag cover and ensure the bag is properly seated and sealed around the bag collar.
4. **Cord Management:** Unwind the power cord completely before use. Wrap the cord around the cord hooks on the handle for neat storage when not in use.



Figure 2: Front view of the Oreck Commercial XL, illustrating its upright design.



Figure 3: Illustrates the process of installing or checking the disposable inner bag. Ensure the bag is securely fitted for optimal performance.

OPERATING INSTRUCTIONS

Your Oreck Commercial XL is designed for efficient cleaning across various surfaces.

1. **Power On/Off:** Plug the power cord into a suitable electrical outlet. The power switch is conveniently located on the ergonomic handle for easy access.
2. **Automatic Height Adjustment:** The vacuum features automatic height adjustment, allowing it to seamlessly transition between different floor types (carpets and hard floors) without manual adjustment.
3. **Cleaning Technique:** For best results, move the vacuum slowly and steadily over the surface. The high-speed brush roll and powerful suction effectively lift embedded dirt and debris. Utilize the side edge brushes for thorough cleaning along baseboards and in corners.
4. **Low-Profile Design:** The vacuum's low-profile design allows it to lay nearly flat, enabling easy cleaning under furniture and other hard-to-reach areas.
5. **Long Power Cord:** The 35-foot power cord provides extended reach, minimizing the need to frequently unplug and re-plug the vacuum when cleaning large areas.



Figure 4: A user demonstrating the lightweight nature of the Oreck Commercial XL, making it easy to transport and maneuver.



Figure 5: Close-up of the ergonomic Helping Hand Handle with fingertip controls, designed for comfortable operation.

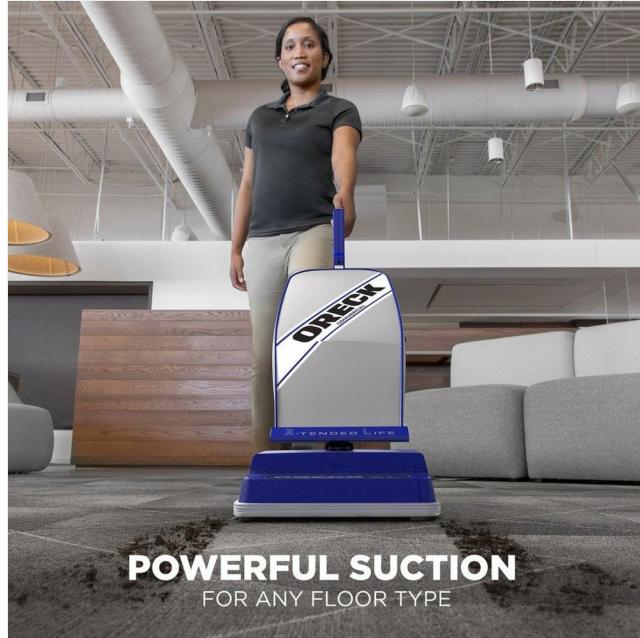


Figure 6: Depicts the vacuum in action, showcasing its powerful suction capability on various floor types.



Figure 7: Illustrates the low-profile design of the vacuum, allowing it to reach under furniture for comprehensive cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

- **Replacing the Disposable Inner Bag:**

The vacuum features a top-fill design. Replace the disposable inner bag when the "System Check Indicator" shows it is full, or when suction power decreases. Always use genuine Oreck replacement bags for proper fit and filtration. To replace, unplug the vacuum, open the outer bag, remove the full inner bag, and install a new one, ensuring it's securely sealed.



Figure 8: Demonstrates the simple process of replacing the disposable inner bag.

- **Cleaning the Brush Roll:**

Periodically check the high-speed brush roll for tangled hair, threads, or debris. Unplug the vacuum before attempting to clean the brush roll. Use scissors to carefully cut away any entangled material. A clean brush roll ensures effective agitation and cleaning performance.



Figure 9: Close-up view of the high-speed brush roll, which should be regularly inspected for debris.

- **Filter Maintenance:**

The Oreck Commercial XL uses a HEPA filter system. While the primary filtration is handled by the bagged system, ensure the HEPA filter is not obstructed. Refer to the full user guide for detailed filter replacement schedules.

TROUBLESHOOTING

Before attempting any repairs, always unplug the vacuum cleaner. If the issue persists after following these steps, contact customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; power outlet malfunction; tripped circuit breaker.	Ensure cord is firmly plugged in. Check power outlet with another appliance. Reset circuit breaker if necessary.
Loss of suction.	Full disposable bag; clogged hose/nozzle; brush roll obstructed.	Replace disposable bag. Check for and clear any clogs in the hose or nozzle. Clean brush roll of tangled debris.

Problem	Possible Cause	Solution
Brush roll not spinning.	Brush roll obstructed; drive belt broken or dislodged.	Unplug and clear any obstructions from the brush roll. Inspect drive belt for damage or misalignment.
Unusual noise.	Foreign object in brush roll or fan; worn motor bearings.	Unplug and inspect brush roll and fan area for foreign objects. If noise persists, professional service may be required.

SPECIFICATIONS

- Model Number:** XL2100RHS
- Product Dimensions:** 6 x 13 x 35 inches
- Weight:** 9 Pounds
- Manufacturer:** Oreck Commercial
- Filter Type:** HEPA Filter, Bagged
- Cord Length:** Approximately 35 feet (as per product description)
- Special Features:** High-speed roller brush, clear non-marring bumpers, soft wheels, low profile design, ergonomic Helping Hand Handle, top-fill design, system check indicator.
- Is Cordless?:** No

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your purchase or visit the official Oreck Commercial website. Oreck offers various protection plans for extended coverage. For further assistance, technical support, or to purchase replacement parts and accessories, please contact Oreck Commercial customer service. You can also refer to the comprehensive User Manual PDF available online:

[Download Full User Manual
\(PDF\)](#)