

[manuals.plus](#) /

 
› [Babymoov](#) /

› [Babymoov Duo Meal Glass Food Maker Instruction Manual - Model A001132\\_US](#)

## **Babymoov A001132\_US**

# **Babymoov Duo Meal Glass Food Maker Instruction Manual**

Model: A001132\_US



## **INTRODUCTION**

Thank you for choosing the Babymoov Duo Meal Glass Food Maker. This appliance is designed to assist you in preparing healthy and balanced meals for your baby. It combines steaming and blending functions, along with defrosting and reheating capabilities, in a single unit. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



Image: Front view of the Babymoov Duo Meal Glass Food Maker, showcasing its dual-unit design with a steaming basket on the left and a blending jar on the right, both filled with food ingredients.

## IMPORTANT SAFETY WARNINGS

- Always ensure the appliance is placed on a stable, flat, heat-resistant surface.
- Do not immerse the electrical base unit in water or any other liquid.
- Keep out of reach of children. This appliance is not a toy.
- Exercise extreme caution when handling hot steam, hot food, and hot liquids.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Only use accessories and parts recommended by the manufacturer.
- The blending blade is sharp. Handle with care during assembly, disassembly, and cleaning.
- Ensure all components are correctly assembled before operating the appliance.

- This product is certified BPA, lead, and phthalate-free.

## WHAT'S IN THE Box

Upon unpacking your Babymoov Duo Meal Glass Food Maker, please verify that all components are present and undamaged:

- Main electrical base unit
- Glass cooking bowl (1000ml capacity)
- Glass blending bowl (500ml capacity)
- Stainless steel steaming basket
- Chopping blade for blending bowl
- Lids for both bowls
- Power cord



Image: An exploded diagram showing all individual components of the Babymoov Duo Meal Glass Food Maker, including the base, glass bowls, lids, steaming basket, and blending blade.

## SETUP

- Unpack and Clean:** Carefully remove all components from the packaging. Wash all non-electrical parts (glass bowls, lids, steaming basket, blending blade) with warm soapy water before first use. Rinse thoroughly and dry.
- Position the Base Unit:** Place the main electrical base unit on a clean, dry, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
- Assemble Steaming Unit:**
  - Place the glass cooking bowl onto the left base unit.
  - Insert the stainless steel steaming basket into the glass cooking bowl.
- Assemble Blending Unit:**
  - Place the glass blending bowl onto the right base unit.
  - Ensure the chopping blade is securely installed at the bottom of the blending bowl.
- Connect Power:** Plug the power cord into the back of the main unit and then into a suitable electrical outlet. The central button will illuminate, indicating the unit is ready.

## OPERATING INSTRUCTIONS

### 1. Steaming

- Add Water:** Pour the required amount of water into the water reservoir located in the left base unit. Refer to the water level markings for guidance based on the food type and desired cooking time. Do not exceed the maximum fill line.



Image: A hand pouring water from a glass bottle into the water reservoir of the Babymoov Duo Meal Glass Food Maker's steaming unit.

2. **Prepare Food:** Wash, peel, and chop ingredients (fruits, vegetables, meat, fish) into small, uniform pieces. Place them into the stainless steel steaming basket. Do not overfill the basket.



Image: A hand lowering a stainless steel steaming basket filled with chopped carrots into the glass cooking bowl of the Babymoov Duo Meal Glass Food Maker.

3. **Start Steaming:** Place the lid on the glass cooking bowl. Press the central button once to start the steaming cycle. The indicator light will turn on. The appliance will automatically stop when the water reservoir is empty.
4. **Remove Food:** Once steaming is complete, carefully remove the lid and steaming basket using oven mitts or a cloth to avoid steam burns.

## 2. Blending

1. **Transfer Food:** Transfer the steamed food from the steaming basket into the glass blending bowl. Add a small amount of cooking liquid (from the steaming process), breast milk, or formula to achieve the desired consistency.
2. **Blend:** Secure the lid on the blending bowl. Press and hold the central button to activate the blending function. Release the button to stop. Blend in short pulses until the desired texture is achieved. Do not blend continuously for more than 30 seconds to prevent overheating. Allow a short break between blending cycles.



Image: The blending unit of the Babymoov Duo Meal Glass Food Maker in operation, with pureed orange food visible inside the glass blending bowl.

3. **Serve or Store:** Once blended, the food is ready to be served or stored in appropriate containers.

### 3. Defrosting and Reheating

The steaming function can also be used to defrost and reheat baby food. Follow the steaming instructions, adjusting the water quantity and cooking time as needed for defrosting or reheating.

- For defrosting, place frozen food in a heat-safe container (not directly in the steaming basket) and place it in the glass cooking bowl. Add a small amount of water to the reservoir and steam until defrosted.
- For reheating, place cooked food in a heat-safe container and place it in the glass cooking bowl. Add a small amount of water to the reservoir and steam until heated through.



Image: A snowflake icon, indicating the defrosting capability of the appliance.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your Babymoov Duo Meal Glass Food Maker.

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher Safe Parts:** All removable components, including the glass bowls, lids, steaming basket, and blending blade, are dishwasher safe. Place them on the top rack of your dishwasher.
- **Hand Washing:** For hand washing, use warm soapy water and a soft sponge. Rinse thoroughly and dry immediately. Be careful when handling the sharp blending blade.
- **Base Unit:** Wipe the main electrical base unit with a damp cloth. Do not immerse it in water or spray water directly onto it.
- **Descaling:** Over time, mineral deposits may accumulate in the water reservoir. To descale, mix 100ml of white vinegar with 100ml of water and pour into the reservoir. Let it sit for several hours or overnight. Run a steaming cycle with this solution (without food), then rinse the reservoir thoroughly with clean water and run two steaming cycles with clean water to remove any vinegar residue.



Image: An icon depicting dishes in a dishwasher, indicating that components are dishwasher safe.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
Steaming unit not producing steam.	No water in reservoir; reservoir is empty; mineral buildup.	Fill the water reservoir to the appropriate level. If issue persists, descale the unit.
Blending unit not working.	Lid not properly secured; blending bowl not correctly placed; motor overheated.	Ensure the lid is securely closed and the blending bowl is correctly seated on the base. If the motor is hot, allow it to cool down for 15-20 minutes before attempting to blend again. Avoid continuous blending for too long.
Food not blending smoothly.	Insufficient liquid; food pieces too large; overfilling.	Add more liquid (cooking water, breast milk, formula). Chop food into smaller pieces before blending. Do not overfill the blending bowl.

Problem	Possible Cause	Solution
Water leaking from the unit.	Bowl not correctly seated; damaged seal.	Ensure the glass bowl is properly seated on the base. Check for any visible damage to seals or components. Contact customer support if damage is found.

## SPECIFICATIONS

- Model Name:** Duo Meal Glass
- Model Number:** A001132\_US
- Brand:** Babymoov
- Functions:** Steam, Blend, Defrost, Reheat
- Cooking Bowl Capacity:** 1000 ml (approx. 4.2 cups)
- Blending Bowl Capacity:** 500 ml (approx. 2.1 cups)
- Total Capacity:** Over 6 cups (1500 ml)
- Product Dimensions:** 14"D x 6.8"W x 11.5"H
- Item Weight:** 11.43 pounds
- Materials:** Glass, Stainless Steel, Polypropylene (BPA-Free)
- Blade Material:** Stainless Steel
- Power Source:** Electric
- Care Instructions:** Dishwasher Safe (removable parts)

## WARRANTY AND SUPPORT


### Lifetime Warranty


The Babymoov Duo Meal Glass Food Maker is backed by Babymoov's lifetime warranty. This warranty covers manufacturing defects and ensures the product meets U.S. and European Baby Safety Standards. Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, concerns, or warranty claims, please contact Babymoov customer support. Refer to the official Babymoov website or product packaging for the most current contact information.

**Online Resources:** Visit the official Babymoov website for additional product information, FAQs, and recipe ideas.

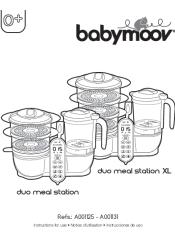	<p><b><u>Babymoov Duo Meal Glass User Manual and Instructions</u></b></p> <p>Comprehensive user manual and instructions for the Babymoov Duo Meal Glass, a 4-in-1 baby food maker, steamer, blender, warmer, and defroster. Includes safety guidelines, cleaning instructions, component details, and step-by-step usage guides for meal preparation, reheating, and thawing.</p>
	<p><b><u>Babymoov Duo Meal Station User Manual</u></b></p> <p>Comprehensive user manual for the Babymoov Duo Meal Station (Model A001125), detailing its functions, operation, safety instructions, and maintenance for preparing baby food.</p>
	<p><b><u>Babymoov Duo Meal Station XL - User Manual and Instructions</u></b></p> <p>Comprehensive guide for the Babymoov Duo Meal Station XL, covering assembly, functions like steaming, defrosting, reheating, sterilizing, and blending, along with safety precautions and maintenance tips.</p>
	<p><b><u>Babymoov Nutribaby Glass User Manual</u></b></p> <p>Comprehensive instructions for the Babymoov Nutribaby Glass, a multi-functional baby food processor. Learn about its features, usage, cleaning, and safety precautions for preparing healthy meals for your baby.</p>
	<p><b><u>Babymoov NutriBaby Glass : Manuel d'instructions et consignes de sécurité</u></b></p> <p>Guide complet pour le Babymoov NutriBaby Glass, incluant instructions d'utilisation, conseils de sécurité, et caractéristiques de cet appareil multifonction pour la préparation des repas de bébé.</p>
	<p><b><u>Babymoov Duo Meal Station XL User Manual &amp; Instructions</u></b></p> <p>Comprehensive guide to using the Babymoov Duo Meal Station XL, covering steaming, blending, reheating, sterilizing, defrosting, safety precautions, and troubleshooting.</p>

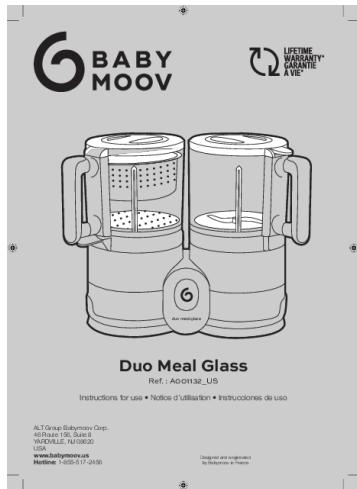

## [Babymoov Duo Meal Glass User Manual and Instructions](#)

Comprehensive user manual and instructions for the Babymoov Duo Meal Glass, a 4-in-1 baby food maker, steamer, blender, warmer, and defroster. Includes safety guidelines, cleaning instructions, component details, and step-by-step usage guides for meal preparation, reheating, and thawing.

lang:en score:35 filesize: 1.39 M page\_count: 20 document date: 2023-03-02