

[manuals.plus](#) /

› [SYBO](#) /

› [SYBO 12-Cup Glass Coffee Decanter Instruction Manual](#)

SYBO coffee pot

SYBO 12-Cup Glass Coffee Decanter Instruction Manual

Model: coffee pot

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your SYBO 12-Cup Glass Coffee Decanter. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INFORMATION

- Handle the glass decanter with care. Avoid sudden temperature changes, as this may cause the glass to break.
- Do not heat the decanter directly on an open flame or stovetop. It is designed for use with compatible coffee brewing machines.
- Ensure the decanter is placed on a stable, heat-resistant surface during and after brewing.
- Keep out of reach of children to prevent burns from hot liquids.
- Do not use abrasive cleaners or scouring pads that could scratch the glass or plastic components.

DO NOT HEAT DIRECTLY ON AN OPEN FLAME



Image: Warning against direct heating of the decanter.

3. PRODUCT COMPONENTS

The SYBO 12-Cup Glass Coffee Decanter is designed for durability and ease of use. Key features include:

- High Quality Glass:** Constructed from laboratory-grade, stress-free glass, ensuring reliability and no aftertaste.
- Temperature Resistance:** Designed to withstand temperature adjustments common in coffee brewing.
- Earth-Friendly Materials:** Utilizes food-grade polymeric materials for connections.
- Drip-free Carafe:** Features a proprietary lid and spout design to prevent spills during pouring.
- Comfortable Grip:** Ergonomically designed handle for secure and easy handling.



Image: SYBO 12-Cup Glass Coffee Decanter.

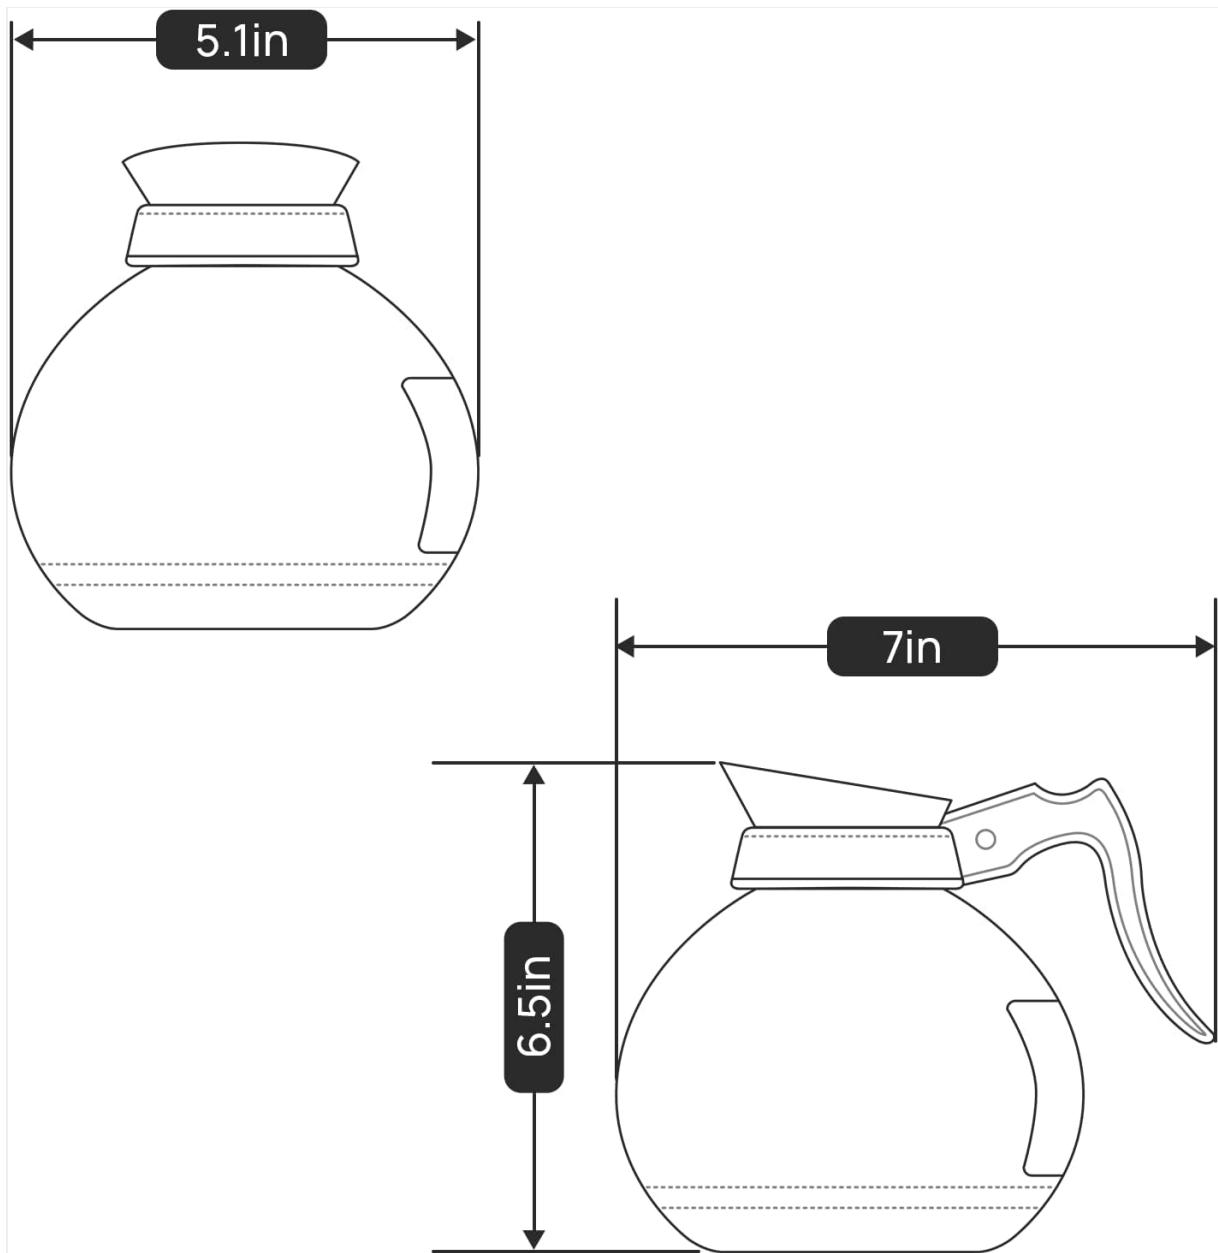


Image: Dimensions of the decanter.

4. SETUP

The SYBO 12-Cup Glass Coffee Decanter is designed to be compatible with various commercial coffee machines. Ensure your coffee machine is suitable for a 12-cup decanter.

- 1. Unpack:** Carefully remove the decanter from its packaging. Inspect for any damage.
- 2. Initial Cleaning:** Before first use, wash the decanter with warm, soapy water. Rinse thoroughly and dry.
- 3. Placement:** Position the decanter securely on the warming plate of your compatible coffee machine.

COMPATIBLE WITH COFFEE MACHINES



Image: Decanter placed on a compatible coffee machine.

5. OPERATING INSTRUCTIONS

This decanter functions as a collection and serving vessel for brewed coffee from a compatible coffee machine.

- Brewing:** Follow the operating instructions of your specific coffee machine to brew coffee directly into the SYBO 12-Cup Glass Coffee Decanter.
- Serving:** Once brewing is complete, carefully remove the decanter from the warming plate using the ergonomic handle.
- Pouring:** Utilize the drip-free spout to pour coffee into cups.
- Keeping Warm:** Return the decanter to the warming plate of your coffee machine to keep the coffee warm.



Image: Pouring coffee from the decanter.

6. CARE AND MAINTENANCE

Regular cleaning and proper care will extend the life of your coffee decanter.

- **Daily Cleaning:** After each use, wash the decanter with warm, soapy water. Use a soft sponge or cloth to clean the interior and exterior. Rinse thoroughly to remove all soap residue.
- **Drying:** Allow the decanter to air dry completely or dry with a soft, lint-free cloth.
- **Stain Removal:** For coffee stains, a mixture of baking soda and water or a specialized coffee pot cleaner can be used. Follow the cleaner's instructions and rinse thoroughly.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can scratch the glass or damage the plastic components.

7. TROUBLESHOOTING

If you encounter issues with your SYBO Glass Coffee Decanter, consider the following:

- **Leaking:** Ensure the lid is properly seated and the decanter is not overfilled. Check for any cracks or damage to the glass or spout. If damage is present, discontinue use.

- **Coffee Not Staying Warm:** Verify that your coffee machine's warming plate is functioning correctly and that the decanter is properly centered on it.
- **Difficulty Cleaning Stains:** Refer to the 'Care and Maintenance' section for tips on removing stubborn coffee stains.

8. SPECIFICATIONS

Brand	SYBO
Model Name	coffee pot
Capacity	12-Cup
Color	Black
Material	Glass
Product Dimensions	7 x 7 x 6.5 inches
Item Weight	1.68 pounds (0.76 Kilograms)
UPC	860006669478

9. WARRANTY AND SUPPORT

Specific warranty information for the SYBO 12-Cup Glass Coffee Decanter is not provided in the product details. For warranty claims or technical support, please contact SYBO customer service directly or refer to the documentation provided with your coffee machine.