

[Manuals.plus](#) /

> [CHAKEYAKE](#) /

> [CHAKEYAKE G380D Flip Phone User Manual](#)

CHAKEYAKE G380D

CHAKEYAKE G380D Flip Phone User Manual

Your guide to setting up and operating your CHAKEYAKE G380D mobile phone.

[Overview](#)

[Setup](#)

[Operating
Instructions](#)

[Maintenance
Warranty](#)

[Support](#)

[Troubleshooting](#)

[Specifications](#)

1. PRODUCT OVERVIEW

The CHAKEYAKE G380D is a user-friendly flip phone designed for simplicity and ease of use. It features large buttons, a clear display, and essential functions for communication. This manual provides detailed instructions to help you get started and utilize all features of your device.



Figure 1: The CHAKEYAKE G380D flip phone, red in color, shown partially open. The main screen displays the current time and date, while the large, easy-to-read keypad is visible on the lower half.

Key Features:

- **Large Buttons and Clear Display:** Optimized for easy viewing and operation.
- **SOS Emergency Button:** Quick access to emergency contacts.
- **Dual SIM Support:** Flexibility for multiple network connections.
- **Long Battery Life:** Extended standby and talk time.

- **Essential Functions:** Includes flashlight, FM radio, alarm, calculator, and more.
-

2. SETUP GUIDE

Follow these steps to prepare your CHAKEYAKE G380D for first-time use.

2.1. Installing the Battery

1. Gently remove the back cover of the phone.
2. Align the battery contacts with the terminals inside the phone.
3. Insert the battery firmly into its compartment.
4. Replace the back cover, ensuring it clicks securely into place.

2.2. Inserting SIM Cards

The phone supports dual SIM cards (2G prepaid SIM cards). Use the provided SIM card adapters if necessary.

1. With the battery removed, locate the SIM card slots.
2. Insert your 2G SIM card(s) into the designated slot(s) with the gold contacts facing down.
3. Ensure the SIM card(s) are properly seated.
4. Reinstall the battery and back cover.

2.3. Charging the Phone

Before first use, fully charge the phone's battery.

1. Connect the charger cable to the phone's charging port.
2. Plug the charger into a power outlet.
3. The charging indicator on the screen will show the charging status.
4. Once fully charged, disconnect the charger.

2.4. Powering On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen lights up.
 - **To Power Off:** Press and hold the Power/End Call button until the power-off options appear, then confirm.
-

3. OPERATING INSTRUCTIONS

This section details the primary functions and how to use them.

3.1. Making and Receiving Calls

- **Making a Call:**
 1. Open the flip phone.
 2. Dial the desired phone number using the large keypad.

3. Press the Green Call button to initiate the call.

- **Receiving a Call:**

1. When the phone rings, open the flip or press the Green Call button to answer.

2. To end a call, press the Red End Call button.



Figure 2: The CHAKEYAKE G380D phone open, showing its large, easy-to-read keypad. The M1, M2, M3 speed dial keys are visible, along with standard number buttons, designed for user convenience.

3.2. Sending Messages (SMS/MMS)

The phone supports sending and receiving text messages (SMS) and multimedia messages (MMS).

1. Navigate to the "Messaging" menu.
2. Select "New Message" or "Create Message".
3. Enter the recipient's number or select from contacts.
4. Type your message using the keypad.
5. To send an MMS, you may attach photos or other media.
6. Press "Send".



Figure 3: The internal screen of the CHAKEYAKE G380D, showing the main menu with options for SOS Settings, Messaging, and Call logs. This interface allows users to easily access essential communication features.

3.3. SOS Emergency Button

The SOS button is a critical safety feature. It supports up to 5 emergency numbers and a predefined emergency message.

SOS EMERGENCY BUTTON

Through SOS button to connect family and emergency services promptly in the senior citizen or kid's emergency time



Figure 4: A detailed view of the back of the CHAKEYAKE G380D flip phone, clearly showing the red SOS emergency button. This button is designed for quick access in urgent situations.

1. Setting up SOS Numbers:

- Go to "SOS Settings" in the menu.
- Add up to 5 emergency contact numbers.
- You can also set a predefined emergency message.

2. Activating SOS:

- In an emergency, press and hold the SOS button on the back of the phone for 3 seconds.
- The phone will automatically dial the predefined emergency numbers one by one until a connection is made.
- It will also send the emergency message to these contacts.

3.4. Flashlight

To activate the built-in flashlight:

- Press and hold the '#' key on the keypad to turn the flashlight on or off.

3.5. FM Radio

Enjoy listening to FM radio stations.



Figure 5: The CHAKEYAKE G380D phone's screen showing the FM radio interface, tuned to 95.1 FM. The background features musical notes and a retro radio, illustrating the phone's built-in radio function.

1. Navigate to the "FM Radio" option in the menu.
2. Use the navigation keys to scan for stations or manually tune to a frequency.
3. Adjust the volume using the side buttons.

3.6. Other Functions

The CHAKEYAKE G380D includes several other useful features:

- **Alarm Clock:** Set multiple alarms for reminders.
- **Bluetooth:** Connect to compatible Bluetooth devices.
- **Audio/Video Player:** Play media files stored on the phone or an inserted Micro SD card.
- **Calendar:** Keep track of dates and events.
- **Calculator:** Perform basic arithmetic calculations.

- **Camera:** Capture photos with the built-in camera.



Figure 6: Two CHAKEYAKE G380D phones. One is closed, displaying the external screen with time and date. The other is open, showing its internal screen with a photo of two smiling elderly individuals, demonstrating the phone's camera capability.

2.4"/1.77" DUAL TFT DISPLAY SCREEN



Figure 7: A comparison of the CHAKEYAKE G380D's dual screens. One phone is open, showcasing its vibrant 2.4-inch internal display. The other is closed, showing the 1.77-inch external screen with time and date, providing essential information at a glance.

3.7. Language Settings

The phone supports multiple languages, including English, French, German, Italian, and Spanish.

1. Go to "Settings" from the main menu.
2. Select "Language" or "Phone Settings" then "Language".
3. Choose your preferred language from the list.

4. MAINTENANCE

Proper care ensures the longevity of your CHAKEYAKE G380D phone.

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid liquid cleaners.
- **Battery Care:**

- Avoid extreme temperatures, which can affect battery performance.
- Do not leave the phone fully discharged for extended periods.
- Use only the original charger provided.
- **Storage:** Store the phone in a cool, dry place when not in use for extended periods.
- **Protection:** Avoid dropping the phone or exposing it to moisture.

5. TROUBLESHOOTING

If you encounter issues with your phone, refer to the following common solutions.

Problem	Possible Cause	Solution
Phone does not power on.	Battery is discharged or not properly installed.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls.	No SIM card, SIM card not properly inserted, or no network signal.	Check SIM card installation. Ensure you are in an area with network coverage. Contact your service provider if issues persist.
Poor call quality.	Weak network signal or interference.	Move to an area with better signal. Avoid obstructions.
SOS button not working.	SOS numbers not set up or incorrect.	Verify that emergency numbers are correctly configured in "SOS Settings".
Battery drains quickly.	Frequent use, background applications, or old battery.	Reduce screen brightness. Close unused applications. Consider replacing the battery if it's old.

If the problem persists after trying these solutions, please contact customer support.

6. PRODUCT SPECIFICATIONS

Detailed technical specifications for the CHAKEYAKE G380D flip phone.

Feature	Specification
Model Number	G380D
Camera	0.3 Mpx (Rear Camera)
Resolution	240 x 320 pixels
Main Screen	2.4" QVGA Display
External Screen	1.77" Display
Dimensions	94.5 x 47.5 x 17.4 mm
Weight (with battery)	75 g

Feature	Specification
Memory (RAM + ROM)	4 MB RAM + 32 MB ROM
Expandable Storage	Micro SD up to 16 GB
Power Adapter	5 V, 500 mA
SIM Support	Dual SIM (2G prepaid SIM cards)
Supported Networks	GSM (850/900/1800/1900 MHz)
Battery Capacity	1000 mAh
Standby Time	Up to 150 hours
Talk Time	Up to 240 minutes (4 hours)
Connectivity	USB, Bluetooth
Special Features	SOS button, Flashlight, FM Radio, MP3, Video Player, Alarm, Calculator, Calendar
Supported Languages	English, French, German, Italian, Spanish

7. WARRANTY INFORMATION

Specific warranty details are not provided in the product description. Please refer to the warranty card included in your product packaging or contact CHAKEYAKE customer support for information regarding warranty coverage and terms.

8. CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your CHAKEYAKE G380D flip phone, please contact our customer service team.

CHAKEYAKE offers dedicated customer support. Please refer to the contact information provided in your product packaging or visit the official CHAKEYAKE website for assistance.