

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Replacement Remote Control Instruction Manual for MASTER LED LCD TV TL201 TL193 TL400 TL321 (V. 2)

ALLIMITY QYSY-TL201-QYSY

ALLIMITY Replacement Remote Control Instruction Manual

For MASTER LED LCD TV Models TL201, TL193, TL400, TL321 (V. 2)

1. INTRODUCTION

This ALLIMITY replacement remote control is designed to provide full functionality for your MASTER LED LCD TV. It is compatible with the following models: **TL201, TL193, TL400, TL321 (Version 2)**. This remote control requires no programming; simply insert the batteries, and it is ready for immediate use.

2. SETUP AND BATTERY INSTALLATION

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new **Alkaline** batteries (AAA size, not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.



Figure 1: Top-down view of the ALLIMITY replacement remote control. This image displays the full layout of the buttons, including power, number pad, navigation, volume, and channel controls.

3. OPERATING INSTRUCTIONS

This remote control operates via infrared (IR) technology. Ensure there is a clear line of sight between the remote control and your TV's IR receiver for proper function. The maximum effective range is approximately 10 meters.

Button Functions:

- **Power (●):** Turns the TV on or off.
- **Number Pad (0-9):** Directly select channels.
- **CH +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts the volume level.
- **Mute:** Silences the TV audio.
- **Menu:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.

- **Source/Input:** Selects the input source (e.g., HDMI, AV).
- **Exit:** Exits the current menu or function.
- **Info:** Displays channel or program information.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or interactive services.
- *Other buttons may include:* List, Display, Freeze, Program, Sleep, Subtitle, T.Shift, Angle, Replay, Hold, Index, Zoom, Text, DTV, EPG, Fav, Audio, TV/Radio. Refer to your TV's original manual for specific functions of these buttons.



Figure 2: Angled view of the ALLIMITY replacement remote control. This image provides a perspective of the remote's ergonomic design and the arrangement of its 15 buttons.

4. MAINTENANCE AND CARE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.

- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's IR receiver.
 - Make sure you are within the effective operating range (approx. 10 meters) and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - This remote is a direct replacement and does not require programming. If a specific button does not work, it might be due to a TV setting or a function not supported by your specific TV model, even if the button is present on the remote.
 - Clean the remote control, especially around the unresponsive button, to ensure no debris is interfering with its operation.

6. SPECIFICATIONS

Brand	ALLIMITY
Model Number	QYSY-TL201-QYSY
Compatible TV Models	MASTER LED LCD TV TL201, TL193, TL400, TL321 (V. 2)
Connectivity Technology	Infrared (IR)
Color	Black
Number of Buttons	15
Maximum Range	10 Meters
Battery Type	2 x AAA Alkaline (not included)
Manufacturer	ALLIMITYQYSY
Country of Origin	China

7. WARRANTY AND SUPPORT

Specific warranty information for this ALLIMITY replacement remote control is not provided within this document. For details regarding warranty coverage, returns, or technical support, please refer to the seller or the manufacturer's official website where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4Y82TP1>

More documents and user manuals: <https://manuals.plus/>