

TPOB TROLL

TPOB X Digital Brushless Hair Trimmer User Manual

Model: TROLL

INTRODUCTION

The TPOB X Digital Brushless Hair Trimmer is a professional-grade, cordless, and rechargeable grooming tool designed for precision hair cutting and edging. Featuring a powerful 7200rpm brushless motor and a specialized Psycho Blade, this trimmer offers efficient and reliable performance for both personal and professional use.

SAFETY INFORMATION

Adhering to safety guidelines is crucial for the proper and safe operation of your TPOB X Trimmer. Please read and understand all safety instructions before use.

- Avoid using the trimmer near water or in wet environments to prevent electrical shock.
- Do not use the trimmer on wet skin.
- Exercise caution when using the trimmer near sensitive areas, particularly around the eyes.
- Ensure the device is fully charged according to the instructions before initial use.
- When adjusting blades for zero-gapping, follow the provided instructions carefully and use the hex zero gap adjuster as directed.
- Always refer to the complete user manual for additional safety information and warnings.

PACKAGE CONTENTS

Upon opening the package, verify that all components are present and in good condition.



Image: The TPOB X Trimmer, charging cable, power adapter, cleaning brush, and a small screwdriver for blade adjustments.

- TPOB X Digital Brushless Hair Trimmer (Slime Green)
- Psycho Blade (pre-installed)
- Charging Cable
- Power Adapter
- Cleaning Brush
- Small Screwdriver (for blade adjustment)
- Blade Cover
- Blade Oil

PRODUCT OVERVIEW

Familiarize yourself with the different parts of your TPOB X Trimmer.

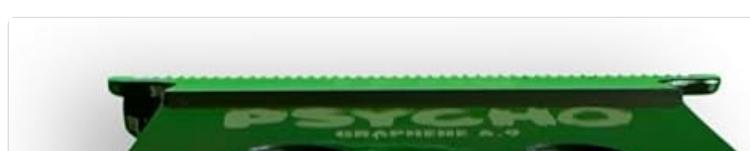




Image: Front view of the TPOB X Trimmer, highlighting the blade and main body.



Image: Close-up view of the "Psycho" blade, showing the graphite 6.9 material and TPOB branding.



TPOB

Model: X
5V-1A 5W
2600mAh





Image: Back view of the TPOB X Trimmer, displaying model number, power rating, battery capacity, and regulatory marks.

- **Blade Assembly:** Precision-engineered Psycho Blade for sharp, clean lines.
- **Power Switch:** Located on the side for easy on/off operation.
- **Charging Port:** At the bottom of the unit for connecting the charging cable.
- **Indicator Light:** Displays charging status and battery level.
- **Ergonomic Body:** Designed for comfortable grip and control during use.

SETUP

Before using your TPOB X Trimmer for the first time, follow these setup instructions.

Charging the Trimmer

1. Connect the charging cable to the trimmer's charging port.
2. Plug the power adapter into a standard electrical outlet.
3. Allow the trimmer to charge for approximately 90 minutes for a full charge. The indicator light will show charging status.
4. Once fully charged, disconnect the trimmer from the power source.

Blade Adjustment (Zero-Gapping)

The Psycho Blade can be adjusted for a closer cut (zero-gapping). This procedure should be performed with caution.

1. Ensure the trimmer is turned off and disconnected from any power source.
2. Carefully remove the blade assembly from the trimmer body if necessary (refer to maintenance section for blade removal).
3. Use the provided small screwdriver to loosen the screws on the blade.
4. Gently align the moving blade with the stationary blade to achieve the desired zero-gap setting. Ensure the moving blade does not extend beyond the stationary blade to prevent skin irritation.
5. Tighten the screws securely.
6. Reattach the blade assembly to the trimmer body.

OPERATION

Follow these steps for effective and safe operation of your TPOB X Trimmer.

1. Ensure the trimmer is fully charged.
2. If desired, apply shaving cream or oil to the area to be trimmed for a smoother experience.
3. Turn on the trimmer using the power switch.
4. Hold the trimmer firmly and place the blade flat against the skin or at a slight angle, depending on the desired cut.
5. Move the trimmer slowly and steadily against the direction of hair growth for optimal results.
6. For detailing and edging, use the corner of the blade for precise lines.

7. After use, turn off the trimmer.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your trimmer.

Cleaning the Trimmer

1. After each use, turn off and unplug the trimmer.
2. Use the provided cleaning brush to remove hair clippings from the blade and trimmer head.
3. For a more thorough cleaning, carefully remove the blade assembly. Brush away any trapped hairs.
4. Wipe the trimmer body with a clean, dry cloth. Do not rinse the trimmer under water unless it is specifically designed for wet use (this model is not).
5. Reattach the blade assembly securely.

Oiling the Blades

To maintain blade sharpness and smooth operation, oil the blades regularly.

1. Apply 1-2 drops of blade oil (or light machine oil) across the top of the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a clean cloth.

Note: Regular oiling helps prevent rust and reduces friction, extending the life of your blades.

TROUBLESHOOTING

If you encounter issues with your TPOB X Trimmer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 90 minutes.
Blades pull hair or cut poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If dull, consider blade replacement.
Trimmer makes unusual noise.	Blades need oiling or are misaligned.	Oil the blades. Check blade alignment and adjust if necessary.
Short battery life.	Battery not fully charged or aging.	Ensure full charge cycle. If issue persists, battery may need service.

If the problem persists after attempting these solutions, please contact TPOB customer support for further assistance.

SPECIFICATIONS

Technical specifications for the TPOB X Digital Brushless Hair Trimmer.

- **Model Number:** TROLL
- **Motor Type:** Digital Brushless
- **Motor Speed:** 7200 RPM

- **Blade Type:** Psycho Blade (Graphite 6.9)
- **Power Source:** Battery Powered (1 Lithium Ion battery required)
- **Charging Time:** Approximately 90 minutes
- **Run Time:** Up to 240 minutes (as per product box image)
- **Item Weight:** 0.53 Kilograms (1.17 Pounds)
- **Color:** X Trimmer Slime
- **Manufacturer:** TPOB
- **ASIN:** B0C516D3R5

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the following details.

Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. *(Note: This disclaimer appears in the product data, but is typically for supplements. It's included here as provided, but may not be directly relevant to a hair trimmer. Users should consult the official TPOB warranty policy for product-specific terms.)*

Customer Support

For technical assistance, warranty claims, or general inquiries, please visit the official TPOB website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's official website.

You can also visit the [TPOB Store on Amazon](#) for more product information and support resources.

© 2025 TPOB. All rights reserved.

Documents - TPOB – TROLL

Cromemco®
CROMIX®
Multi-user Multi-tasking
Disk Operating System
Instruction Manual




[\[pdf\] User Manual](#)

Cromemco Cromix Instruction Manual 023 4022 198206 1982 Rescanned by Marcus Bennett maben
homeip net static S100 cromemco cromix |||

P e # I M u lti- u s e r M u lti- ta s k in g D is k O p e ra tin g S y s te m In s tru c tio n ...
41 8 420 A p p e n d l x A z S E T T IN G UP - HA R DW A R E M em o ry B oa rd s
Floppy D isk C ontroll er R e a l T im e C l o c k T U -A R T T e rm in a l In t e rf a c e
P r in te r In t e rfa c ...

lang:en **score:22** filesize: 24.62 M page_count: 499 document date: 2008-06-12

Cromemco®
CROMIX®
Multi-user Multi-tasking
Disk Operating System
Instruction Manual

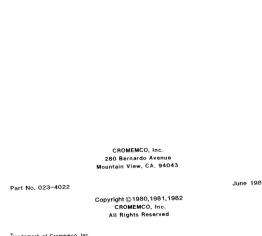


[\[pdf\] User Manual Documentation](#)

Cromemco Documentation Cromix Instruction Manual 1982 Rescanned by Marcus Bennett 023 4022
198206 maben homeip net static S100 cromemco cromix older |||

P e # I M u lti- u s e r M u lti- ta s k in g D is k O p e ra tin g S y s te m In s tru c tio n ...
41 8 420 A p p e n d l x A z S E T T IN G UP - HA R DW A R E M em o ry B oa rd s
Floppy D isk C ontroll er R e a l T im e C l o c k T U -A R T T e rm in a l In t e rf a c e
P r in te r In t e rfa c ...

lang:en **score:21** filesize: 24.65 M page_count: 499 document date: 2007-02-17

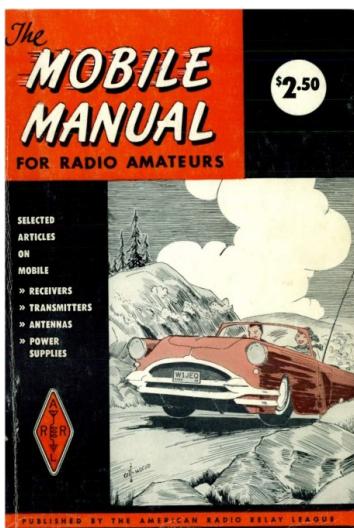

[\[pdf\] User Manual Catalog](#)

RADIO AMATEURS ARRL Mobile Manual 1955 140824 worldradiohistory BOOKSHELF ARH

Technology |||

RADIO AMATEURS SELECTED ARTICLES MOBILE RECEIVERS TRANSMITTERS
ANTENNAS POWER SUPPLIES peo The ... Mix, WITS 1 RECEIVING One-Tube 75-Meter Mobile Converter. J. G. Rountree, W5CLP Simple Crystal-Controlled
Converters. W. W. Deane, W6RET Bandswitching Mobile Converter Donald Mix,
WITS, and Julius G...

lang:en **score:12** filesize: 25.68 M page_count: 356 document date: 2024-08-15