

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Takara Tomy](#) /

› [Takara Tomy Beyblade X BX-01 Starter, Dran Sword, 3-60F Instruction Manual](#)

Takara Tomy BX-01

Takara Tomy Beyblade X BX-01 Starter, Dran Sword, 3-60F Instruction Manual

INTRODUCTION

Welcome to the official instruction manual for your Takara Tomy Beyblade X BX-01 Starter, Dran Sword, 3-60F. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Beyblade X product. The Beyblade X series introduces a new level of battling with extreme speed and impact, utilizing the X-Dash gimmick. Please read this manual thoroughly before use.

WHAT'S IN THE BOX

Your Takara Tomy Beyblade X BX-01 Starter package includes the following components:

- Blade (1)
- Ratchet (1)
- Bit (1)
- Winder Launcher (1)
- Winder (1)
- Instruction Manual (1)



Image: All components included in the Takara Tomy Beyblade X BX-01 Starter set, displayed on the product packaging.

SAFETY INFORMATION

- **Recommended Age:** This product is recommended for ages 6 years and up.
- **Choking Hazard:** Small parts may be a choking hazard for young children. Keep out of reach of children under 3 years old.
- **Eye Protection:** Always use eye protection when launching Beyblades to prevent injury from flying parts.
- **Use a Stadium:** Always battle in a Beyblade X series stadium (sold separately) to contain the Beyblades and prevent them from hitting people or objects.
- **No Batteries Required:** This product does not require batteries for operation.
- **Adult Supervision:** Adult supervision is recommended during play.

ASSEMBLY AND SETUP

1. Assemble the Beyblade (Dran Sword)

1. Take the Blade, Ratchet, and Bit components.
2. Align the Ratchet with the central mechanism of the Blade.
3. Attach the Bit to the bottom of the Ratchet, ensuring all parts click securely into place.



※画像はイメージです。

Image: The individual components of the Dran Sword Beyblade (Blade, Ratchet, Bit) before assembly.

2. Prepare the Winder Launcher

Insert the Winder into the Winder Launcher. Ensure it is fully inserted and engaged with the internal mechanism.



※画像はイメージです。

Image: The Winder Launcher, a black device with a long, thin winder extending from it.

3. Attach Beyblade to Launcher

Carefully attach the assembled Dran Sword Beyblade to the Winder Launcher. Twist the Beyblade clockwise until it locks securely onto the launcher. You should hear a click.



Image: The Dran Sword Beyblade connected to its Winder Launcher, showing the complete setup before launching.

OPERATING INSTRUCTIONS

Launching Your Beyblade

1. **Prepare the Stadium:** Ensure you are using a Beyblade X series stadium (sold separately) on a flat, stable surface.
2. **Hold the Launcher:** Grip the Winder Launcher firmly with one hand.
3. **Pull the Winder:** With your other hand, pull the Winder swiftly and horizontally out of the launcher. This will release the Beyblade into the stadium with high rotational speed.
4. **Observe the Battle:** Watch as your Dran Sword Beyblade engages in battle, utilizing its aggressive blades and dash performance for powerful X-Dashes.



Image: A close-up of the assembled Dran Sword Beyblade, showcasing its design and components.

MAINTENANCE

- **Cleaning:** Wipe the Beyblade and launcher with a dry, soft cloth after use to remove dust and debris. Do not use water or cleaning solutions, as this may damage the components.
- **Storage:** Store your Beyblade and launcher in a cool, dry place away from direct sunlight and extreme temperatures to prevent warping or damage.
- **Inspection:** Periodically inspect all components for wear and tear. Replace any damaged parts to ensure optimal performance and safety.

TROUBLESHOOTING

Beyblade does not launch or spins weakly:

- Ensure the Beyblade is securely attached to the Winder Launcher. It should click into place.
- Verify the Winder is fully inserted into the launcher.
- Pull the Winder with sufficient force and a smooth, horizontal motion.
- Check for any obstructions or damage to the Winder or Launcher mechanism.

Beyblade bursts frequently:

- Ensure the Blade, Ratchet, and Bit are assembled correctly and securely.
- The Beyblade X system is designed for intense battles; bursting is a normal part of gameplay.
- Consider your launching technique; a smoother launch might affect battle outcomes.

SPECIFICATIONS

Feature	Detail
Product Name	Beyblade X BX-01 Starter, Dran Sword, 3-60F
Brand	Takara Tomy
Model Number	BX-01
Product Dimensions	1.97 x 1.97 x 1.57 inches
Item Weight	5.6 ounces
Recommended Age	6 years and up
Batteries Required	No
Language (Original)	Japanese
Release Date	July 15, 2023

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation provided with your purchase or contact the retailer. Takara Tomy products are generally covered by manufacturer warranties against defects in materials and workmanship.

For further assistance or inquiries, please visit the official Takara Tomy website or contact their customer support channels. Keep your proof of purchase for any warranty claims.

© 2025 Takara Tomy. All rights reserved. Beyblade X is a registered trademark.

This manual is for informational purposes only. Product specifications are subject to change without notice.