

MISTRAL MHV1412R-G

Greenleaf by Mistral MHV1412R-G 12-inch DC High Velocity Stand Fan User Manual

Model: MHV1412R-G

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the fan.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Unplug the fan from the power outlet when not in use, before cleaning, or before moving.
- Keep fingers, pencils, or any other objects away from the fan blades when the fan is running.
- Do not operate the fan with a damaged cord or plug. Contact authorized service personnel for repair.
- Place the fan on a stable, level surface to prevent it from tipping over.
- This appliance is for indoor use only. Do not use outdoors.
- Do not block air openings or operate near curtains or other materials that may block airflow.

2. PRODUCT OVERVIEW

The Greenleaf by Mistral MHV1412R-G is a 12-inch DC High Velocity Stand Fan designed for efficient air circulation. It features adjustable height, 12 speed settings, 3 operating modes, an 8-hour timer, and automatic oscillation.



Figure 2.1: Front view of the MHV1412R-G fan, illustrating its convertible height feature, allowing it to function as both a shorter and taller stand fan.



Figure 2.2: Side view of the MHV1412R-G fan, highlighting its slim profile and the angle of the fan head.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Fan Head Assembly
- Upper Stand Pole
- Lower Stand Pole
- Round Base
- Remote Control
- User Manual (this document)

4. ASSEMBLY AND SETUP

1. **Attach the Stand Pole to the Base:** Insert the lower stand pole into the round base. Secure it by tightening the locking nut from underneath the base.
2. **Adjust Height (Optional):** For a taller configuration, attach the upper stand pole to the lower stand pole. For a shorter configuration, attach the fan head directly to the lower stand pole. Ensure the poles are firmly connected.

3. **Mount the Fan Head:** Carefully place the fan head assembly onto the top of the assembled stand pole. Ensure it clicks securely into place.
4. **Connect Power:** Plug the power adapter into the fan's DC input port, then plug the adapter into a standard electrical outlet.
5. **Insert Remote Batteries:** Open the battery compartment on the remote control and insert the required batteries (not included, typically AAA).

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The fan features a control panel on its base with touch-sensitive buttons for basic operations.

- **Power Button:** Turns the fan On/Off.
- **Speed Button:** Adjusts fan speed (1-12 levels).
- **Mode Button:** Cycles through Normal, Natural, and Sleep modes.
- **Oscillation Button:** Activates/deactivates horizontal (90°) and vertical (90°) oscillation.
- **Timer Button:** Sets the auto-off timer (up to 8 hours).

5.2 Remote Control

The included remote control provides convenient access to all fan functions from a distance.

- **Power (On/Off):** Turns the fan on or off.
- **Speed (+/-):** Increases or decreases the fan speed (1-12 levels).
- **Mode:** Selects between Normal, Natural, and Sleep modes.
- **Oscillation (OSC):** Toggles horizontal and vertical oscillation.
- **Timer:** Sets the auto-off timer in 1-hour increments, up to 8 hours.

5.3 Operating Modes

- **Normal Mode:** Provides a constant airflow at the selected speed.
- **Natural Mode:** Simulates natural breezes by varying the fan speed intermittently.
- **Sleep Mode:** Operates at a lower, quieter speed, often gradually decreasing speed over time for comfortable sleep.

5.4 Oscillation

Press the oscillation button to activate the automatic 90° left-right and 90° up-down oscillation for wider air distribution.

5.5 Timer Function

The timer allows you to set the fan to automatically turn off after a specified period, from 1 to 8 hours. Press the timer button repeatedly to select the desired duration.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the fan's performance and extends its lifespan.

1. **Before Cleaning:** Always unplug the fan from the power outlet.

- 2. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- 3. **Grille and Blades:** The front grille can be carefully removed (refer to specific instructions if provided in packaging for grille removal) to clean dust from the fan blades. Use a soft brush or vacuum cleaner with a brush attachment. Ensure the grille is securely reattached before operating.
- 4. **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Ensure the fan is plugged into a working outlet. Press the power button on the control panel or remote.
Weak airflow.	Low speed setting. Dust accumulation on blades/grille.	Increase the fan speed. Clean the fan blades and grilles as per maintenance instructions.
Remote control not working.	Dead batteries. Obstruction between remote and fan.	Replace batteries in the remote control. Ensure a clear line of sight to the fan's receiver.
Fan makes unusual noise.	Loose parts. Obstruction in fan blades.	Unplug the fan and check for any loose components. Unplug the fan and carefully remove any obstructions from the blades.

8. SPECIFICATIONS

Feature	Specification
Model Number	MHV1412R-G
Fan Type	DC High Velocity Stand Fan
Blade Size	12 inches
Power Source	DC Power Supply
Wattage	24 watts
Voltage	24 Volts
Number of Speeds	12
Operating Modes	3 (Normal, Natural, Sleep)
Timer	Up to 8 hours
Oscillation	90° Left-Right, 90° Up-Down Auto-Oscillation
Control Method	Remote Control, On-board Buttons
Dimensions (D x W x H)	34D x 33W x 110H centimetres (max height)

Feature	Specification
Material	Plastic
Color	White

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, service, or inquiries, please contact Mistral customer service through their official website or the contact information provided on your warranty card. Please have your model number (MHV1412R-G) and proof of purchase ready when contacting support.

© 2023 Mistral. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question