

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MISTRAL](#) /

> [MISTRAL Greenleaf MHV708R-G 7-inch DC High Velocity Stand Fan User Manual](#)

## MISTRAL MHV708R-G

# MISTRAL Greenleaf MHV708R-G 7-inch DC High Velocity Stand Fan

User Manual

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the MISTRAL Greenleaf MHV708R-G fan. Retain this manual for future reference.

- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not immerse the fan unit, cord, or plug in water or other liquids.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Keep the fan out of reach of children and pets.
- Do not operate the fan with a damaged cord or plug. If damaged, contact customer support for repair or replacement.
- Avoid inserting fingers or foreign objects into the fan grille.
- Do not use the fan in areas with high humidity or near water, such as bathrooms or laundries.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x MISTRAL Greenleaf MHV708R-G Fan Unit
- 1 x Remote Control
- 1 x User Manual

## SETUP AND ASSEMBLY

---

The MISTRAL Greenleaf MHV708R-G fan typically requires minimal assembly. Follow these steps:

1. Carefully remove all packaging materials from the fan unit.
2. Place the fan base on a firm, level surface.
3. Ensure the fan head is securely attached to the adjustable stand.

4. Adjust the height of the fan stand to your desired level. The fan features an adjustable height mechanism for versatile placement.
5. Connect the power cord to a standard electrical outlet.



Image: Front view of the MISTRAL Greenleaf MHV708R-G fan, illustrating its adjustable height feature. The fan has a white body with a wooden-look grille.

## OPERATING INSTRUCTIONS

---

The MISTRAL Greenleaf MHV708R-G fan can be operated using the control panel on the base or the included remote control.

### Power On/Off

---

Press the **Power** button once to turn the fan on. Press it again to turn the fan off.

### Speed Control

---

The fan offers 8 speed settings. Press the **Speed** button repeatedly to cycle through the different airflow intensities, from gentle breeze to high velocity.

### Mode Selection

---

Select from 3 operating modes by pressing the **Mode** button. These modes typically include Normal, Natural, and Sleep, each providing a distinct airflow pattern.

## Oscillation

---

Activate the auto-oscillation feature by pressing the **Oscillation** button. The fan supports 70° left-right horizontal oscillation and 70° up-down vertical oscillation to distribute air across a wider area.



Image: Side view of the MISTRAL Greenleaf MHV708R-G fan, highlighting its adjustable tilt and oscillation capabilities.

## Timer Function

---

Set the fan to automatically turn off after a specified period, up to 7 hours, using the **Timer** button. Press repeatedly to adjust the duration.

## Remote Control

---

The included remote control allows for convenient operation of all fan functions from a distance. Ensure the remote has working batteries and is pointed towards the fan's receiver.

## MAINTENANCE

---

Regular cleaning helps maintain the fan's performance and extends its lifespan.

1. Always unplug the fan from the power outlet before cleaning.

2. Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
3. To clean the fan blades and grilles, gently remove any accumulated dust with a soft brush or vacuum cleaner attachment.
4. Ensure all parts are completely dry before plugging the fan back in and operating it.

## TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Fan does not oscillate.	Oscillation function not activated.	Press the Oscillation button on the control panel or remote.
Weak or no airflow.	Fan speed set too low; Grille or blades are dirty.	Increase the fan speed setting. Unplug the fan and clean the grille and blades.
Remote control not working.	Dead batteries; Obstruction between remote and fan.	Replace remote control batteries. Ensure a clear line of sight to the fan's receiver.

## SPECIFICATIONS

Technical details for the MISTRAL Greenleaf MHV708R-G fan:

Feature	Detail
Model	MHV708R-G
Form Factor	Floor Fan
Power Source	Corded Electric
Style	Stand Fan
Product Dimensions (D x W x H)	28.4D x 28.4W x 73H centimetres
Special Features	Adjustable Tilt, Oscillating, Remote Controlled, Timer
Included Components	Remote
Number of Speeds	8
Number of Modes	3
Timer	Up to 7 hours
Auto-Oscillation	70° Left-Right, 70° Up-Down

Feature	Detail
Power Consumption	24W

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your product or contact MISTRAL customer service. If you require technical assistance or have questions not covered in this manual, please reach out to MISTRAL customer support through their official website or contact channels.