

KSADBOSSBO 870B Body Camera

KSADBOSSBO 870B Body Camera 1080P Instruction Manual

Model: 870B Body Camera

1. INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your KSADBOSSBO 870B Body Camera. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The KSADBOSSBO 870B is a compact body camera designed for video and audio recording. It features 1080P resolution, 64GB built-in storage, motion detection, and IP64 waterproofing, making it suitable for various outdoor and security applications.

Package Contents:

- KSADBOSSBO Body Camera (built-in 64GB card) x 1
- Removable clips x 1
- 1/4 Screw clamp suit for car / bike holder x 1
- User manual x 1
- USB card reader & Card pin x 1



Image: The KSADBOSSBO 870B Body Camera shown with its various components, including the main unit, different clips, USB cable, and memory card reader.

Component Identification:

Refer to the diagram below for key component identification:

TWO WAYS FOR RECOGNIZING



**SUPPORT PC / PHONE/ PAD
VIEW & REPLAY**



**BUILT-IN 64GB CARD AND CARD
READER**

Image: A detailed diagram highlighting the Video Rec Button (Power ON/OFF), Video Rec Indicator LED (Blue), Motion Rec Indicator LED (Green), Charging Port (USB-C), Mic, Card Slot, Reset Hole, and Removable Mount.

3. SETUP

3.1 Charging the Battery

The camera is equipped with a built-in 1050mAh rechargeable battery. Before first use, fully charge the camera.

- Connect the camera to a power source using the provided USB-C cable.
- The charging indicator LED will illuminate during charging.
- A full charge provides approximately 5 hours of recording time and up to 6-7 hours of standby time.
- The camera supports 24/7 recording when continuously connected to a power source or power bank.

3.2 Memory Card

The camera comes with a built-in 64GB memory card. It supports up to a 128GB SD card (not included) for extended storage.

- The camera features loop recording, which creates 5-minute footage segments. When the memory limit is reached, the oldest recordings are automatically overwritten to make space for new footage.

3.3 Attaching Mounts

The KSADBOSSBO 870B includes two types of changeable clips for versatile mounting options:

1. **Standard Clip:** For attaching the camera to clothing, pockets, or straps.
2. **1/4 Screw Clamp:** Designed for compatibility with most car and bike holders, utilizing a standard 1/4-inch screw hole.



Image: Step-by-step visual guide demonstrating how to remove and attach the different mounting clips to the camera.

To replace the mounts:

- To remove: Push backward and pull up the existing clip simultaneously.
- To attach: Push down and push backward the new clip simultaneously until it clicks into place.



Image: The body camera securely mounted on a bicycle handlebar and a car dashboard, demonstrating its versatility with different holders.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on: Press and hold the Video Rec Button (Power ON/OFF) until the indicator light illuminates.
- To power off: Press and hold the Video Rec Button (Power ON/OFF) until the indicator light turns off.

4.2 Video Recording

- To start recording: Briefly press the Video Rec Button. The blue Video Rec Indicator LED will flash.
- To stop recording: Briefly press the Video Rec Button again. The blue LED will stop flashing.

4.3 Motion Detection Recording

The camera features a motion detection mode, effective up to 13 feet.

- To activate motion detection: Press the left button on the camera. The green Motion Rec Indicator LED will illuminate.
- In this mode, the camera will automatically begin recording when motion is detected and stop when motion ceases.
- To deactivate motion detection: Press the left button again. The green LED will turn off.

4.4 No LED Recording Mode

For discreet recording, you can disable the indicator LEDs.

- To activate No LED Recording Mode: Press two specific buttons on the camera simultaneously (refer to the product diagram for exact button locations).
- To deactivate: Repeat the same action.

4.5 Accessing Recordings

Recordings can be accessed directly from the camera or via the included card reader.



Image: Illustration showing two ways to access recordings: directly connecting the camera via USB to a computer, and using the provided USB card reader to access the SD card.

- **Direct Connection:** Connect the camera to a computer using the USB-C cable. The camera will be recognized as a removable storage device (compatible with most operating systems except iOS).
- **Using Card Reader:** For iOS users or for direct access to the SD card, insert the camera's SD card into the provided USB card reader, then connect the reader to your computer or compatible device.

5. MAINTENANCE

5.1 Waterproofing

The KSADBOSSBO 870B Body Camera is rated IP64 waterproof, meaning it is protected from dust ingress and splashing water from any direction. This makes it suitable for outdoor use and riding in light rain.

- **Important:** The camera is not designed for submersion. Avoid using it in heavy rain or while swimming, as it is not fully waterproof.

IP64 Waterproof

Can Handle all weather conditions



Image: The body camera covered in water droplets, illustrating its IP64 water resistance for outdoor conditions.

5.2 Cleaning

- Wipe the camera body with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Gently clean the lens with a microfiber cloth designed for optics.

6. TROUBLESHOOTING

6.1 Camera Not Turning On

- Ensure the battery is charged. Connect the camera to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- If the camera still does not turn on, try performing a reset using the reset pin in the reset hole (refer to the Component Identification diagram).

6.2 Recording Issues

- **No recording:** Check if the memory card is properly inserted and has sufficient space. The loop recording feature will overwrite old files when full.
- **Poor video quality:** Ensure the lens is clean and free from smudges or dirt.

6.3 Playback Issues on Computer

- Ensure your computer has a compatible media player installed (e.g., VLC Media Player, which is widely recommended for various video formats).
- If using VLC, and it prompts to build an index or stops playback, try updating VLC to the latest version or using a different media player.
- Ensure the camera is properly connected via USB or the SD card is correctly inserted into the card reader.

7. SPECIFICATIONS

Feature	Specification
Model Name	870B Body Camera
Video Capture Resolution	1080p
Viewing Angle	130 Degrees
Frame Rate	30 fps
Built-in Storage	64GB Micro SD card (included)
Max SD Card Support	128GB
Battery Life	6-7 hours (standby), approx. 5 hours (recording)
Water Resistance Level	IP64 Waterproof
Motion Detection	Yes (up to 13 ft)
Night Vision	No
Connectivity Technology	Wireless (No Bluetooth & Wi-Fi)
Video Encoding	H.264
Material	Plastic
Item Weight	4.2 ounces

8. WARRANTY AND SUPPORT

KSADBOSSBO is committed to providing quality products and customer service.

8.1 Warranty Information

- Your KSADBOSSBO 870B Body Camera comes with a **1-year limited guarantee**.
- This warranty includes replacement service for manufacturing defects.

8.2 Customer Support

For any questions or assistance with your product, please contact our customer service team:

- **Online:** Visit the product page on Amazon and use the "Customer questions & answers" section.
- **Email:** Refer to the contact information provided in your physical user manual for direct email support.

Our professional after-sales service team is available 24/7 and aims to respond to all inquiries within 24 hours.



Image: A customer service representative, symbolizing the 12-month warranty and commitment to responding to inquiries within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C53T8F4K>

More documents and user manuals: <https://manuals.plus/>