

General Trade GNR12033

L.DICTROLUX Table Grater 3.6 V 814 Instruction Manual

Model: GNR12033 | Brand: General Trade

1. INTRODUCTION

Thank you for choosing the L.DICTROLUX Table Grater 3.6 V 814. This rechargeable electric grater is designed for efficient and convenient grating of various food items, such as cheese, nuts, and chocolate. Please read this manual carefully before first use to ensure proper operation, maintenance, and safety.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your L.DICTROLUX Table Grater:

- Main Grater Unit (with motor and handle)
- Food Pusher
- Charging Cable
- Three Stainless Steel Grating Drums:
 - Fine Grating Drum
 - Medium Grating Drum
 - Flake/Coarse Grating Drum



Figure 2.1: Overview of the L.DICTROLUX Table Grater and its included accessories. The image displays the main white plastic grater body with a handle, a separate food pusher, and three distinct stainless steel grating drums designed for fine, medium, and flake/coarse results. The product packaging is also visible in the background.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Charge:** Before first use, fully charge the grater. Connect the charging cable to the grater's charging port and plug it into a suitable power outlet. An indicator light (if present) will show charging status.
3. **Clean Components:** Wash all removable parts (grating drums, food pusher) with warm, soapy water. Rinse thoroughly and dry completely before assembly. The main unit should only be wiped clean (see Maintenance section).
4. **Insert Grating Drum:** Select the desired grating drum (fine, medium, or flake). Align the drum with the opening on the main grater unit and insert it firmly until it clicks into place.
5. **Assemble Food Pusher:** Ensure the food pusher is ready for use by placing it near the grater's feeding chute.

4. OPERATING INSTRUCTIONS

1. **Prepare Food:** Cut food items (e.g., cheese, nuts) into pieces that fit comfortably into the grater's feeding chute.
2. **Position Grater:** Hold the grater firmly over a bowl or plate to collect the grated food.
3. **Start Grating:** Place the food item into the feeding chute. Press and hold the power button (if applicable) or activate the grating mechanism.
4. **Use Food Pusher:** Gently press the food pusher down to guide the food towards the rotating grating drum. Do not apply excessive force.
5. **Continue Grating:** Continue until all food is grated or the desired amount is achieved.
6. **Stop Grating:** Release the power button or deactivate the mechanism.

7. **Empty:** Carefully remove the grated food from the collection area.

Safety Precautions:

- Keep fingers and utensils away from the grating drum during operation.
- Always use the food pusher to guide food. Never use your hands.
- Do not attempt to grate frozen or extremely hard food items as this may damage the motor or grating drums.
- Ensure the grater is fully assembled before use.
- Do not immerse the main grater unit in water or any other liquid.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grater.

1. **Power Off:** Always ensure the grater is turned off and disconnected from any charging source before cleaning.
2. **Disassemble:** Remove the grating drum and food pusher from the main unit.
3. **Clean Removable Parts:** Wash the grating drums and food pusher with warm, soapy water. Use a brush to remove any stubborn food residue from the grating surfaces. Rinse thoroughly.
4. **Dry Removable Parts:** Dry all removable parts completely before reassembling or storing.
5. **Clean Main Unit:** Wipe the exterior of the main grater unit with a damp cloth. Do not immerse the main unit in water or place it under running water.
6. **Storage:** Store the grater and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.

IMPORTANT: This product is NOT dishwasher safe. Hand wash only.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grater does not turn on.	Battery is low or depleted.	Charge the grater fully.
Grating performance is poor.	Grating drum is clogged or dull. Food item is too hard.	Clean the grating drum thoroughly. Ensure food is not frozen or excessively hard.
Grater stops during operation.	Overload protection activated. Battery is low.	Reduce the amount of food being grated. Allow the motor to cool down. Charge the battery.
Difficulty inserting/removing grating drum.	Drum is misaligned or residue is present.	Ensure correct alignment. Clean any food residue from the drum and housing.

7. SPECIFICATIONS

Model: GNR12033
Brand: General Trade
Power: 3.6 V (Rechargeable)
Material: Aluminum (body), Stainless Steel (grating drums)
Color: White
Item Weight: 2.2 pounds (approx. 1 kg)
Package Dimensions: 29.72 x 23.62 x 19.69 inches
Dishwasher Safe: No

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact the retailer where the product was acquired. You may also visit the official General Trade website for further assistance. Please have your model number (GNR12033) and purchase date ready when contacting support.

© 2025 General Trade. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C53Z3Q6W>

More documents and user manuals: <https://manuals.plus/>