

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Walker Edison](#) /

› [Walker Edison Tage Modern Pull-Open Door Low TV Stand \(Model TROM2FSB\) User Manual](#)

Walker Edison TROM2FSB

Walker Edison Tage Modern Pull-Open Door Low TV Stand (Model TROM2FSB) User Manual

For TVs up to 65 Inches, 58 Inch, Solid Black

1. INTRODUCTION

Thank you for choosing the Walker Edison Tage Modern Pull-Open Door Low TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and retain them for future reference.

This TV stand is designed to accommodate televisions up to 65 inches, offering a stylish and functional solution for your entertainment needs. It features two open storage cubbies and two cabinets with stylish finger-pull door openings, along with a cord management port to keep cables tidy.



Image 1.1: The Walker Edison Tage Modern Pull-Open Door Low TV Stand in Solid Black, showcasing its minimalist design and storage compartments.

2. SAFETY INFORMATION

- **Read all instructions:** Before assembly and use, carefully read and understand all instructions provided in this manual.

- **Adult assembly required:** This product requires adult assembly. Keep children and pets away from the assembly area.
- **Use on a level surface:** Always place the TV stand on a flat, level, and stable surface to prevent tipping.
- **Weight limits:** Do not exceed the maximum weight capacity. The surface supports up to 60 lbs. and open shelves support up to 10 lbs. each. Overloading can cause instability and injury.
- **TV size:** This stand is designed for TVs up to 65 inches. Ensure your TV's base fits within the stand's dimensions.
- **Tip-over prevention:** For added safety, consider securing the TV stand to a wall using an anti-tip kit (not included, but highly recommended).
- **Proper disposal:** Dispose of all packaging materials responsibly.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- 1 x TV Stand (disassembled components)
- 1 x Assembly Instruction Manual
- 1 x Hardware Pack (containing all necessary screws, dowels, cam locks, etc.)

4. ASSEMBLY INSTRUCTIONS

Assembly of the Walker Edison Tage TV Stand requires two adults. Please follow the step-by-step instructions provided in the included Assembly Instruction Manual. Ensure you have a clear, spacious area for assembly and the necessary tools (typically a Phillips head screwdriver, not included).

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Identify Hardware:** Refer to the hardware list in your separate assembly manual to identify all screws, dowels, and cam locks.
3. **Follow Step-by-Step Diagrams:** The assembly manual contains detailed diagrams for each step. Pay close attention to the orientation of each piece.
4. **Secure Connections:** Ensure all cam locks and screws are tightened securely, but do not overtighten to avoid damaging the engineered wood.
5. **Attach Doors:** Install the cabinet doors according to the instructions, ensuring they open and close smoothly.
6. **Final Placement:** Once assembled, carefully move the TV stand to its desired location.

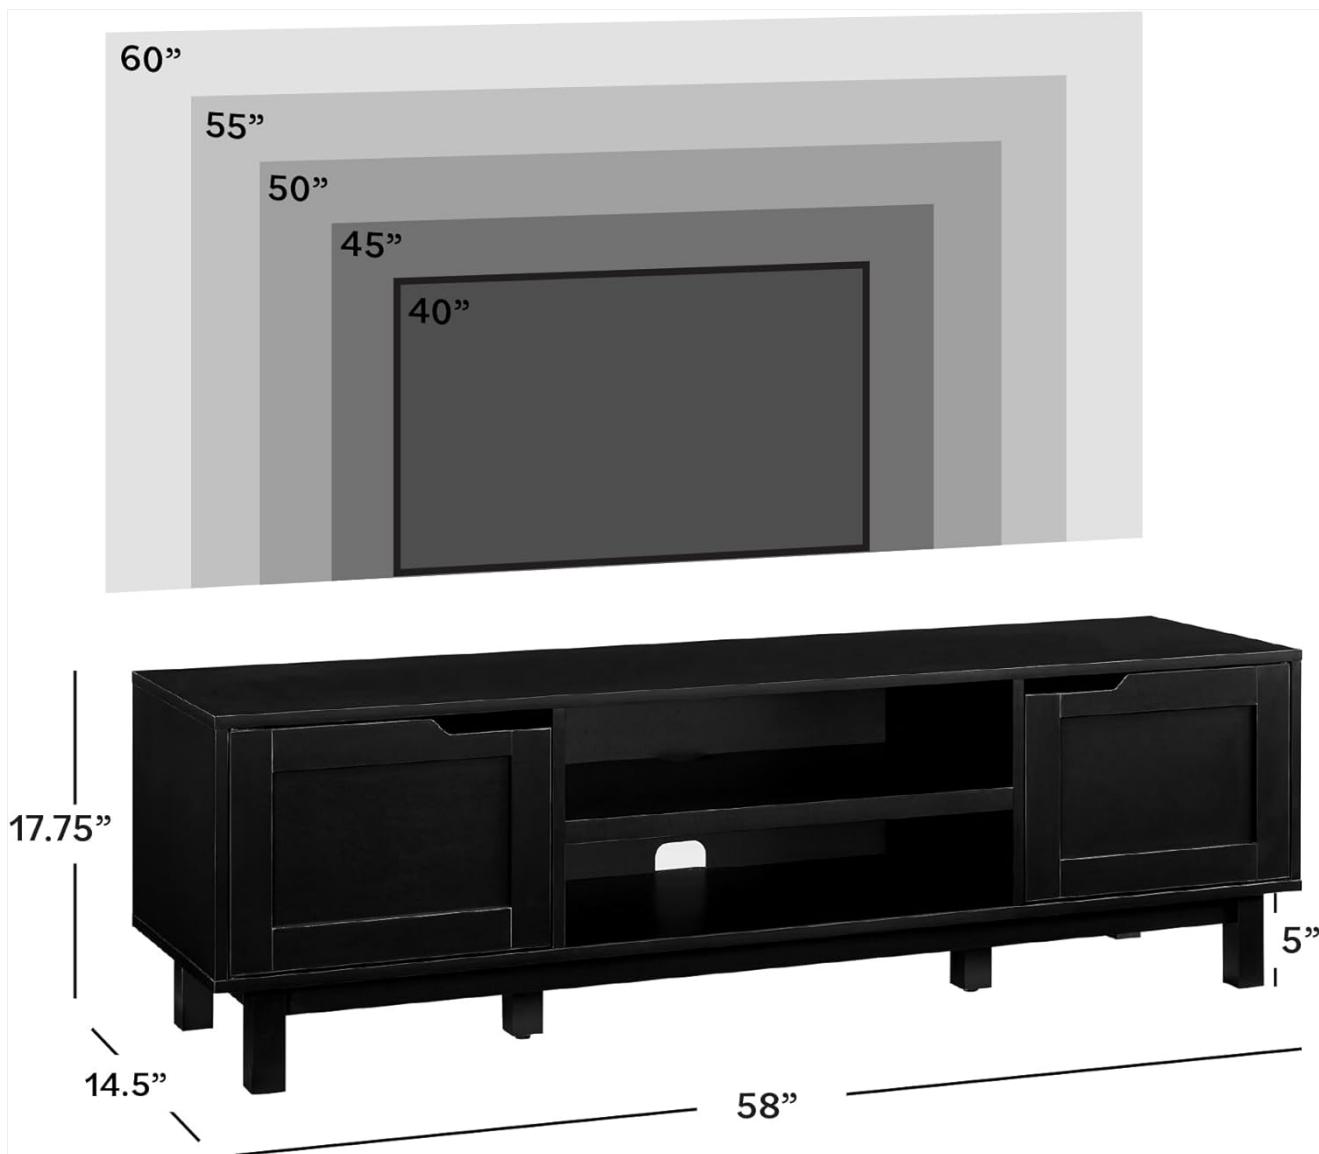


Image 4.1: Dimensional diagram of the TV stand (58" L x 14.5" W x 17.75" H) and visual representation of compatible TV sizes up to 65 inches.

Note: Some users have reported difficulty with cam locks. Ensure they are properly aligned before tightening to prevent breakage. Spare parts are often included.

5. USAGE GUIDELINES

This TV stand is designed for indoor use only. Follow these guidelines for optimal performance and longevity:

- **TV Placement:** Place your television centrally on the top surface. Ensure the TV's base does not overhang the edges of the stand.
- **Weight Distribution:** Distribute weight evenly across the top surface and shelves. Avoid placing heavy items on the edges.
- **Storage:** Utilize the two open storage cubbies for media devices like soundbars or streaming boxes. The two cabinets with pull-open doors provide concealed storage for other items.
- **Cord Management:** Use the integrated cord management port at the back of the stand to route and organize cables, maintaining a neat appearance and preventing tangles.



Image 5.1: The TV stand with its two cabinet doors open, revealing the internal storage space suitable for media consoles, books, or other items, alongside the central open shelves.

6. CARE AND MAINTENANCE

To keep your Walker Edison Tage TV Stand in excellent condition, follow these simple care instructions:

- **Cleaning:** Wipe the surface with a dry, soft cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes that may damage the laminate finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent moisture damage.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Keep the stand away from direct sunlight and excessive moisture.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.



Image 6.1: A close-up view of the solid black laminate finish, highlighting the material and construction details.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable	Loose connections; uneven floor.	Ensure all screws and cam locks are tightened. Move the stand to a level surface or use shims if necessary.
Doors do not align properly	Hinges installed incorrectly; loose hinge screws.	Refer to the assembly manual for correct hinge installation. Adjust hinge screws to align doors.
Missing or damaged parts	Packaging error; transit damage.	Do not proceed with assembly. Contact Walker Edison customer support immediately for replacement parts.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Number	TROM2FSB
Material	Engineered Wood (MDF and durable laminate)
Color	Solid Black
Product Dimensions (L x W x H)	58 x 14.5 x 17.75 inches
Item Weight	55 pounds
Maximum Recommended Load (Top Surface)	60 Pounds
Maximum Recommended Load (Shelves)	10 Pounds each
Accommodates TVs Up To	65 inches
Number of Shelves	3 (1 fixed, 2 within cabinets)
Special Features	2 open storage cubbies, Stylish finger-pull door openings, Cord management port

9. WARRANTY AND CUSTOMER SUPPORT

Warranty: This Walker Edison Tage TV Stand comes with a 90-day limited manufacturer warranty. Please refer to the warranty documentation included with your product for specific terms and conditions.

Customer Support: For assistance with assembly, missing parts, or any other inquiries, please visit the official Walker Edison store or contact their customer service directly. You can find more information and support resources at the [Walker Edison Store on Amazon](#).