



Manuals.plus /

› Lorelli /

› Lorelli Twin Twin Double Stroller Instruction Manual

## Lorelli 10020072386

# Lorelli Twin Twin Double Stroller Instruction Manual

Model: 10020072386 | Brand: Lorelli

[Safety Information](#)  
[Instructions](#)

[Package Contents](#)  
[Maintenance](#)

[Setup & Assembly](#)  
[Troubleshooting](#)

[Operating](#)  
[Specifications](#)

## 1. SAFETY INFORMATION

---

Read all instructions carefully before assembly and use of the Lorelli Twin Twin Double Stroller. Failure to follow these instructions could result in serious injury to your child.

- Always use the 5-point safety harness to secure your child in the stroller.
- Never leave children unattended in the stroller.
- Ensure all locking devices are engaged before use.
- Do not overload the storage basket or hang bags on the handle, as this can cause the stroller to become unstable.
- The stroller is designed for two children. Do not exceed the maximum recommended weight of 15 kg per child (total 30 kg).
- Avoid placing hot liquids or heavy objects in the cup holders.
- Keep children clear of moving parts during adjustment or folding.
- Regularly check the stroller for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.
- This stroller is not suitable for children under 6 months without appropriate accessories.

## 2. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly:

- Stroller Frame
- 2 Seat Units with Canopies
- 4 Wheels (2 front swiveling, 2 rear)
- 2 Footcovers
- 1 Shopping Basket (integrated)
- 1 Organizer Bag
- Instruction Manual (this document)

## 3. SETUP & ASSEMBLY

---

### 3.1. Unfolding the Stroller Frame

Carefully remove the stroller frame from its packaging. Release any transport locks and unfold the frame until it clicks securely into place. Ensure all frame joints are locked before proceeding.



# Kinderwagen Twin

Bis zu 3 Jahren

Maximum Gewicht **15kg pro Kind**

**14,7kg**



**Fußsäcke**

Footcovers



**Falten mit einer Hand**

Folding by one hand



**Einkaufskorb mit ausreichend Platz**

Shopping basket with sufficient space




**Verstellbare Rückenlehne**

Adjustable backrest



**Schwenkbare Vorderreifen**

Swiveling front wheels

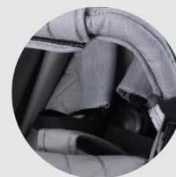

**5-Punkt-Sicherheitsgurte**

5-point safety belts

Image: Stroller frame and components laid out for assembly.

## 3.2. Attaching the Wheels

Attach the front wheels by inserting their shafts into the designated slots on the front legs of the stroller frame until they click. Repeat for the rear wheels. Ensure all wheels are securely attached and rotate freely.



Image: Swiveling front wheels for enhanced maneuverability.

### 3.3. Installing the Seat Units

Align each seat unit with the attachment points on the stroller frame. Press down firmly until each seat unit locks into place. Verify that both seats are securely fastened before placing children in them.



Image: Fully assembled Lorelli Twin Twin Double Stroller.

### 3.4. Attaching Accessories

Attach the footcovers to the bottom of each seat unit. The organizer bag can be hung on the stroller handle for convenience.



**Fußsäcke**  
Footcovers



**5-Punkt-  
Sicherheitsgurte**  
5-point safety belts

**Verstellbare  
Fußstütze**  
Adjustable footrest



**Verdeckfenster**  
Canopy windows



Image: Footcovers attached to the seat units.



Image: Organizer bag for storing essentials.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Securing Your Child with the 5-Point Harness

Place your child in the seat. Bring the shoulder straps over the child's shoulders and the waist straps around their waist. Connect the buckles and adjust the straps for a snug, secure fit. Ensure the harness is not twisted.



Image: Detail of the 5-point safety harness.

#### **4.2. Adjusting the Backrest and Footrest**

The backrests can be adjusted independently to multiple recline positions by pressing the levers on the sides of each seat. The footrests can also be adjusted for your child's comfort.



Verstellbare  
Rückenlehne  
Adjustable backrest



Faltbares  
Verdeck  
Foldable canopy



Organizer-Tasche  
Organising bag



Image: Adjustable backrest for customized comfort.

### 4.3. Using the Canopies

Each seat has an independent canopy that can be extended or retracted to provide shade and protection from the elements. The canopies are foldable for compact storage.



Image: Foldable canopy for sun and wind protection.

#### 4.4. Engaging the Brakes

To engage the brakes, press down firmly on the brake pedal located near the rear wheels. Ensure the stroller is stationary before releasing your grip. To release, lift the brake pedal.

#### 4.5. Folding the Stroller (One-Hand Folding System)

The Lorelli Twin Twin features a one-hand folding system for convenience. Locate the folding mechanism (usually on the handle or frame) and follow the specific instructions in the quick start guide or product video for your model. Ensure children are clear of the stroller before folding.

## 5. MAINTENANCE

---

- **Cleaning:** The fabric parts of the stroller can be cleaned with a damp cloth and mild soap. Do not use harsh detergents or bleach. The frame can be wiped clean with a soft, damp cloth.

- **Wheels:** Regularly check the wheels for debris and ensure they rotate smoothly. Lubricate axles if necessary.
- **Storage:** Store the stroller in a dry, cool place away from direct sunlight to prevent fading and material degradation.
- **Inspection:** Periodically inspect all fasteners, rivets, and moving parts to ensure they are secure and functioning correctly.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not fold/unfold smoothly.	Locking mechanisms are engaged or debris is obstructing movement.	Ensure all locks are disengaged. Clear any obstructions. Lubricate moving parts if needed.
Wheels are stiff or squeaky.	Dirt or debris in the wheel mechanism, lack of lubrication.	Clean wheels and axles. Apply a silicone-based lubricant.
Stroller pulls to one side.	Uneven weight distribution, bent wheel axle, or locked swivel wheel.	Distribute weight evenly. Check for bent axles. Ensure swivel wheels are unlocked if desired.
Harness is difficult to buckle/unbuckle.	Debris in the buckle, or mechanism is stiff.	Clean the buckle mechanism. Avoid forcing it.

## 7. SPECIFICATIONS

**Product Dimensions:** 88 x 81 x 106 cm

**Item Weight:** 14.7 kg

**Manufacturer:** Lorelli

**Model Number:** 10020072386

**Color:** Grey/Black

**Material:** Polyester, Metal

**Frame Material:** Metal

**Age Range (Description):** Child

**Harness Type:** 5-point

**Recommended Maximum Weight:** 30 kg (15 kg per child)

**Folded Size:** 93 cm (L) x 43 cm (W) x 106 cm (H)

**Stroller Type:** Standard Stroller

**Fabric Type:** 100% Polyester

**Canopy Material:** 100% Polyester

**Seat Material:** Polyester

**Wheel Material:** Rubber

**Installation Type:** Foldable

**Car Seat Compatible:** No

**Harness Feature:** Adjustable straps

**Seat Capacity:** 2

**Special Features:** One-hand folding system

**Integrated Lamp:** No

**Number of Wheels:** 4

**Buggy Brake System:** Yes

**Included Components:** Shopping basket, organizer bag

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided with your purchase or contact Lorelli customer support directly. Keep your proof of purchase for any warranty claims.

For further assistance, technical support, or to order replacement parts, please visit the official Lorelli website or contact their customer service department.