

ANTEQI Blue Stopwatch Timer

ANTEQI Waterproof Stopwatch Timer User Manual

Model: Blue Stopwatch Timer

1. INTRODUCTION

Thank you for choosing the ANTEQI Waterproof Stopwatch Timer. This device is designed for precise timekeeping in various sports and training activities. It features a large display, simple operation, and a waterproof design, making it suitable for coaches, athletes, and enthusiasts. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

2. SAFETY INFORMATION

- Keep the stopwatch away from extreme temperatures and direct sunlight.
- Avoid dropping the device or subjecting it to strong impacts.
- While waterproof, avoid prolonged submersion beyond specified depths or high-pressure water jets.
- Do not attempt to disassemble the stopwatch beyond battery replacement, as this may void the warranty and compromise its waterproof seal.
- Dispose of used batteries responsibly according to local regulations.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your ANTEQI Stopwatch Timer.

Simple Stopwatch



Figure 3.1: Front view of the ANTEQI Stopwatch Timer with button labels.

ON/OFF Button: Located at the top center. Long press for 3 seconds to power on or off.

Split/Reset Button: Located on the top left. Used to record split times or reset the stopwatch.

Start/Stop Button: Located on the top right. Used to start and stop the timer.

Large Display: Shows minutes, seconds, and 1/100th seconds for clear readability.

4. SETUP

4.1 Battery Installation

The stopwatch comes with a CR2032 battery pre-installed. If the display is dim or unresponsive, you may need to replace the battery.

1. Locate the small screws on the back of the stopwatch.

2. Using a small screwdriver, carefully remove the screws and the back cover.
3. Gently remove the old CR2032 battery.
4. Insert a new CR2032 battery with the positive (+) side facing up.
5. Replace the back cover and secure it with the screws, ensuring a tight seal to maintain waterproof integrity.

Your browser does not support the video tag.

Video 4.1: Demonstration of how to uninstall and replace the battery in the stopwatch.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn **ON** the stopwatch, press and hold the **ON/OFF Button** (top center) for approximately 3 seconds until the display activates.
- To turn **OFF** the stopwatch, press and hold the **ON/OFF Button** (top center) for approximately 3 seconds. This feature helps conserve battery life.

5.2 Basic Timing (Start, Stop, Reset)

1. Ensure the stopwatch is powered on and the display shows "00:00:00".
2. Press the **Start/Stop Button** (top right) once to begin timing. The display will start counting.
3. To pause the timer, press the **Start/Stop Button** again. The display will hold the current time.
4. To resume timing from the paused point, press the **Start/Stop Button** once more.
5. To stop the timer completely, press the **Start/Stop Button**.
6. To reset the timer to "00:00:00", press the **Split/Reset Button** (top left) after the timer has been stopped.

Your browser does not support the video tag.

Video 5.1: Demonstration of basic stopwatch operation, including start, stop, and reset functions.

5.3 Split/Lap Timing

The stopwatch can record split times, allowing you to measure intermediate segments of an event without stopping the main timer.

1. Start the timer by pressing the **Start/Stop Button**.
2. At the end of a lap or segment, press the **Split/Reset Button**. The display will show the split time while the main timer continues to run in the background.
3. Press the **Split/Reset Button** again to return to the running main timer display.
4. Repeat step 2 and 3 for subsequent split times.
5. To stop the main timer, press the **Start/Stop Button**.
6. To reset the stopwatch, press the **Split/Reset Button** after the timer has been stopped.

5.4 Waterproof Functionality

The ANTEQI Stopwatch Timer is designed to be waterproof up to 50 meters, making it suitable for use in wet conditions such as swimming or rain. Ensure the battery compartment is securely closed to maintain its waterproof integrity.

Waterproof Design

50m Waterproof, Can Be Used While Swimming



Figure 5.1: The stopwatch is designed for use in wet environments.

Your browser does not support the video tag.

Video 5.2: A demonstration of the stopwatch's waterproof capabilities.

6. MAINTENANCE

6.1 Cleaning

To clean your stopwatch, wipe it with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the casing or display.

6.2 Battery Replacement

Refer to Section 4.1 for detailed instructions on replacing the CR2032 battery. Ensure the battery is correctly oriented and the back cover is securely fastened to maintain waterproof integrity.

7. TROUBLESHOOTING

- **Display is blank or dim:**
 - Ensure the stopwatch is powered on by long-pressing the ON/OFF button.
 - The battery may be low or depleted. Replace the CR2032 battery as described in Section 4.1.
- **Buttons are unresponsive:**
 - Check if the stopwatch is powered on.
 - Ensure there is no debris or obstruction around the buttons.
 - If the issue persists after battery replacement, contact customer support.
- **Water ingress after use in water:**
 - Immediately power off the device if possible.
 - This indicates a compromise in the waterproof seal. Ensure the back cover screws were tightened properly after any battery replacement.
 - Contact customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	ANTEQI
Model Number	Blue Stopwatch Timer
Material	Plastic
Product Dimensions	0.7"D x 2.5"W x 3.15"H
Item Weight	1.87 ounces (53 Grams)
Screen Size	3.15 Inches
Water Resistance	50M (Waterproof)
Battery Type	1 CR2032 (included)
Functions	Start, Stop, Split, Reset, ON/OFF

9. WARRANTY AND SUPPORT

ANTEQI offers a satisfaction guarantee and 24-hour customer service. If you encounter any quality problems with your stopwatch timer, please contact ANTEQI customer support for warranty services. Your satisfaction is important to us. For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official ANTEQI store on Amazon: [ANTEQI Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question