



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny Pop-up Folding Gazebo Instruction Manual

## Outsunny 84C-430V00WT

# Outsunny Pop-up Folding Gazebo Instruction Manual

Model: 84C-430V00WT

Brand: Outsunny

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Outsunny Pop-up Folding Gazebo. Please read this manual thoroughly before assembly and retain it for future reference. Proper assembly and care will ensure the longevity and safe use of your gazebo.



Image: The Outsunny Pop-up Folding Gazebo in white, shown fully assembled with its black carry bag. This image illustrates the complete product and its portability.

## SAFETY INFORMATION

---

Always prioritize safety during assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Ensure all components are present and undamaged before beginning assembly. Do not use if any parts are missing or broken.
- Assemble the gazebo on a flat, stable surface.
- Always secure the gazebo to the ground using the provided ground stakes and guy ropes, especially in windy conditions.
- Do not use the gazebo in extreme weather conditions, such as heavy rain, strong winds, or snow. Disassemble and store the gazebo to prevent damage.
- Keep children and pets away from the assembly area.
- Do not hang heavy objects from the frame.
- Keep open flames and heat sources away from the fabric.

## PACKAGE CONTENTS

---

Before assembly, verify that all the following components are included in your package:

- Folding Frame (Pre-assembled)
- Canopy Top Fabric
- Removable Sidewalls (4 pieces, including 2 with windows and 2 with zippered doors)
- Ground Stakes
- Guy Ropes
- Carry Bag

## SETUP INSTRUCTIONS

---

Follow these steps for quick and easy assembly of your pop-up gazebo. It is recommended that two people perform the assembly.

### **Step 1: Unpack and Extend the Frame**

Remove the folding frame from the carry bag. With a person at each end, gently pull the frame outwards to begin extending it. Do not force the frame.

# DESIGN POP-UP

Sortir d'un sac de transport



Ajouter la canopée



Ouvrir le cadre



Ajouter des parois latérales



Image: A visual guide showing the pop-up design assembly process. It illustrates taking the frame out of the transport bag, adding the canopy, opening the frame, and finally adding the side walls.

## Step 2: Attach the Canopy Top

Before fully extending the frame, place the canopy top fabric over the partially extended frame. Ensure the corners of the canopy align with the corners of the frame. Secure the canopy to the frame using the integrated velcro straps or ties.



Image: A close-up view of the internal frame structure of the gazebo, showing the central hub and connecting bars. This illustrates where the canopy attaches.

### **Step 3: Fully Extend and Lock the Frame**

Continue pulling the frame outwards until it is fully extended. Push up on the central hub of the frame until it locks into place. Ensure all four legs are fully extended and locked. Adjust the height of the legs by pressing the release buttons and sliding the inner leg sections to the desired height, then ensure they lock securely.

### **Step 4: Attach the Sidewalls**

The gazebo includes four removable sidewalls: two with large windows and two with zippered doors. Attach the sidewalls to the frame using the velcro straps located along the top and sides of each panel. The sidewalls can be attached in any configuration to suit your needs, allowing for fully enclosed, half-open, or fully open setups.



Image: A view of the gazebo showing one of the zippered doors pulled back and a sidewall with large windows. This highlights the accessibility and light permeability features.



Image: A close-up of the gazebo's sidewall, showing the zipper and the method of attachment to the frame, indicating how the walls can be opened or closed.

### **Step 5: Secure the Gazebo**

For stability, especially outdoors, secure the gazebo using the provided ground stakes and guy ropes. Insert the ground stakes through the footplates of each leg and into the ground. Attach the guy ropes to the corners of the canopy and stake them firmly into the ground at an angle, ensuring tension for maximum stability.



Image: The gazebo shown with guy ropes extending from the corners and ground stakes securing the legs. This image emphasizes the importance of proper anchoring for stability.

## OPERATING INSTRUCTIONS

Your Outsunny Pop-up Folding Gazebo is designed for versatile use in various outdoor settings.

- **Ventilation and Light:** The large windows on two of the sidewalls allow for ample light penetration when the gazebo is fully enclosed. For increased airflow, the zippered doors can be opened and tied back.
- **Water Drainage:** The canopy features 8 drainage holes on the top to prevent water accumulation during light rain, ensuring the canopy remains taut and prevents sagging.
- **UV Protection:** The 210D Oxford polyester fabric with silver coating provides effective protection against harmful UV rays, creating a shaded and comfortable space.
- **Versatile Configuration:** The removable sidewalls offer flexibility. You can use all four for full enclosure, remove some for an open-air feel, or use none for a simple canopy.

**Outsunny**  
by AOSOM



Image: The Outsunny gazebo positioned in a garden setting, demonstrating its use as a shaded area for outdoor furniture. This shows a typical operational setup.

# TISSU OXFORD 210D AVEC ENDUIT ARGENT

Résistant aux UV, vous offrant un espace frais et confortable



Image: A close-up of the gazebo canopy, highlighting the Oxford 210D fabric with silver coating for UV resistance and visible drainage holes designed to prevent water pooling.

## MAINTENANCE

Regular maintenance will extend the life of your gazebo.

- **Cleaning:** Clean the fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Wipe the steel frame with a damp cloth to remove dirt. Ensure the frame is dry before folding and storing to prevent rust.
- **Storage:** When not in use, disassemble the gazebo and store all components in the provided carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the frame for any signs of damage or wear. Check all connections and fabric for tears or fraying.

## TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Frame difficult to open/close	Not enough force applied evenly; mechanism stuck.	Ensure two people are extending/folding the frame evenly. Check for any obstructions or debris in the joints. Do not force.
Canopy not fitting properly	Canopy not aligned correctly; frame not fully extended.	Ensure the canopy corners are aligned with the frame corners. Verify that the frame is fully extended and locked at all points.
Gazebo unstable	Not properly secured; uneven ground; strong winds.	Always use ground stakes and guy ropes. Ensure the gazebo is on a level surface. Disassemble in strong winds.
Water pooling on canopy	Excessive rain; drainage holes blocked.	Ensure drainage holes are clear. If rain is heavy, consider disassembling the gazebo to prevent damage.

## SPECIFICATIONS

Feature	Detail
Model Number	84C-430V00WT
Overall Dimensions (L x W x H)	295 cm x 295 cm x 258 cm (approximately 3m x 3m x 2.58m)
Weight	14.8 kg
Canopy Material	210D Oxford Polyester with Silver Coating
Frame Material	Lacquered Alloy Steel
Color	White
UV Protection	Yes
Water Resistance Level	Water Repellent
Sidewalls	4 removable (2 with windows, 2 with zippered doors)
Recommended Use	Outdoor events, parties, temporary shade



Image: A diagram illustrating the key dimensions of the gazebo, including length, width, and height, providing a clear understanding of its size.

## WARRANTY INFORMATION

Outsunny products are manufactured with quality and care. For specific warranty details regarding your Pop-up Folding Gazebo, please refer to the warranty card included with your purchase or visit the official Outsunny website. Keep your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Outsunny customer support. You can find contact information on the official Outsunny website or through your retailer.

Official Outsunny Website: [Visit Outsunny Store on Amazon](#)

