

[Manuals.plus](#) /

› [Dysead](#) /

› Dysead AC Adapter Instruction Manual for Radio Shack Realistic PRO-37 20-138 Scanner Receiver

Dysead PRO-37 20-138

Dysead AC Adapter Instruction Manual

For Radio Shack Realistic PRO-37 20-138 Scanner Receiver

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Dysead AC Adapter, designed for compatibility with the Radio Shack Realistic PRO-37 20-138 Scanner Receiver. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Your Dysead AC Adapter is equipped with multiple safety mechanisms to ensure reliable operation and protection. Adhere to the following guidelines:

- **Compatibility:** Always ensure the adapter is compatible with your device's power requirements before connecting. Refer to your device's specifications.
- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to water, moisture, or high humidity.
- **Ventilation:** Ensure adequate ventilation around the adapter during operation to prevent overheating. Do not cover the adapter.
- **Cable Integrity:** Regularly inspect the power cord for any signs of damage, fraying, or exposed wires. Discontinue use if damage is found.
- **Proper Connection:** Insert the plug fully into the wall outlet and the device. A loose connection can cause overheating or fire.
- **Protection Features:** The adapter includes built-in protection against short circuiting, overvoltage, overcurrent, and internal overheating.

PREMIUM COPPER WIRE

Premium Power Cord effortlessly withstands every tug,
twist and tangle

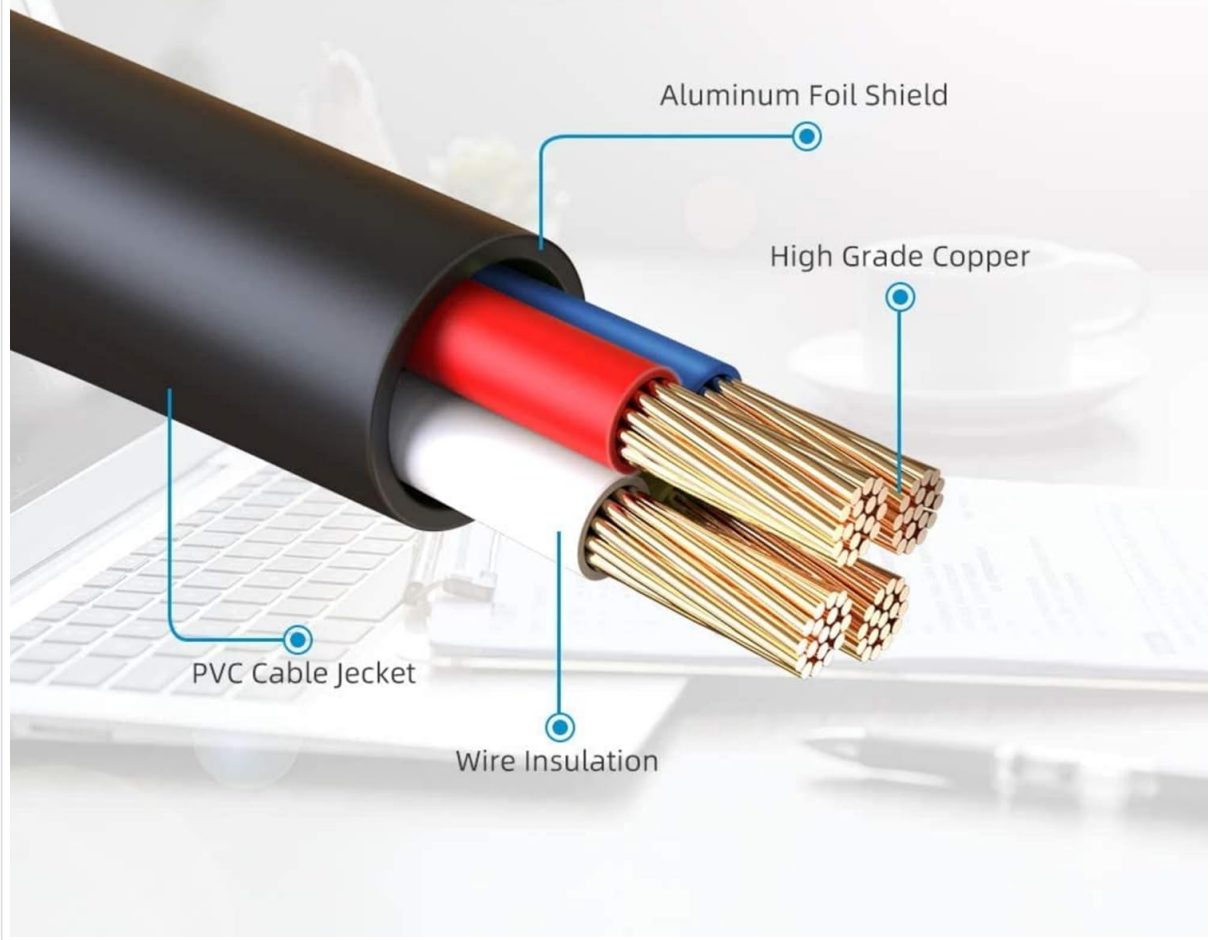


Image: The Dysead AC Adapter highlighting its five-fold safety protection system, including overheating, voltage, current, short-circuit, and electric leakage protection. The adapter is shown from various angles.

SETUP

1. **Unpack the Adapter:** Carefully remove the AC adapter from its packaging.
2. **Verify Compatibility:** Confirm that your Radio Shack Realistic PRO-37 20-138 Scanner Receiver requires a power input matching the specifications of this Dysead AC Adapter.
3. **Connect to Device:** Insert the DC output plug of the AC adapter firmly into the power input jack of your scanner receiver.
4. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard AC 100-240V 50/60Hz wall outlet.
5. **Power On:** Once connected, your scanner receiver should receive power.

More Details - Ensure Safety and Stability



Image: A front view of the Dysead AC Adapter, illustrating its compact design with the AC input prongs and the DC output cable ready for connection.

OPERATING INSTRUCTIONS

The Dysead AC Adapter is designed for straightforward operation:

- Once properly connected to both the power outlet and your device, the adapter will supply power automatically.
- The adapter operates with high power exchange efficiency, which helps maintain a stable working temperature and consistent power delivery to your device.
- No user intervention is required during normal operation.




Scope of application



Small stereo



Cooling fan

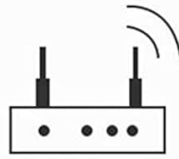

router



Small table lamp



LCD Monitor



TV camera

Image: The Dysead AC Adapter illustrating its broad scope of application, compatible with various electronic devices including small stereos, cooling fans, routers, small table lamps, LCD monitors, and TV cameras.

MAINTENANCE

To ensure the longevity and optimal performance of your AC adapter, follow these maintenance tips:

- **Cleaning:** Disconnect the adapter from the power outlet and device before cleaning. Use a dry, soft cloth to wipe the exterior. Do not use liquid cleaners.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharp bends, twists, or excessive pulling on the power cord. The adapter features a premium copper wire construction designed for durability against everyday wear.
- **Inspection:** Periodically check the adapter casing and cable for any physical damage.



Image: A detailed cross-section view of the power cable, illustrating its robust construction with a PVC cable jacket, wire insulation, aluminum foil shield, and high-grade copper wires, emphasizing its durability.

TROUBLESHOOTING

If you encounter issues with your Dysead AC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not receiving power.	Loose connection, faulty outlet, incompatible device.	Ensure all connections are secure. Test the outlet with another device. Verify the adapter's compatibility with your scanner receiver.
Adapter feels unusually hot.	Poor ventilation, excessive load, internal fault.	Disconnect immediately. Ensure the adapter is in a well-ventilated area. If overheating persists, discontinue use.

Problem	Possible Cause	Solution
Intermittent power supply.	Damaged cable, loose connection.	Inspect the cable for damage. Re-secure all connections. If the issue continues, the adapter may need replacement.

SPECIFICATIONS

Feature	Detail
Brand	Dysead
Model Compatibility	Radio Shack Realistic PRO-37 20-138 Scanner Receiver
Input Voltage	AC 100-240V, 50/60Hz
Power Source	Corded Electric
Item Weight	4 Ounces
Main Power Connector Type	2 Pin
Color	Black
Manufacturer	Dysead

© 2023 Dysead. All rights reserved.

For further assistance, please contact Dysead customer support.