

AULCMEET RAX33

AULCMEET RAX33 Remote Control Instruction Manual

Compatible with Yamaha Stereo Receiver R-S202 and R-S202BL

1. INTRODUCTION

This instruction manual provides detailed information on the operation and features of your AULCMEET RAX33 replacement remote control. This remote is designed to be compatible with Yamaha Stereo Receiver models R-S202 and R-S202BL, offering direct functionality without complex setup procedures.

2. PACKAGE CONTENTS

- AULCMEET RAX33 Remote Control (1 unit)
- Instruction Manual (this document)

Note: Batteries are not included and must be purchased separately.

3. BATTERY INSTALLATION

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AA-sized batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Important: Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage. Do not mix old and new batteries, or different types of batteries.

4. SETUP AND COMPATIBILITY

The AULCMEET RAX33 remote control is designed for immediate use with compatible Yamaha Stereo Receiver models R-S202 and R-S202BL. No programming or setup is required. Simply install the batteries, and the remote is ready to operate your receiver.

Compatible Models:

- Yamaha R-S202 Stereo Receiver
- Yamaha R-S202BL Stereo Receiver
- Yamaha ZU49260 Audio/Video Receiver

5. BUTTON FUNCTIONS

The following section details the function of each button on the AULCMEET RAX33 remote control. Refer to the image below for visual reference.





Image 1: Layout of the AULCMEET RAX33 Remote Control. This image displays the full remote control with all its buttons and labels, including power, input selectors, tuning, volume, and playback controls.

Top Section

- **SLEEP:** Activates or adjusts the sleep timer function for the receiver.
- **POWER** (⏻): Toggles the receiver's power on or off.

Input Selection Buttons

- **LINE 1, LINE 2, LINE 3:** Selects the corresponding analog audio input source.
- **CD:** Selects the CD player input source.
- **TUNER:** Selects the built-in AM/FM tuner input source.
- **BAND:** Switches between AM and FM bands when the TUNER input is selected.

Tuner and Preset Controls

- **TUNING** (<< / >>): Adjusts the radio frequency manually.
- **PRESET** (< / >): Navigates through stored radio station presets.
- **MEMORY:** Stores the currently tuned radio station as a preset.
- **INFO:** Displays information related to the current input, such as RDS data for FM radio.

Audio Adjustment Controls

- **TREBLE** (- / +): Decreases or increases the treble audio level.
- **BASS** (- / +): Decreases or increases the bass audio level.
- **SPEAKERS A / B:** Selects speaker output group A, B, or A+B.
- **BALANCE** (L / R): Adjusts the audio balance between the left and right channels.

Central Navigation and Playback Controls

- **BLUETOOTH:** Activates Bluetooth pairing mode or selects the Bluetooth input source.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and settings.

- **ENTER:** Confirms selections within menus.
- **PLAY/PAUSE (▶||):** Starts or pauses playback for compatible audio sources.
- **SKIP BACK (K4) / SKIP FORWARD (▶▶I):** Skips to the previous or next track/chapter.
- **FAST REWIND (K44) / FAST FORWARD (▶▶▶):** Fast forwards or rewinds playback.

General Controls

- **MENU:** Accesses the receiver's main menu system.
- **DIMMER:** Adjusts the brightness of the receiver's display.
- **VOLUME (+ / -):** Increases or decreases the master volume level.
- **MUTE:** Mutes or unmutes the audio output.

Bottom Playback Controls

- **STOP (■):** Stops playback for compatible audio sources.
- **PAUSE (||):** Pauses playback for compatible audio sources.
- **PLAY (▶):** Starts playback for compatible audio sources.
- **DISC SKIP:** Skips to the next disc in a multi-disc player (if connected and compatible).
- **PREVIOUS TRACK (K4) / NEXT TRACK (▶▶I):** Skips to the previous or next track.
- **REWIND (K44) / FAST FORWARD (▶▶▶):** Fast forwards or rewinds playback.

6. OPERATING INSTRUCTIONS

To operate your Yamaha Stereo Receiver with the RAX33 remote control:

1. Ensure the remote has fresh batteries and a clear line of sight to the receiver's infrared sensor.
2. Press the **POWER** button to turn on the receiver.
3. Select your desired input source (e.g., **CD, TUNER, LINE 1, BLUETOOTH**) using the corresponding buttons.
4. Adjust the volume using the **VOLUME +** or **-** buttons.
5. Use the specific function buttons (e.g., **TUNING, PRESET, TREBLE, BASS**) to control the selected input or audio settings.

7. TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new AA batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the receiver's infrared sensor. The remote requires a direct line of sight.
- **Distance:** Operate the remote within a reasonable range of the receiver (typically up to 20 feet or 6 meters).
- **Receiver Power:** Confirm that the Yamaha receiver is powered on.

Specific Functions Not Working

- **Input Selection:** Ensure the correct input source is selected on the receiver for the function you are trying to use (e.g., CD playback controls will only work when the CD input is active).
- **Receiver Compatibility:** Verify that your receiver model (R-S202, R-S202BL) is listed as compatible.

8. SPECIFICATIONS

Feature	Specification
Model Number	RAX33
Brand	AULCMEET
Compatible Devices	Yamaha Stereo Receiver R-S202, R-S202BL, ZU49260
Connectivity Technology	Infrared (IR)
Power Source	2 x AA Batteries (not included)
Product Dimensions	8.2 x 2 x 0.7 inches (approx. 20.8 x 5.1 x 1.8 cm)
Item Weight	3 ounces (approx. 85 grams)


9. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Replace batteries promptly when they are depleted. Remove batteries if the remote is not used for extended periods to prevent corrosion.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

10. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please contact the seller or manufacturer directly through your purchase platform. Keep your purchase receipt as proof of purchase.

Related Documents - RAX33



[Yamaha RAX33 Replacement Remote Control Functions | Mandis Shop](#)

Detailed comparison of original Yamaha RAX33 remote control functions versus a replacement remote from Mandis Shop. Find button mappings and compatibility information.