

EVEAGE Q7

EVEAGE Q7 Cordless Power Pressure Washer User Manual

Model: Q7

1. INTRODUCTION

The EVEAGE Q7 Cordless Power Pressure Washer is a portable, battery-powered cleaning tool designed for various applications, from car washing to home and garden cleaning. It features a powerful brushless motor and multiple pressure modes for efficient and versatile cleaning. This manual provides essential information for the safe and effective operation and maintenance of your device.

2. SAFETY INFORMATION

Please read and understand all safety instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- Do not expose the battery to water.
- Always wear appropriate personal protective equipment, such as safety glasses, when operating the pressure washer.
- Ensure the work area is clear of obstacles and bystanders.
- Never point the spray gun at people, animals, or electrical equipment.
- Keep children and pets away from the operating area.
- Disconnect the battery and water supply before performing any maintenance or cleaning.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any parts are missing or damaged, please contact customer support.

PACKAGE DETAIL



Image: Overview of the EVEAGE Q7 Cordless Power Pressure Washer and its included accessories.

- EVEAGE Q7 Pressure Washer Gun
- Rechargeable Battery (4000 mAh)
- Battery Charger
- Water Pipe (19.6 ft hose)
- Extension Rod
- Water Filter
- Universal Faucet Adapter
- Foam Pot
- Storage Case

4. SETUP INSTRUCTIONS

Follow these steps to prepare your EVEAGE Q7 pressure washer for use.

4.1 Charging the Battery

Before first use, fully charge the battery. Connect the charger to the battery and plug it into a standard power outlet. The indicator light on the charger will show the charging status. Ensure the battery is fully charged for optimal performance and runtime.

4.2 Assembling the Pressure Washer

1. Attach the extension rod to the main pressure washer gun by twisting it securely.
2. Insert the charged battery into the battery slot on the handle of the pressure washer until it clicks into place.
3. Connect the water pipe to the inlet on the pressure washer gun. Ensure a tight connection to prevent leaks.
4. Attach the water filter to the other end of the water pipe. This filter helps prolong the service life of the machine by preventing dirt and sand from entering.

MULTI-SCENE APPLICATION

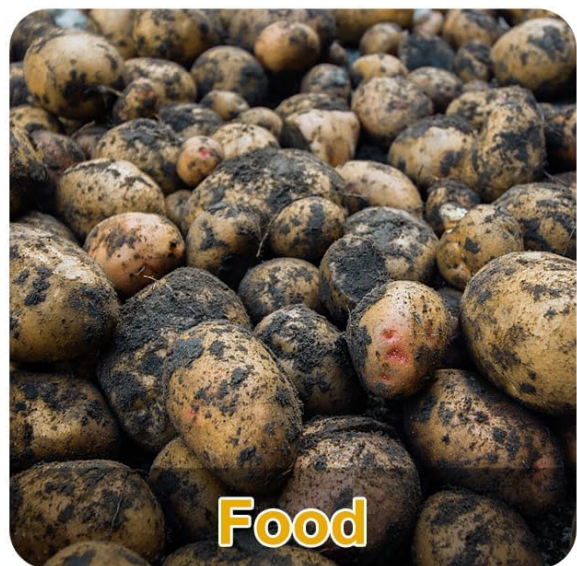 
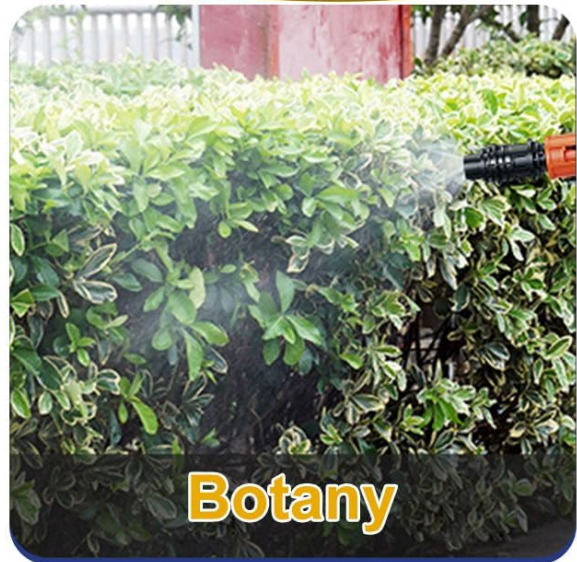 


Image: Illustration of the water filter and its function in preventing debris from entering the pressure washer.

4.3 Connecting to a Water Source

The EVEAGE Q7 offers flexible water source options:

- **Bucket/Container:** Place the end of the water pipe with the filter into a bucket or container filled with water. The pressure washer will draw water from this source.
- **Faucet Connection:** Use the universal faucet adapter to connect the water pipe directly to a garden hose or outdoor faucet.

5. OPERATING INSTRUCTIONS

Learn how to effectively use your EVEAGE Q7 pressure washer for various cleaning tasks.

5.1 Powering On/Off

Press the power button on the handle to turn the unit on. The display will show the current battery level. Press the button again to turn it off.

5.2 Adjusting Pressure Modes

The EVEAGE Q7 features three pressure modes to suit different cleaning needs. Press the mode button on the display to cycle through the options:

3 PRESSURE MODES



MAX PRESSURE

**25-30
MINS**



Cars



Floors



Buildings

MEDIUM

**30-40
MINS**



Furniture



Windows



Appliances

MIN PRESSURE

**40-50
MINS**



Pets



Plants Fruits



Veggies

Image: Display showing the three pressure modes (Max, Medium, Min) and their recommended applications.

- **Max Pressure (25-30 mins runtime):** Ideal for heavy-duty cleaning such as cars, floors, and buildings.
- **Medium Pressure (30-40 mins runtime):** Suitable for cleaning furniture, windows, and appliances.
- **Min Pressure (40-50 mins runtime):** Gentle cleaning for delicate items like pets, plants, and fruits/vegetables.

5.3 Adjusting Spray Patterns

The nozzle on the extension rod can be rotated to adjust the spray pattern from 0° (direct injection) to 45° (wide spray).

THREE GEAR ADJUSTMENT

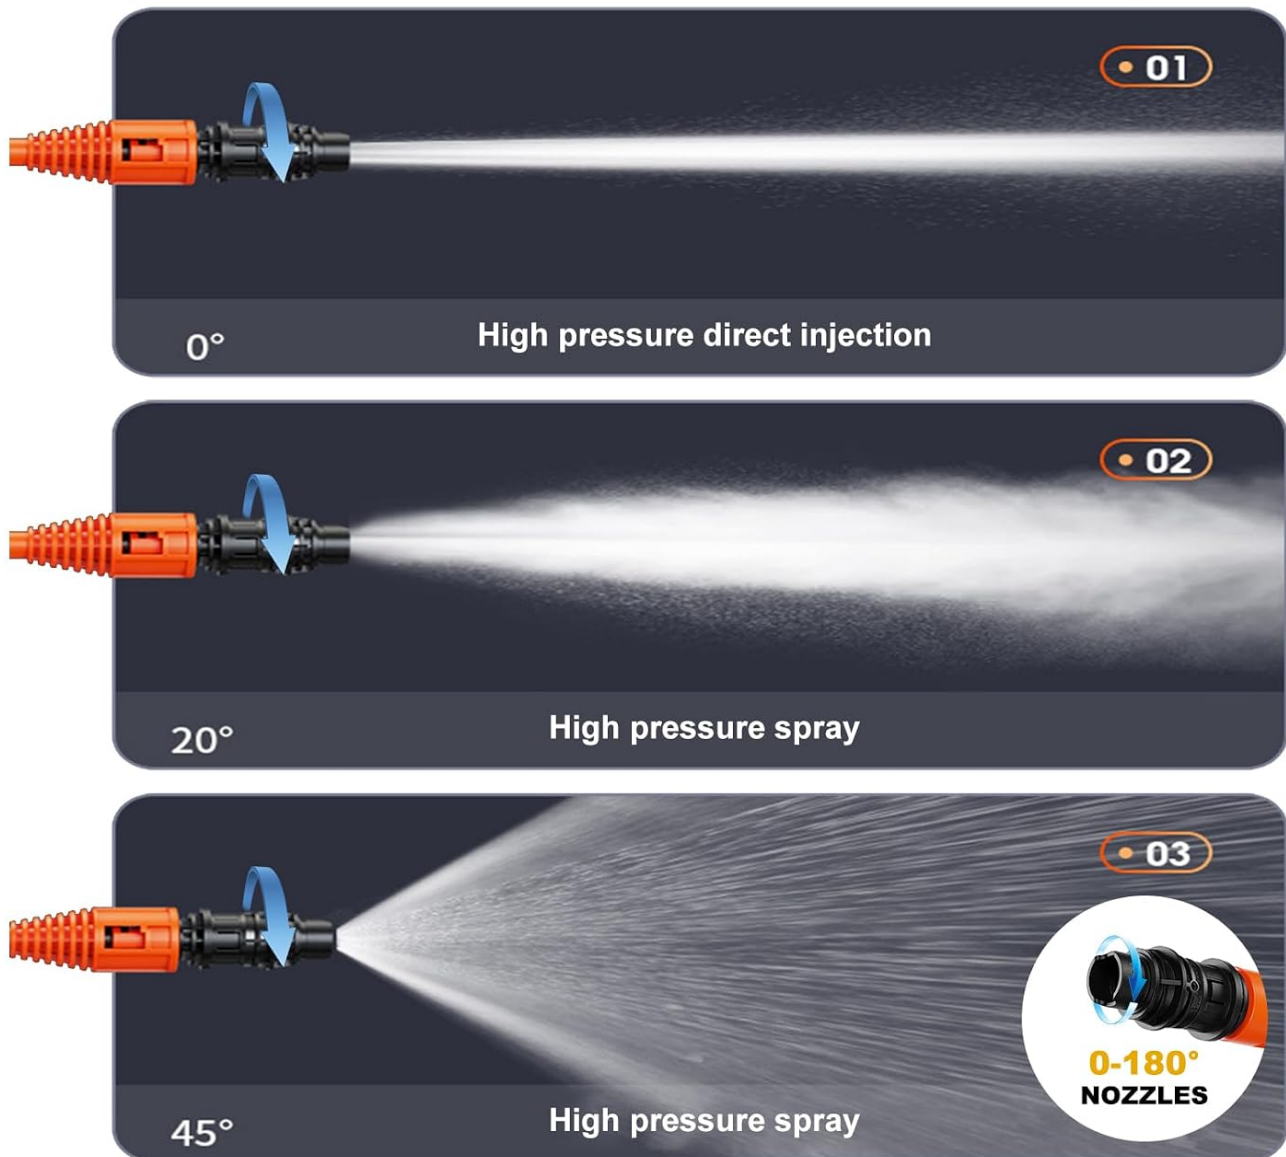 


Image: Visual representation of the three adjustable spray patterns: 0° (high pressure direct injection), 20° (high pressure spray), and 45° (high pressure spray).

- **0° (Direct Injection):** For concentrated, powerful cleaning on stubborn dirt.
- **20° (High Pressure Spray):** A balanced spray for general cleaning tasks.
- **45° (Wide Spray):** For broader coverage and rinsing.

5.4 Using the Foam Pot

Attach the foam pot to the pressure washer gun for applying soap or detergent. Fill the pot with your desired cleaning solution, then attach it and operate the washer. The foam pot helps create a rich lather for effective cleaning.

5.5 Multi-Scene Application

The EVEAGE Q7 is versatile for various cleaning scenarios:



Water Filter

The water inlet is equipped with a filter device to prolong the service life



No filtering

Dirt, sand get into the damaged machine

Image: Examples of the pressure washer in use for cleaning courtyards, watering plants, washing cars, and cleaning food items.

- **Car Washing:** Effectively clean cars, bicycles, and motorcycles.
- **Home Cleaning:** Clean garden floors, walls, windows, and outdoor furniture.
- **Gardening:** Can be used to water flowers or clean garden tools.
- **Food Cleaning:** Gentle enough for cleaning certain food items (use appropriate pressure mode).

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Clean the Water Filter:** Periodically remove and clean the water filter to prevent blockages and ensure proper water flow. Rinse it under running water to remove any debris.
- **Drain Water:** After each use, disconnect the water supply and run the pressure washer briefly to drain any remaining water from the pump and hose. This prevents freezing damage in cold weather.
- **Battery Care:** Store the battery in a cool, dry place. Do not store a fully discharged battery for extended periods.

Recharge it periodically if not in use.

- **Clean the Unit:** Wipe down the exterior of the pressure washer with a damp cloth. Do not use harsh chemicals.
- **Storage:** Store the pressure washer and all accessories in the provided storage case in a dry, protected area.

7. TROUBLESHOOTING

If you encounter issues with your EVEAGE Q7 pressure washer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	Battery not charged or improperly inserted	Ensure battery is fully charged and correctly inserted.
Low water pressure	• Clogged water filter • Insufficient water supply • Air in the pump	• Clean the water filter. • Ensure adequate water source (e.g., full bucket, open faucet). • Run the unit without the nozzle attached until a steady stream of water emerges to purge air.
Water leaks from connections	Loose connections or worn O-rings	Tighten all connections. Check and replace O-rings if damaged.
Motor runs but no water sprays	• No water supply • Clogged nozzle	• Check water source. • Clean the nozzle opening.

8. SPECIFICATIONS

Key technical specifications for the EVEAGE Q7 Cordless Power Pressure Washer.

- **Model:** Q7
- **Brand:** EVEAGE
- **Power Source:** Battery Powered
- **Motor Type:** Brushless, Pure Copper
- **Max Pressure:** 1000 PSI
- **Flow Rate:** 2.5 GPM
- **Battery Capacity:** 4000 mAh
- **Hose Length:** 19.6 Feet
- **Item Weight:** Approximately 7 Pounds (3.18 kg)
- **Product Dimensions:** 25.4 x 13.97 x 40.64 cm
- **Color:** Orange

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please contact EVEAGE customer service.

Refer to your purchase documentation for specific warranty terms and contact details.

Customer Support: Please visit the official EVEAGE website or refer to the contact information provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question