



[Manuals.plus](#) /

› [Quictent](#) /

› Quictent Premium 16x32 Party Tent User Manual

Quictent 16x32

Quictent Premium 16x32 Party Tent Instruction Manual

Model: 16x32

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and care of your Quictent Premium 16x32 Party Tent. Please read all instructions carefully before beginning assembly and retain this manual for future reference. Proper assembly and maintenance are crucial for the tent's stability and longevity.

COMPONENTS LIST

Your Quictent Premium 16x32 Party Tent package includes the following items. Please verify all components are present before starting assembly.

- Top Cover (1)
- Sidewalls with Windows (8)
- Zipper Doors (2)
- Oxford Cloth Storage Bags (4)
- Connectors and various accessories (bungee balls, ground stakes, guy lines, etc.)

Note: The outer boxes may arrive at different times. Safety measures and professional installation are highly recommended.

QuicTent Standard Series Party Tents

SHELTERS FOR ALL






Product Dimensions	13x26x9.9ft	16x32x9.8ft	20x20x9.9ft	20x32x9.9ft	20x40x9.9ft
					
Bungee Cord	52	98	58	102	116
Guy Rope	4	4	4	4	4
Auger Anchor	4	4	4	4	4
Short L-Shaped Peg	38	46	36	48	54
Long L-Shaped Peg	10	12	8	12	14
Gloves	2 Pair	2 Pair	2 Pair	2 Pair	2 Pair
Carry Bag	3	4	3	5	6
Maximum Load Capacity (lbs)	750	1100	850	1400	1700
Wind Resistance Rating (mph)	40	40	40	40	40
Waterproof Rating (mm)	IPX5 2000	IPX5 2000	IPX5 2000	IPX5 2000	IPX5 2000
Fabric Tensile Strength	500N	500N	500N	500N	500N
UV Resistance Rating	UPF 40+	UPF 40+	UPF 40+	UPF 40+	UPF 40+
Assembly Team Suggested	2-3 adults	3-4 adults	2-3 adults	3-4 adults	4-5 adults
Estimated Setup Time	1-2 hrs	1-2 hrs	1-2 hrs	2-3 hrs	2-3 hrs

Figure 1: Component overview and specifications for QuicTent Standard Series Party Tents, including the 16x32 model.

SETUP INSTRUCTIONS

Follow these steps for proper assembly of your party tent. It is recommended to have 3-4 adults for efficient and safe setup.

- 1. Prepare the Area:** Choose a flat, clear area for assembly. Ensure sufficient space around the tent footprint (16'x32').
- 2. Unpack Components:** Carefully unpack all boxes and lay out the poles and connectors. It is helpful to organize them by type and length.
- 3. Assemble the Top Frame:** Connect the roof poles and connectors on the ground according to the included diagrams. Ensure all connections are secure.
- 4. Install Top Reinforcements:** Attach any diagonal or reinforcing bars to the top frame as indicated in the instructions.
- 5. Attach Roof Cover:** Carefully drape the main roof cover over the assembled top frame. Ensure the cover is centered and aligned.
- 6. Install Leg Poles:** Begin raising the tent by attaching the leg poles to one side of the frame. Secure them into the base plates.
- 7. Raise the Tent:** With assistance, carefully lift the tent frame and attach the remaining leg poles. Ensure the tent is

fully upright and stable.

8. **Install Base Frame Reinforcements:** Connect the horizontal base frame poles at the bottom of the tent legs for added stability.
9. **Attach Sidewalls and Doors:** Install the removable sidewalls and zipper doors using the provided bungee balls and ties. The sidewalls feature transparent church windows and white window covers for versatility.
10. **Secure the Tent:** Use the provided ground stakes and guy lines to firmly anchor the tent to the ground. Additional ground poles enhance stability and wind resistance.

Video: Detailed assembly guide for a Quic Tent Party Tent. This video demonstrates the step-by-step process of setting up the frame, attaching the roof cover, and installing the sidewalls and doors, providing visual aid for each stage of construction.

Video 1: How to Assemble Quic Tent Premium Party Tent



Figure 2: Quic Tent Party Tent fully assembled on a lawn.

OPERATING INSTRUCTIONS

Your Quic Tent Party Tent is designed for versatile use in various outdoor settings.

- **Ventilation:** The tent features 10 removable sidewalls and 2 zipper doors. These can be opened or removed to provide exceptional cross-ventilation and airflow, ensuring comfort even on warm days. Customize the amount of ventilation by adjusting the sidewalls as needed.
- **Versatile Usage:** This tent is suitable for a wide range of events, including weddings, parties, baby showers, commercial use, backyard barbecues, and other gatherings.



Figure 3: Tent in use for a backyard gathering.

MAINTENANCE

Regular maintenance will extend the life of your party tent.

- **Fabric Care:** The top cover is made of 180g imported PE fabric, providing 100% waterproof and UV protection. Clean the fabric with mild soap and water. Avoid harsh chemicals that could damage the material. Ensure the fabric is completely dry before storage to prevent mildew.
- **Frame Care:** The upgraded framework is made of high-quality, heavy-duty, galvanized steel, which is corrosion-resistant. Inspect the frame periodically for any signs of wear or damage. Clean any dirt or debris from the poles and connectors.
- **Storage:** When not in use, disassemble the tent and store all components in the provided Oxford cloth storage bags in a cool, dry place.

Video: A Quic Tent party tent undergoing wind and waterproof tests in a controlled environment. The video demonstrates the tent's stability against strong winds and its ability to repel water during simulated rainfall, highlighting its durability and protective features.

Video 2: Quic Tent Party Tent Wind and Waterproof Test

SAFETY WARNINGS

WARNING: This party tent is NOT FIREPROOF. Keep it away from any fire source, open flames, or heat sources.

- Always secure the tent with all provided ground stakes, guy lines, and additional ground poles.
- In high winds (38 mph or higher), take preventative measures such as using pegs and sandbags on grassy surfaces or expansion screws on cement surfaces. Consider disassembling the tent in extreme weather conditions.
- Do not use the tent during thunderstorms, heavy rain, or snow accumulation.
- Ensure proper ventilation when using the tent to prevent heat buildup.

TROUBLESHOOTING

Common issues and their solutions:

- **Tent Instability:** Ensure all poles are fully connected and secured. Verify that all ground stakes and guy lines are properly anchored and taut. Check for loose connections in the frame.
- **Water Accumulation on Roof:** While the tent is waterproof, prolonged heavy rainfall can lead to water pooling. Promptly clear any accumulated water from the roof to prevent damage to the tent structure.

- **Difficulty with Assembly:** Refer to the numbered poles and connectors in the assembly video and diagrams. Ensure you have sufficient personnel (3-4 adults recommended) for lifting and securing the frame.

SPECIFICATIONS

Feature	Detail
Brand	Quictent
Model	16x32
Material	Alloy Steel (Frame), PE Fabric (Cover)
Color	White
Item Weight	268 Pounds
Dimensions (L x W x H)	384"L x 192"W x 118"H
Floor Area	512 Square Feet
Water Resistance Level	Waterproof
UV Protection	100% (UPF 40+)
Wind Resistance Rating	40 mph
Sidewalls	10 removable with transparent windows
Doors	2 zipper doors

WARRANTY AND SUPPORT

Quictent stands behind the quality of its products.

- **Warranty Coverage:** Enjoy 1 year of protection for canopy frames and covers.
- **Lifetime Replacement:** Lifetime replacement is provided for connectors, pegs, ropes, elastic ropes, and other small accessories.
- **Parts Supply:** A lifetime 50% parts supply is offered beyond the normal 1-year warranty period.
- **Customer Support:** If you encounter any issues with your party tent, please contact Quictent customer service. They aim to provide professional technical support and possible solutions within 12 hours.

For support, please refer to the contact information provided with your purchase or visit the official Quictent website.