

Manuals.plus /

- › Anker /
- › Anker Magnetic Power Bank 10,000mAh User Manual

## Anker A1642

# Anker Magnetic Power Bank 10,000mAh User Manual

Model: A1642

## 1. INTRODUCTION

---

Thank you for choosing the Anker Magnetic Power Bank 10,000mAh. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

---

To ensure safe operation, please observe the following precautions:

- Do not expose the power bank to extreme temperatures (above 45°C/113°F) or direct sunlight.
- Avoid dropping, impacting, or disassembling the device.
- Keep away from water, moisture, and flammable materials.
- Use only certified cables and adapters for charging the power bank and connected devices.
- Do not operate if the device is damaged.
- Keep out of reach of children.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- Anker 334 MagGo Battery (PowerCore 10K)
- 2 ft (60 cm) USB-A to USB-C cable
- Welcome Guide

## 4. PRODUCT OVERVIEW

---

The Anker Magnetic Power Bank is designed for portable and convenient charging. It features both wired and

wireless charging capabilities.



Image: Anker Magnetic Power Bank attached to the back of an iPhone, showcasing its compact design and magnetic attachment.

# Snap. Charge. Go.

Compact and Powerful Magnetic Charging



 =   
**10N**                      **2.2lb**



**4.2 × 2.7 × 0.7 in**

Image: Diagram illustrating the compact dimensions of the power bank (4.2 × 2.7 × 0.7 inches) and its 10N magnetic force, equivalent to 2.2 lbs.

## 5. SETUP

### 5.1 Charging the Power Bank

Before first use, fully charge your Anker Magnetic Power Bank.

1. Connect the provided USB-A to USB-C cable to the power bank's USB-C port.
2. Connect the other end of the cable to a compatible USB wall charger (not included).

3. The indicator lights on the power bank will illuminate to show the charging status. All lights will be solid when fully charged.

## **6. OPERATING INSTRUCTIONS**

---

### **6.1 Wireless Charging (MagSafe-Compatible)**

For MagSafe-compatible iPhones (iPhone 12 series and later):

1. Align the power bank with the back of your MagSafe-compatible iPhone.
2. The magnets will snap the power bank into place, and wireless charging will begin automatically.
3. The power bank provides up to 7.5W wireless charging.

### **6.2 Wired Charging (USB-C and USB-A)**

For devices requiring wired charging:

1. Connect your device to the power bank using a compatible USB-C to USB-C cable (for USB-C output) or a USB-A to USB-C/Lightning cable (for USB-A output).
2. The power bank supports 20W fast charging via USB-C and up to 18W via USB-A.

# 20W Full-Speed Wired or Wireless Charging



## Wireless Convenience (7.5W Max)

Compatible with  
iPhone 14 / 13 / 12 Series /  
AirPods



## Wired Fast Charging (20W Max)

Charge an iPhone 14 From  
0 to 53% in 30 Minutes\*

\*Data based on internal lab testing. Actual charging times may vary.

Image: Illustration showing both wireless charging (power bank magnetically attached to iPhone) and wired charging (iPhone connected via USB-C cable to the power bank).

## 6.3 Charging While Recharging

The Anker Magnetic Power Bank supports pass-through charging, allowing you to charge your iPhone and recharge the power bank simultaneously.

## 7. MAINTENANCE

Proper care ensures the longevity of your power bank:

- Clean the device with a dry, soft cloth. Do not use abrasive cleaners or solvents.
- Store in a cool, dry place when not in use.
- Avoid prolonged exposure to direct sunlight or high humidity.

# Monitors Temperature 1,700,000 Times Per Day



Advanced Protection



Image: Exploded view of the power bank showing internal components, highlighting its advanced protection system that monitors

temperature 1,700,000 times per day.

## 8. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Cause	Solution
Power bank not charging	Cable or adapter issue; power bank fully discharged.	Try a different USB-C cable and wall adapter. Ensure the adapter meets power requirements.
Device not charging from power bank	Power bank is low on charge; incorrect cable; device not properly aligned for wireless charging.	Recharge the power bank. Use a certified cable. For wireless charging, ensure proper alignment and remove any thick phone cases.
Slow charging	Cable quality; device charging input limit; environmental factors.	Use the original or a high-quality charging cable. Ensure your device supports fast charging. Avoid charging in very hot environments.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	A1642
Battery Capacity	10,000 Milliamp Hours
Product Dimensions	3 x 6 x 5 cm; 208.65 g
USB-C Input	5V 3A
USB-C Output	5V 3A / 9V 2.22A
USB-A Output	5V 2.4A / 9V 2A / 12V 1.5A
Total Output	5V 2.4A
Wireless Charging Output	7.5W Max
Special Features	Short Circuit Protection, Slim Design, Over Charging Protection, Fast Charging, Wireless Charging, Travel-Friendly
Country of Origin	China

## 10. WARRANTY AND SUPPORT

Anker provides a worry-free 12-month warranty for this product. For technical support or warranty claims, please contact Anker customer service through their official website or the retailer where the product was purchased.

# Perfect for Travel



Flight-Friendly



Image: A hand holding an iPhone with the Anker Magnetic Power Bank attached, shown in an airplane cabin setting, emphasizing its flight-friendly design.