

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution AK59-00149A Replacement Remote Control User Manual for Samsung DVD/Blu-Ray Players

Beyution AK59-00149A

Beyution AK59-00149A Replacement Remote Control User Manual

For Samsung DVD and Blu-Ray Disc Players

1. INTRODUCTION

This manual provides comprehensive instructions for the Beyution AK59-00149A replacement infrared remote control. This remote is designed to function as a direct replacement for various Samsung DVD and Blu-Ray disc players without requiring any programming or setup. Simply insert batteries, and it is ready for use.



Image 1: Front view of the Beyution AK59-00149A replacement remote control, showcasing its button layout.

2. SETUP: BATTERY INSTALLATION

The Beyution AK59-00149A remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with compatible devices.





Image 2: Rear view of the remote control with the battery compartment open, showing where to insert AAA batteries.

3. OPERATING INSTRUCTIONS: BUTTON FUNCTIONS

The remote control features a standard layout for intuitive operation of your Samsung DVD or Blu-Ray disc player. Below is a description of the primary button functions:

Function Button



Turns the TV on and off.

SOURCE: Displays and selects the available video sources.

VOL +/-: Adjusts the volume.

HOME

Enters the player's home menu. Displays the wall paper when pressed on the category icon of the home menu.

AUDIO: Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOS. Selects the sound track on CDs.

SUBTITLE: Selects the subtitle language when multi-lingual subtitles are recorded on BD ROMs/DVD VIDEOS.

TOOLS: Quickly select frequently used functions.

INFO: Displays information on the TV screen.

RETURN: Returns to the previous menu.

EXIT: Exits the menu.

Color buttons (YELLOW/BLUE/RED/GREEN): Shortcut keys for interactive functions.



Image 3: Detailed diagram of the remote control highlighting various button functions.

- **POWER (U):** Turns the TV and/or player on and off.
- **SOURCE:** Displays and selects available video sources.
- **VOL +/-:** Adjusts the volume.
- **Number Buttons (0-9):** Used for direct track selection or inputting numerical data.
- **DISC MENU:** Accesses the disc menu.
- **TITLE MENU:** Accesses the title menu.
- **POPUP:** Displays a pop-up menu.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Standard controls for media playback.
- **AUDIO:** Selects the language track for multi-lingual content or sound tracks on CDs.

- **HOME:** Enters the player's home menu.
- **SUBTITLE:** Selects the subtitle language for multi-lingual subtitles.
- **TOOLS:** Provides quick access to frequently used functions.
- **INFO:** Displays information on the TV screen.
- **RETURN:** Returns to the previous menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D - Red, Green, Yellow, Blue)** Shortcut keys for interactive functions, specific to disc content.

4. COMPATIBLE MODELS

The Beyution AK59-00149A remote control is compatible with a wide range of Samsung DVD and Blu-Ray disc players. A partial list of compatible models includes:

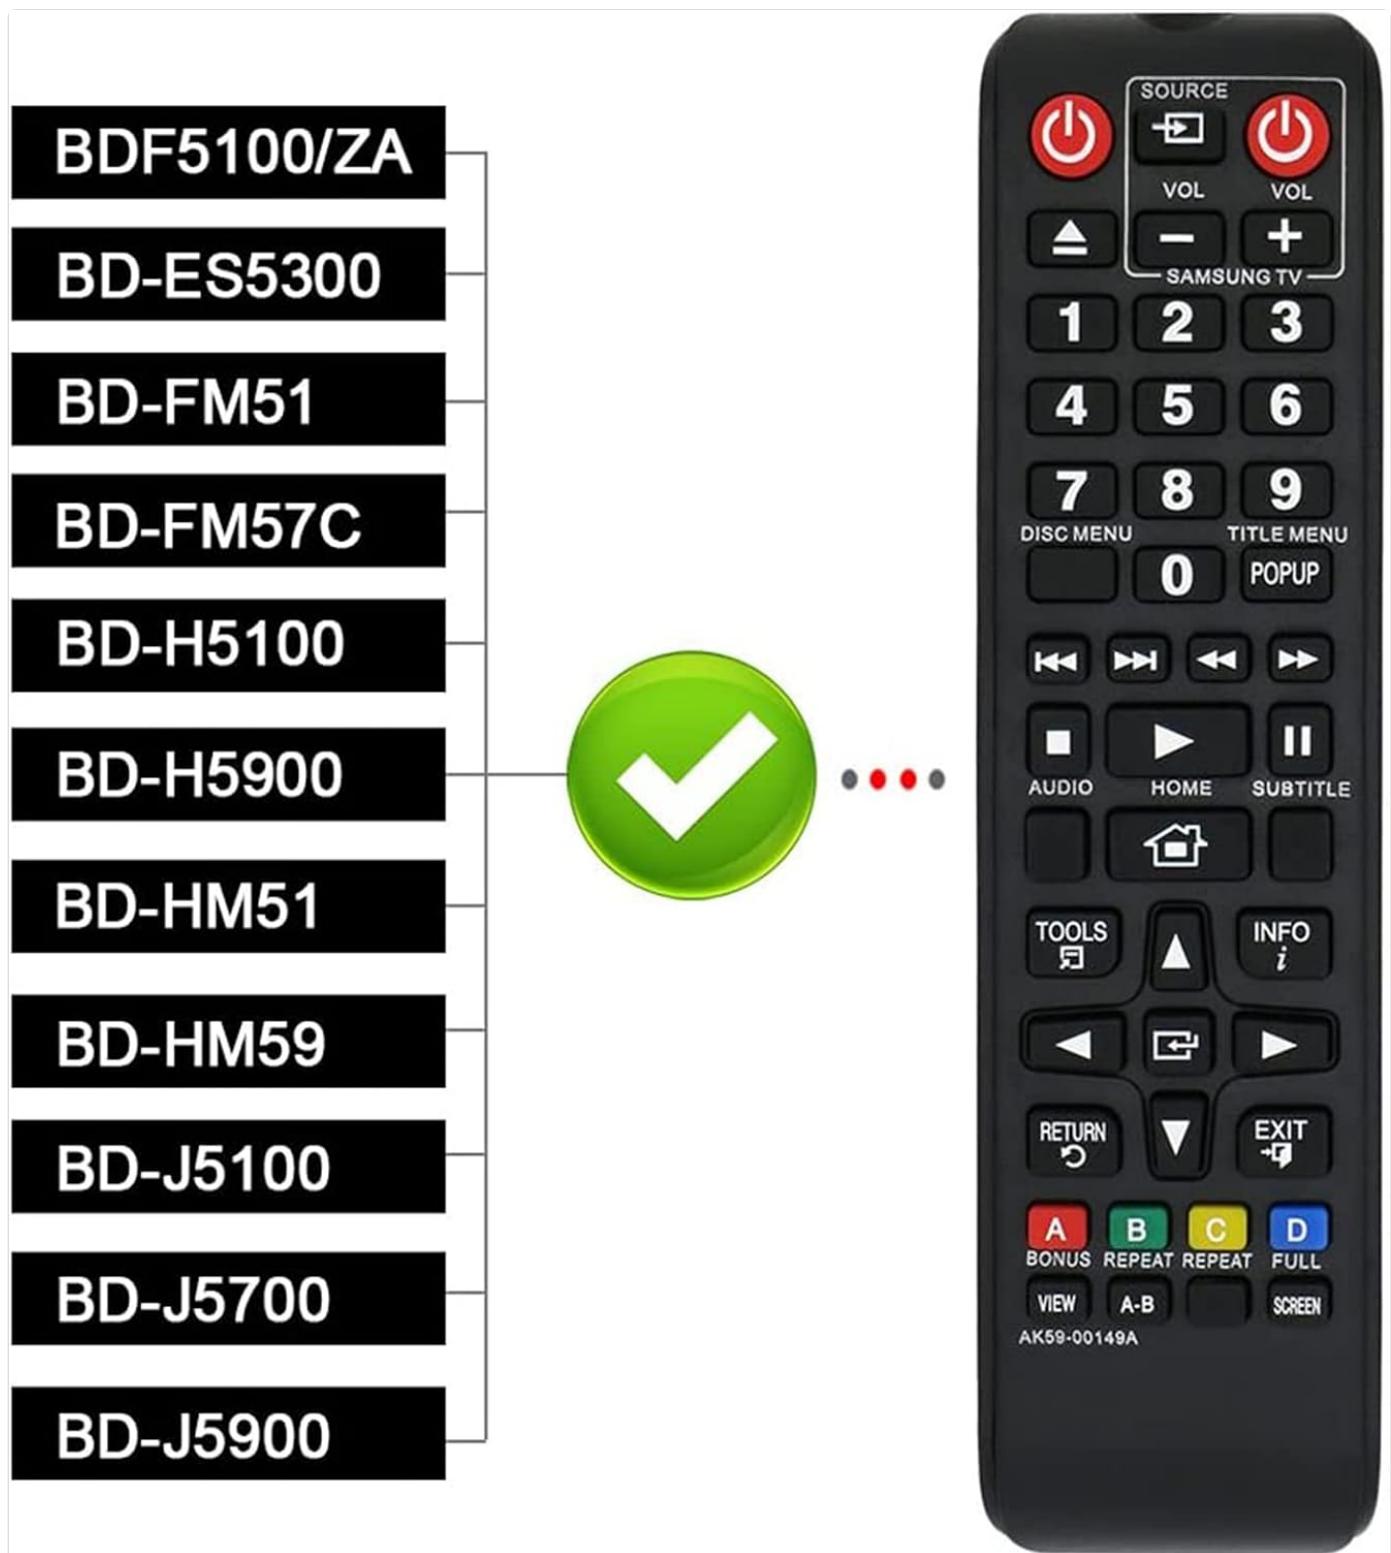


Image 4: Visual representation of some compatible Samsung player models.

- BD-ES5300, BD-F5100/ZA, BD-F5100/ZF, BD-F5100/ZX
- BD-FM51, BD-FM57C, BD-FM51/ZA, BD-FM51C/ZA, BD-FM57C/ZA
- BD-H5100, BD-H5900, BD-HM51, BD-HM59, BD-H5100/ZA, BD-H5900/ZA, BD-HM51/ZA, BD-HM59/ZA, BD-HM59C/ZA
- BD-J5100, BD-J5700, BD-J5900, BD-J5100/ZA, BD-J5100E/ZA, BD-J5700/ZA, BD-J5900/ZA, BD-J5900E/ZA
- BD-JM51, BD-JM57, BD-JM59, BD-JM51/ZA, BD-JM57/ZA, BD-JM57C/ZA, BD-JM59/ZA
- BD-E5200, BD-E5300, BD-H4500, BD-ES5000, BD-F5500, BD-F5500E, BD-F5500K
- And many other Samsung BD/DVD player models.

If your specific model is not listed, please refer to the product packaging or contact customer support for verification.

5. SPECIFICATIONS

Feature	Specification
Model	AK59-00149A
Material	ABS Plastic
Connectivity Technology	Infrared
Maximum Operating Distance	10 Meters (approx. 33 feet)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6.3 x 1.57 x 0.39 inches (approx.)
Item Weight	2.82 ounces (approx.)
Color	Black

6. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Replace batteries when the remote's responsiveness decreases.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Protection:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal circuitry.

7. TROUBLESHOOTING

If you encounter issues with your remote control, consider the following troubleshooting steps:

- **Remote Not Responding:** Ensure that the batteries are correctly installed with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Limited Range or Intermittent Functionality:** Check for any obstructions between the remote control and the device's infrared receiver. Ensure the remote's infrared emitter is clean and unobstructed. The maximum effective range is approximately 10 meters.
- **Specific Buttons Not Working:** If only certain buttons are unresponsive, try replacing the batteries. If the issue persists, the remote may be damaged.

- **Device Compatibility:** Verify that your Samsung DVD or Blu-Ray player model is listed as compatible. While this remote is a direct replacement for many models, some specific functions might vary slightly depending on the original remote it replaces.

8. WARRANTY AND SUPPORT

This Beyution AK59-00149A replacement remote control comes with a **6-month warranty period** from the date of purchase.

For any questions, concerns, or if you receive a damaged or non-functional remote control, please contact our customer service team. We are committed to providing a satisfactory solution within 24 hours.

Contact Support: Please refer to your purchase documentation or the seller's contact information for direct support.

© 2023 Beyution. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question