

Soundcore Rave Neo 2

Soundcore Anker Rave Neo 2 Portable Speaker User Manual

Model: Rave Neo 2 (A33A1)

INTRODUCTION

This manual provides instructions for the Soundcore Anker Rave Neo 2 Portable Speaker. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- Soundcore Rave Neo 2 Portable Speaker
- Power Cable

Note: Other accessories may be sold separately.

CONTROLS AND INDICATORS

Familiarize yourself with the speaker's buttons and ports for proper operation.



Image description: Front view of the Soundcore Rave Neo 2 portable speaker with active, colorful LED lights and a blue carrying strap.

Button Functions

- **Power Button:** Press and hold for 2 seconds to power on/off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Up/Down Buttons:** Adjust audio volume.
- **Play/Pause Button:** Control audio playback.
- **Light Mode Button:** Cycle through various light effects.
- **BassUp Button:** Activate or deactivate BassUp technology for enhanced bass.
- **PartyCast Button:** Initiate PartyCast pairing for multi-speaker connection.

Ports

- **USB-C Charging Port:** For charging the speaker.
- **USB-A Port:** For charging external devices.

CHARGING YOUR SPEAKER

Before first use, fully charge the speaker.

- Connect the provided power cable to the USB-C charging port on the speaker and to a compatible power adapter (not included).
- The charging indicator will show charging status.
- A full charge provides approximately 18 hours of playtime.



Image description: Close-up of the speaker's charging port, typically located under a protective flap (represented by the main product image as no specific port image is available).

SETUP

Bluetooth Pairing

1. Power on the Soundcore Rave Neo 2 speaker.
2. The Bluetooth indicator will flash, indicating it is ready for pairing.
3. On your mobile device, enable Bluetooth and select "Soundcore Rave Neo 2" from the list of available devices.
4. Once connected, the Bluetooth indicator will glow solid.

PartyCast 2.0 (Wireless Stereo Pairing)

Connect multiple Soundcore PartyCast 2.0 compatible speakers for synchronized audio and light shows.

1. Ensure all speakers are powered on.
2. On the primary speaker, press the PartyCast button. The indicator will flash.
3. On the secondary speakers, press the PartyCast button. They will connect to the primary speaker.
4. Once connected, the PartyCast indicators on all speakers will glow solid.

IN SYNC WITH PARTYCAST 2.0



Image description: Several Soundcore Rave Neo 2 speakers wirelessly connected, demonstrating the PartyCast 2.0 feature.

Soundcore App Control

Download the Soundcore app from your device's app store to unlock additional features, customize EQ settings, light modes, and access party games.



Image description: A smartphone displaying the Soundcore app interface, showing options for EQ and light customization.

OPERATION

Power On/Off

Press and hold the power button for 2 seconds to turn the speaker on or off.

Audio Playback

After connecting via Bluetooth, play audio from your device. Use the Play/Pause button to control playback and Volume Up/Down buttons to adjust volume.

Light Show

Press the Light Mode button to cycle through various integrated light effects that synchronize with your music.

LIGHT UP YOUR BEATS



Image description: The Soundcore Rave Neo 2 speaker displaying its dynamic light show in a low-light environment.

BassUp Technology

Press the BassUp button to activate or deactivate the BassUp feature, which enhances low-frequency audio for a more powerful bass experience.

Waterproof Functionality (IPX7)

The speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure all port covers are securely closed before exposure to water. The speaker is designed to float on water.

FLOAT WITH WATERPROOF PROTECTION



Image description: The Soundcore Rave Neo 2 speaker floating on the surface of water, demonstrating its IPX7 waterproof rating.

MAINTENANCE

Cleaning

Use a soft, damp cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Speaker will not power on.

- Ensure the battery is charged. Connect the speaker to a power source and try again.

Cannot pair with Bluetooth device.

- Ensure the speaker is in Bluetooth pairing mode (indicator flashing).
- Move the speaker closer to your device.
- Forget "Soundcore Rave Neo 2" from your device's Bluetooth list and try pairing again.

Audio distortion or low volume.

- Adjust the volume on both the speaker and your connected device.
- Ensure the speaker is not obstructed.
- Check EQ settings in the Soundcore app.

PartyCast connection issues.

- Ensure all speakers are PartyCast 2.0 compatible.
- Place speakers within close proximity during pairing.
- Reset Bluetooth connections on all speakers and try PartyCast pairing again.

SPECIFICATIONS

Feature	Detail
Brand	Soundcore
Model Name	Rave Neo 2
Speaker Maximum Output Power	80 Watts
Connectivity Technology	Bluetooth
Water Resistance Level	IPX7 Waterproof
Playtime	18 Hours
Control Method	App
Product Dimensions	7.8"D x 11.8"W x 6.1"H
Item Weight	1.76 pounds (800 Grams)
Included Components	Power Cable
Batteries	4 Lithium Ion batteries (included)
Maximum Range	15 Meters
Audio Output Mode	Stereo
Woofer Diameter	4 Inches

Tweeter Diameter	2 Inches
Frequency Response	53 Hz
Supported Internet Services	Spotify, Apple Music, Amazon Music, other Bluetooth-compatible services

Safety Information

 
 
- Do not expose to extreme temperatures.
- Do not disassemble or modify the device.
- Keep away from children.
- Use only specified chargers/cables.
- Ensure port covers are sealed when near water.

For detailed safety guidelines, refer to the official Soundcore website.

Warranty and Support

The Soundcore Rave Neo 2 Portable Speaker comes with a limited warranty. For warranty details, technical support, or customer service, please visit the official Soundcore website or contact their customer support.

Related Documents - Rave Neo 2

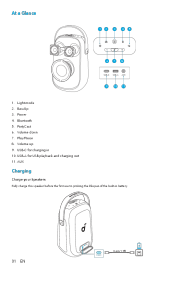	Soundcore Rave Neo 2 Portable Bluetooth Speaker User Manual Comprehensive guide to the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features like Bluetooth, TWS, PartyCast, AUX/USB modes, button controls, light effects, app integration, and specifications.
	Soundcore Rave Neo 2 User Manual Comprehensive user manual for the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features, operation, and specifications. Learn how to connect, use TWS and PartyCast modes, and customize your audio experience.
	Soundcore Rave Neo 2 Quick Start Guide: Setup, Features, and Specifications Comprehensive quick start guide for the Soundcore Rave Neo 2 portable Bluetooth speaker. Learn how to set up, pair devices, use TWS and PartyCast features, and find technical specifications and support.

	Soundcore Rave Neo 2 SE User Manual Comprehensive user manual for the Soundcore Rave Neo 2 SE portable Bluetooth speaker, covering charging, connectivity, features, and specifications.
	Soundcore Rave Neo 2 Portable Speaker User Manual Comprehensive user manual for the Soundcore Rave Neo 2 portable speaker, detailing setup, Bluetooth, TWS, PartyCast modes, app integration, and specifications.
	Soundcore Rave Neo User Manual - Comprehensive Guide Detailed user manual for the Soundcore Rave Neo portable Bluetooth speaker, covering setup, features like Bluetooth, TWS, PartyCast, and specifications.

Documents - Soundcore – Rave Neo 2

Aplicativo Soundcore

Baixe o aplicativo Soundcore para aprimorar a sua experiência. Informações de produto: Verifique o nome do produto e a versão de software ou consulte o manual do usuário. Atualização de firmware: Você será informado depois que a nova versão do firmware for detectada ao conectar o alto-falante ao aplicativo. Status da bateria: Indica o nível de carga restante da bateria do seu alto-falante. Controle de volume: Ajuste o nível de volume pelo aplicativo sem pressionar botões no alto-falante. Configurações de EQ: há 4 configurações de EQ à sua disposição no aplicativo para otimizar a sua experiência enquanto ouve diferentes estilos musicais. Assinatura Soundcore: Modo EQ normal com som bem balanceado. Turbo de Graves: Vozes se destacam mais claramente de outros sons do ambiente. Turbo de Agudos: Áreas de frequência são elevadas. Balanceado: Sem aumento de sons de alta e baixa frequência. Personalizado: personalize a configuração de EQ conforme suas preferências no app. Aumentar os graves: Ative o aumento de graves para aprimorar o som de baixa frequência. Defina o tempo para desligamento automático: ajuste o tempo para desligamento automático (5/10/20/60 minutos, o padrão é de 20 minutos). A caixa de som desliga automaticamente após o período definido. Mensagem de voz: silenciar ou restabelecer a mensagem de voz ao ligar/desligar.

Google Play

App Store

Auto-Play On

Auto-Play Off


11/9 PE&R

[pdf] User Manual

A33A1 Rave Neo 2 Manual 121 131 Инструкция Soundcore руководство пользователя а33а1 rave нео manual teamplush by 2024 11 |||

Aplicativo Soundcore Baixe o aplicativo Soundcore para aprimorar a sua experincia. Informaes de pro ... 2 123 RU 20 , . Bluetooth , Bluetooth. 1 x1 2 Soundcore **Rave Neo 2** Soundcore **Rave Neo 2** PAIRING CONNECTED Bluetooth Bluetooth Bluetooth ...

 lang:pt score:48 filesize: 594.89 K page_count: 11 document date: 2024-11-15

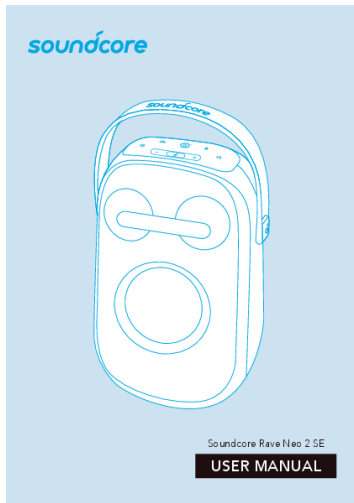


[\[pdf\] User Manual Owner's Manual](#)

Anker Soundcore Rave Neo 2 PartyCast Portable Speaker in Black Owner's Manual RAVENEO2

A33A1Z11 194644097943 soundcore speaker owners manual content abt documents 156105 |||

Soundcore **Rave Neo 2 SE** USER MANUAL English 01 Franais 10 At a Glance 12 3 4
5 6 7 8 USB-C USB-A AUX 9 10 11 1. Light mode 2. BassUp 3. Power 4. Bluetooth 5.
PartyCast 6. Volume down 7. Play/Pause 8. Volume up 9. USB-C for charging in 10.
USB-A for USB playback and charging out 11. AUX 01 E...

 lang:en score:48 filesize: 1.63 M page_count: 11 document date: 2023-09-30

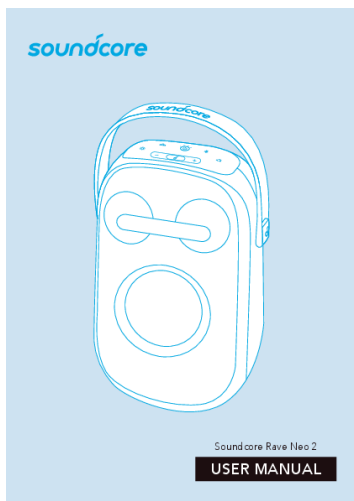

[Soundcore Rave Neo 2 User Manual](#)

Comprehensive user manual for the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features, operation, and specifications. Learn how to connect, use TWS and PartyCast modes, and customize your audio experience.

 
lang:en score:42 filesize: 42.11 M page_count: 212 document date: 2022-12-05



[Soundcore Rave Neo 2 Quick Start Guide: Setup, Features, and Specifications](#)

Comprehensive quick start guide for the Soundcore Rave Neo 2 portable Bluetooth speaker. Learn how to set up, pair devices, use TWS and PartyCast features, and find technical specifications and support.

lang:en score:38 filesize: 577.44 K page_count: 2 document date: 2022-12-05

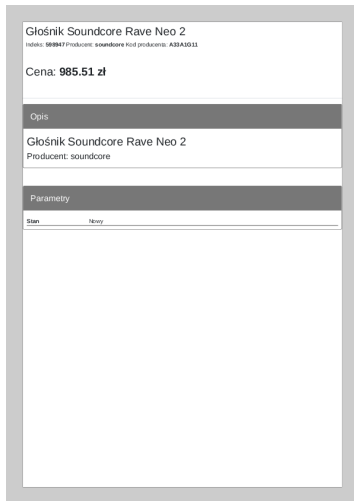

[pdf]

Głośnik Soundcore Rave Neo 2 Sklep internetowy stylem.pl glosnik soundcore rave neo 598947 upload files product |||

Głośnik Soundcore **Rave Neo 2** Indeks: 598947 Producent: soundcore Kod producenta: A33A1G11 Cena: 985.51 zł Opis Głośnik Soundcore **Rave Neo 2** Producent: soundcore Parametry Stan Nowy ...

lang:en score:37 filesize: 15.52 K page_count: 1 document date: 2025-01-29



[Soundcore Rave Neo 2 Portable Speaker User Manual](#)

Comprehensive user manual for the Soundcore Rave Neo 2 portable speaker, detailing setup, Bluetooth, TWS, PartyCast modes, app integration, and specifications.

lang:en score:36 filesize: 6.72 M page_count: 212 document date: 2022-12-07




[\[pdf\] Declaration of Conformity](#)

Dostálová Karolína Praha Music Center ANKER SOUNDCORE RAVE NEO 2 A33A1 CZ Návod k použití 482 89 KB Party reproduktor Anker SoundCore Rave Neo černý KASA.cz doc 5901636 kasa document 6 3 |||

A_SC_RAVE_NEO2_CZ SOUNDCORE **RAVE NEO 2** Návod k použití Pehled 1. Světelný režim 2. BassUp 3. Power 4. ... a do režimu provozu Bluetooth. 4. Režim PartyCast Můžete bezdrátově propojit až 100 stejných reproduktorů **Rave Neo 2** SE dohromady. 1. Připojte reproduktor **Rave Neo 2** SE k chytrému telefonu nebo tabletu jako r...

 lang:hr score:34 filesize: 482.89 K page_count: 8 document date: 2023-09-23

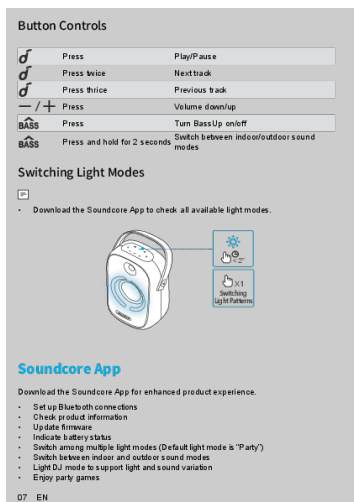

[\[pdf\]](#) Instructions

Soundcore App ManualsArea Download the for enhanced product experience Set up Bluetooth connections Check information Update firmware 9 cdn manualsarea instructions 4 portativnaa kolonka anker soundcore rave neo 2 instrukcia 234553 26062023 pages |||

Button Controls Press Play/Pause Press twice Next track Press thrice Previous track Press Volume down/up Press Turn BassUp on/off Press and hold for 2 seconds Switch modes between indoor/outdoor sound Switching Light Modes Download the Soundcore App to check all available ligh...

lang:nl score:33 filesize: 410.5 K page_count: 1 document date: 0000-00-00




[\[pdf\]](#)

Dostávová Karolína Praha Music Center ANKER SC Rave Neo 2 PÄjrtý reproduktor NÄivod 499 21 kB Anker SoundCore päjrtý Nay sk 2981679 cdn nay images orig 9 |||

ANKER_SC_RAVE_NEO2_SK SOUNDCORE **RAVE NEO 2** Nvod na použitie Prehla 1. Rezim Light Svetlo 2. Bass ... ezimu provania Bluetooth. 4 Rezim PartyCast Mzete bezdrtovo prepoji az 100 rovnakch reproduktorov **Rave Neo 2 SE**. 1. Pripojte **Rave Neo 2 SE** k smartfnu alebo tabletu ako reproduktor 1. 2. Stlacte raz ...

 
lang:hr score:33 filesize: 499.21 K page_count: 8 document date: 2023-09-23

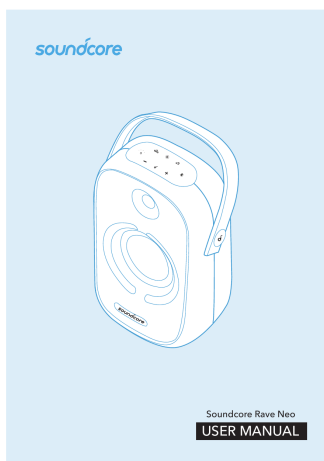

[\[pdf\]](#) User Manual

SoundCore Rave Neo Party Speakers A3395 User Manual Manuals Plus manual internal 2023 09 ||| Soundcore Rave Neo USER MANUAL English e tina Dansk Deutsch Espa ol Suomi Fran ais Italiano Nederlands Norsk J zyk polski 01 Portugues do Brasil 78 09 P 85 15 Slovensk Jazyk 92 22 T rk e 99 29 106 36 113 43 120 50 ...

 lang:en score:33 filesize: 5.91 M page_count: 148 document date: 2023-09-21

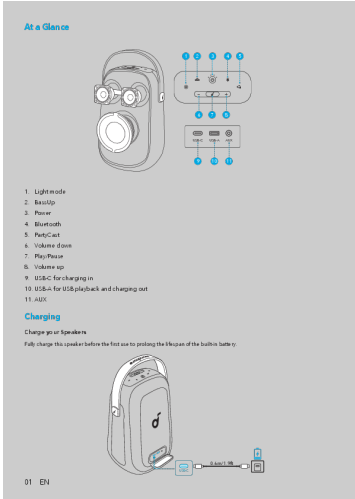

[Soundcore Rave Neo 2 Portable Bluetooth Speaker User Manual](#)

Comprehensive guide to the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features like Bluetooth, TWS, PartyCast, AUX/USB modes, button controls, light effects, app integration, and specifications.

 
lang:en score:32 filesize: 1.26 M page_count: 7 document date: 2025-08-20



[Soundcore Rave Neo 2 SE User Manual](#)

Comprehensive user manual for the Soundcore Rave Neo 2 SE portable Bluetooth speaker, covering charging, connectivity, features, and specifications.

lang:en score:31 filesize: 2.93 M page_count: 20 document date: 2023-04-06

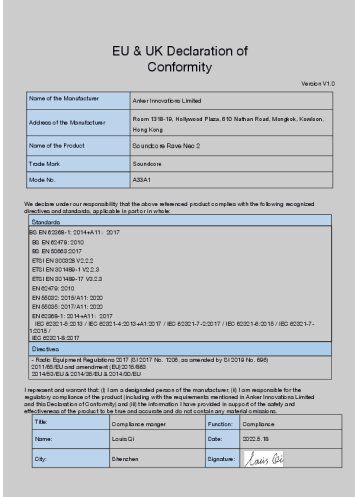

[\[pdf\] Declaration of Conformity](#)

anker A33A1 DOC Prohlášení o shodě CE 244 6 KB Party reproduktor Anker SoundCore Rave Neo 2 černý KASA cz doc 5901639 kasa document 9 3 |||

EU UK Declaration of Conformity Name of the Manufacturer Anker Innovations Limited Version V1.0 Address of the Manufacturer Name of the Product Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong Soundcore Rave Neo 2 Trade Mark Mode No. Soundcore A33A1 We declare un...

lang:en score:31 filesize: 244.6 K page_count: 1 document date: 2022-09-01



[\[pdf\]](#) User Manual Accessories

A3395 INT manual WEB Part 2 20200628 1593398503 d2211byn0pk9fi cloudfront net spree accessories attachments 83795

Soundcore Rave Neo USER MANUAL English Cestina Dansk Deutsch Espaol Suomi Franais Italiano Nederlands Norsk Jzyk polski 01 Portugues do Brasil 89 09 P 97 17 Slovensk Jazyk 105 25 Trke 113 33 121 41 129 49 137 57 145 65 153 73 161 81 W skrcie Panel grny 1 2 3 4 ...

lang:pl **score:28** filesize: 17.61 M page_count: 90 document date: 2020-06-28



[\[pdf\]](#) User Manual Installation Guide Warranty Accessories

Anker Soundcore Rave Neo 2 Bluetooth Japan A33A1Safety lp ankerjapan hubfs aoos manual |||

Anker Innovations Limited. All rights reserved. Soundcore and the Soundcore logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. Model: A33A1 5100500XXXX V01 Important Safety Information 1. Please read this user manual carefully and save it for...

lang:en **score:28** filesize: 2.88 M page_count: 68 document date: 2022-05-17



[\[pdf\]](#) User Manual

USER MANUAL ab7ba045 e8fb 4fb5 984f 2bd9585951be cdn cnetcontent ab 7b |||

Soundcore Rave Neo USER MANUAL English Cestina Dansk Deutsch Espaol Suomi Franais Italiano Nederlands Norsk Jzyk polski 01 Portugues do Brasil 89 09 P 97 17 Slovensk Jazyk 105 25 Trke 113 33 121 41 129 49 137 57 145 65 153 73 161 81 At a Glance Top Panel 1 2 3 ...

lang:en **score:27** filesize: 33.83 M page_count: 170 document date: 2020-05-18

Specifications	
Specifications are subject to change without notice.	
DC power input	5 V $\pm$ 3 A
Battery capacity	4900 mAh/7.2 V
USB output	5 V $\pm$ 2.1 A
Audio output power	80 W
Charging time	5.5 hours
Playtime (varies by volume level and music content)	Up to 18 hours
Waterproof level	IPX7
Bluetooth version	5.3
Bluetooth range	100 m
USB audio format	mp3

[pdf] Specifications

Anker Soundcore Rave Neo 2 PartyCast Portable Speaker in Black Specification Sheet RAVENEO2 A33A1Z11 194644097943 soundcore speaker spec sheet content abt documents 156104 ||| Specifications Specifications are subject to change without notice. DC power input Battery capacity USB output Audio output power Charging time Playtime varies by volume level and music content Waterproof level Bluetooth version Bluetooth range USB audio format 5V 3A 4900 mAh/7.2 V 5 V 2.1 A 80... lang:en score:16 filesize: 31.88 K page_count: 1 document date: 2023-09-30



[pdf] Quick Start Guide Declaration of Conformity

51005003428 Soundcore Speaker A33A1 QSG 80x80mm V1 20220602 Outline Rave Neo 2 Návod k použití CZ 1 51 MB Party reproduktor Anker SoundCore černý KASA cz doc 5901640 kasa document 0 4 6 ||| ... lang:en score:14 filesize: 1.51 M page_count: 2 document date: 2022-06-08