

Whirlpool 360 BW PRO INV H10

Whirlpool 360 Degree Top Load Bloomwash Pro 10 Kg 5 Star Fully Automatic Top Load Washing Machine

USER MANUAL

1. Introduction

Thank you for choosing the Whirlpool 360 Degree Top Load Bloomwash Pro Washing Machine. This appliance is designed to provide efficient and effective laundry care. With its 9.5 kg capacity, Hexa Bloom Impeller, and Edge-to-Edge Design, it offers superior cleaning performance with minimal fabric abrasion and convenient access to the drum.

Please read this manual thoroughly before operating your washing machine to ensure safe and proper use. Keep this manual for future reference.

2. Safety Information

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.

- Always disconnect the appliance from the power supply before attempting any service.

3. Setup

3.1 Unpacking

Carefully remove all packaging materials. Ensure that all included components are present: 1 Washing Machine, 1 Inlet Pipe, 1 Outlet Pipe, and 1 Manual.

3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and maintenance. Avoid direct sunlight or extreme temperatures.



Image: Dimensions of the Whirlpool 360 Degree Bloomwash Pro washing machine, showing a width of 57 cm, depth of 59 cm, and height of 105 cm.

3.3 Water Connection

Connect the inlet pipe to a cold water tap and the designated inlet on the washing machine. Ensure connections are secure to prevent leaks. Position the outlet pipe to drain into a suitable drain or sink, ensuring it is not kinked or blocked.

3.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the washing machine (220 Volts AC).

4. Operating Instructions

4.1 Control Panel Overview



Image: Detailed view of the washing machine's control panel, featuring 12 wash programs, Eco Wash, Anti Bacterial Wash, and 3 Hot Water Modes, along with controls for power, program selection, start/pause, time remaining, water level, and hot wash options.

The control panel features a knob for program selection and buttons for various functions such as Power, Program, Start/Pause, Express Wash, Dry, Water Level, and Hot Wash modes.

4.2 Loading Laundry

Open the Edge-to-Edge Design lid for convenient access. Load clothes loosely into the drum, ensuring not to overload the machine. The maximum capacity is 9.5 kg.



Image: Top-down view of the Whirlpool washing machine with its lid open, revealing the stainless steel drum and the Hexa Bloom Impeller at the bottom.

4.3 Adding Detergent

Add the recommended amount of detergent to the dispenser. Refer to your detergent packaging for appropriate dosage based on load size and soil level.

4.4 Selecting Wash Programs and Features

Turn the program knob to select one of the 12 available wash programs, including:

- **Stainwash Program:** Designed to remove tough stains, even those left unattended for up to 48 hours. This program utilizes a 6-step water heating process to tackle up to 50 stubborn stains like ketchup, oil, and grass.

- **Anti Bacterial Wash:** Ensures hygienic cleaning.
- **Eco Wash:** For energy-efficient washing.
- Other programs for Daily, Heavy, Delicate, Woollens, Bed Sheet, Wash Only, Rinse-Dry, Dry Only, and Whites.

Utilize the **In-Built Heater** with three temperature levels (warm, hot, and allergen-free) to customize water temperature up to 60°C for optimal fabric care.

The **Hexa Bloom Impeller** with 6 vanes creates a unique 360° blooming wash motion, ensuring thorough cleaning with minimal fabric abrasion.



Express Wash



Soft Close Lid



Power Dry



Hexa Bloom Impeller

Image: A collage showcasing key features: Express Wash for quick cycles, Soft Close Lid for gentle operation, Power Dry for efficient drying, and the Hexa Bloom Impeller for 360-degree wash motion.



Image: A close-up view of the Hexa Bloom Impeller inside the washing machine drum, highlighting its unique 6-vane design for effective washing.

4.5 Starting a Wash Cycle

After selecting the program and desired options, press the Start/Pause button to begin the wash cycle.

5. Maintenance

5.1 Cleaning the Drum

Regularly clean the washing machine drum to prevent odor and residue buildup. Run a hot wash cycle with an empty drum and a washing machine cleaner or a cup of white vinegar.

5.2 Cleaning the Filter

Locate and clean the lint filter periodically to ensure efficient drainage and prevent lint transfer to clothes. Refer to the specific location of the filter in your manual.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

5.4 Winterizing (If Applicable)

If the machine is to be stored in an area subject to freezing temperatures, drain all water from the machine to prevent damage.

6. Troubleshooting

Before contacting customer service, try the following solutions for common issues:

Problem	Possible Cause / Solution
Machine does not start	Check if the power cord is securely plugged in. Ensure the lid is fully closed. Check if a program is selected and the Start/Pause button is pressed.
Water not filling	Check if the water tap is open. Ensure inlet hoses are not kinked or blocked.
Water not draining	Check if the drain hose is kinked or blocked. Clean the lint filter.
Excessive vibration/noise	Ensure the machine is on a level surface. Redistribute the laundry load evenly inside the drum.
Error codes displayed	Refer to the specific error code in the detailed troubleshooting section of your full manual or contact customer support.

If the problem persists after attempting these solutions, please contact Whirlpool customer support.

7. Specifications

Feature	Detail
Brand	Whirlpool
Model	360 BW PRO INV H10
Capacity	9.5 Kilograms
Energy Efficiency	5 Star
Noise Level	63 dB
Installation Type	Freestanding

Feature	Detail
Colour	Grey
Control Console	Knob
Access Location	Top Load
Voltage	220 Volts (AC)
Wattage	770 Watts
Material	Stainless Steel
Item Weight	36 kg
Dimensions (LxWxH)	57 x 60 x 104 Centimeters

8. Warranty and Support

Your Whirlpool washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage.

For technical assistance, service requests, or any queries regarding your product, please contact Whirlpool customer support. Contact details can typically be found on the warranty card or the official Whirlpool website.

Always ensure to have your model number (360 BW PRO INV H10) and purchase details ready when contacting support.

© 2024 Whirlpool. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my Whirlpool 360 BW PRO washing machine running for more than 2:30 hours, and how can I set it correctly?

If your Whirlpool 360 BW PRO washing machine is running for more than 2:30 hours, it is likely due to specific program selections or environmental factors affecting the cycle. Here are the most common...

[Read full answer](#)