

ReadyWired TS3322

ReadyWired USB Cable for Canon Pixma Printer TS3322 Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your ReadyWired USB Cable. This cable is designed to connect your Canon Pixma Printer TS3322 to a compatible computer or power source, ensuring reliable data transfer and power supply.

Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. SAFETY INFORMATION

- Do not expose the cable to extreme temperatures, direct sunlight, or moisture.
- Avoid bending or twisting the cable excessively, as this can damage internal wires.
- Keep the cable away from children and pets.
- Do not attempt to modify or repair the cable. Contact support if damage occurs.
- Ensure connectors are properly aligned before insertion to prevent damage to ports.

3. PACKAGE CONTENTS

Verify that your package contains the following item:

- 1 x ReadyWired USB Cable (6 Ft. / 1.8 meters)



Figure 1: ReadyWired USB Cable. An image showing the ReadyWired USB cable, featuring a standard USB-A connector on one end and a USB-B connector on the other, suitable for connecting a printer to a computer.

4. SETUP

Follow these steps to connect your ReadyWired USB Cable:

1. **Identify Ports:** Locate the USB-B port on your Canon Pixma Printer TS3322 and an available USB-A port on your computer or power source. The USB-B port is typically square-shaped with two chamfered corners, while the USB-A port is rectangular.
2. **Connect to Printer:** Gently insert the USB-B end of the ReadyWired cable into the USB-B port on your Canon Pixma Printer TS3322. Ensure it is fully seated.
3. **Connect to Computer/Source:** Insert the USB-A end of the ReadyWired cable into an available USB-A port on your computer or a compatible USB power adapter.
4. **Power On:** Turn on your printer and computer. Your computer should automatically detect the printer. If not, you may need to install the printer drivers from Canon's official website.

5. OPERATING INSTRUCTIONS

Once the cable is properly connected and your printer drivers are installed, the ReadyWired USB Cable facilitates communication between your computer and the Canon Pixma Printer TS3322. You can now perform printing tasks as usual through your computer's operating system.

- Ensure both the printer and computer are powered on.
- Select your Canon Pixma Printer TS3322 from your computer's print dialogue.
- The cable will transmit print data from your computer to the printer.

6. MAINTENANCE

To ensure the longevity and optimal performance of your ReadyWired USB Cable, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the cable and connectors. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the cable in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent internal damage.
- **Handling:** Always grasp the connector ends when plugging or unplugging the cable. Avoid pulling on the cable itself.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not detected by computer.	Loose connection, incorrect port, or missing drivers.	<ul style="list-style-type: none">◦ Ensure both ends of the cable are securely connected.◦ Try a different USB port on your computer.◦ Verify printer drivers are installed. Download from Canon's official website if necessary.◦ Restart both the computer and the printer.
Intermittent connection.	Damaged cable or faulty port.	<ul style="list-style-type: none">◦ Inspect the cable for visible damage (frays, kinks).◦ Try connecting the cable to another device or using a different cable to isolate the issue.◦ Ensure the cable is not bent or strained during use.

8. SPECIFICATIONS

- **Brand:** ReadyWired
- **Model:** USB Cable for Canon Pixma Printer TS3322
- **Cable Type:** USB
- **Connector Type:** USB-A Male to USB-B Male
- **Length:** 6 Feet (approximately 1.8 meters)
- **Color:** Black
- **Special Feature:** Tangle Free
- **Compatible Devices:** Canon Pixma Printer TS3322 and other compatible printers
- **Indoor/Outdoor Usage:** Indoor, Outdoor

9. WARRANTY INFORMATION

ReadyWired products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official ReadyWired website. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact ReadyWired customer support:

- **Website:** www.readywired.com *(Note: This is a placeholder URL. Please refer to your product packaging for the actual support website.)*
- **Email:** support@readywired.com *(Note: This is a placeholder email. Please refer to your product packaging for the actual support email.)*