

[Manuals.plus](#) /

› [AKCISOT](#) /

› AKCISOT 16 Inch Silent Non-Ticking Wall Clock User Manual - Model AKCISOT 207

AKCISOT AKCISOT 207

AKCISOT 16 Inch Silent Non-Ticking Wall Clock User Manual

Model: AKCISOT 207

INTRODUCTION

Thank you for choosing the AKCISOT 16 Inch Silent Non-Ticking Wall Clock. This manual provides essential information for setting up, operating, and maintaining your new clock. Designed for clarity and quiet operation, this analog clock is a functional and aesthetic addition to any room.



Front view of the AKCISOT 16 Inch Silent Wall Clock.

PRODUCT FEATURES

- **Easy to See:** Designed with large, clear numerals for excellent visibility.
- **Accurate Timekeeping:** Equipped with a reliable quartz movement for precise time.
- **Silent Operation:** Features a quiet sweep movement, ensuring no distracting ticking sounds.
- **Simple Design:** A clean and classic clock face that complements various interior styles.
- **Durable Construction:** Made with a sturdy plastic frame and quality metal hands.



16 Inch Large Wall Clock

Overview of key features: accurate silent quartz movement, quality metal hands, easy to hang, large bold numbers, clean minute marks, and ABS plastic frame.

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover.



Rear view of the clock, highlighting the battery compartment and time adjustment knob.

2. Setting the Time

1. Turn the adjustment knob located on the back of the clock's movement mechanism.
2. Rotate the knob until the clock hands display the correct time.

Note: Do not move the clock hands directly from the front, as this may damage the movement mechanism.

Your browser does not support the video tag.

Video demonstrating battery installation and time setting for the AKCISOT Wall Clock.

3. Mounting the Clock

The clock comes with two hooks for easy wall mounting. Choose a suitable location on your wall and securely hang the clock using the integrated hanging slot on the back.



The AKCISOT wall clock displayed in an office environment, showcasing its easy-to-read design.

OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, your AKCISOT wall clock will begin operating. The silent sweep movement ensures that the second hand moves continuously without any audible ticking, providing a peaceful environment.

Your browser does not support the video tag.

Video highlighting the silent, non-ticking sweep movement and bold numbers of the AKCISOT wall clock.

The large, bold numerals and clear minute marks make it easy to read the time from a distance, suitable for various rooms including living rooms, offices, and schools.

MAINTENANCE

- **Cleaning:** Wipe the clock face and frame with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace the AA battery annually or when the clock starts losing time. Always insert the new battery with the correct polarity.
- **Environment:** While suitable for indoor and outdoor use, avoid exposing the clock to extreme temperatures or direct moisture for prolonged periods to ensure longevity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly	Dead or low battery; incorrectly installed battery.	Replace with a fresh AA battery, ensuring correct polarity.

Problem	Possible Cause	Solution
Clock hands are stuck or misaligned	Physical obstruction or damage to the movement.	Gently check for any obstructions. If hands are misaligned, carefully adjust using the setting knob on the back. Avoid forcing the hands directly.
Audible ticking sound	This model features a silent sweep movement. If ticking is heard, it may indicate an issue with the mechanism.	Contact customer support if the silent feature is not functioning as expected.

SPECIFICATIONS

Brand	AKCISOT
Model Number	AKCISOT 207
Size	16 Inch
Color	Black
Display Type	Analog
Style	Modern
Special Feature	Silent Clock
Product Dimensions	16"W x 1.8"H
Power Source	Battery Powered (1 AA battery required, not included)
Watch Movement	Quartz
Material Type	Plastic
Item Weight	12.8 ounces

WARRANTY AND SUPPORT

This AKCISOT wall clock comes with a **1-year manufacturer's warranty**. For warranty claims, technical support, or any inquiries, please contact AKCISOT customer service through the retailer where you purchased the product or visit the official AKCISOT store on Amazon:

[Visit the AKCISOT Store](#)

© 2026 AKCISOT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question