

[Manuals.plus](#) /

› [VG VOGCREST](#) /

› VG VOGCREST 2-in-1 Facial Hair Remover and Nose Trimmer (Model VG-105) User Manual

VG VOGCREST VG-105

VG VOGCREST 2-in-1 Facial Hair Remover and Nose Trimmer (Model VG-105) User Manual

Comprehensive instructions for safe and effective use of your VG VOGCREST grooming device.

INTRODUCTION

The VG VOGCREST 2-in-1 Facial Hair Remover and Nose Trimmer is a versatile grooming tool designed for precise and gentle hair removal. This device features two interchangeable heads: one for facial hair removal and another for nose and ear hair trimming. Its compact, rechargeable design makes it ideal for both home use and travel.



Image: The VG VOGCREST 2-in-1 device with both facial hair remover and nose trimmer heads, along with its packaging.

SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the device away from children.
- Do not use on irritated, sunburned, or broken skin. Consult a doctor if you have sensitive skin or skin conditions.
- Do not immerse the main body of the device in water, only the detachable heads are designed for wet cleaning.
- Ensure the device is fully charged before first use to optimize battery life.
- Avoid using the device while charging.
- If the device becomes excessively hot during use, discontinue use and allow it to cool down.

SETUP

1. Charging the Device

Before first use, fully charge the device. The device is equipped with a USB Type-C charging port.

1. Connect the provided USB Type-C cable to the charging port at the bottom of the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The indicator light will illuminate during charging and turn off or change color when fully charged.
4. A full charge typically takes approximately 1-2 hours.



Image: Close-up of the USB Type-C charging port and power button on the device.

2. Attaching/Changing Trimmer Heads

The device comes with two interchangeable heads: a facial hair remover head and a nose/ear trimmer head.

1. To attach a head, align the head with the main body of the device and gently twist clockwise until it locks into place.
2. To remove a head, twist counter-clockwise and pull it off.

NOSE & EAR HAIR TRIMMER

Specially designed to prevent accidental nose hair pinching. Keep your nose & ear neat, and clean



Image: The device shown with both the facial hair remover head and the nose trimmer head detached, illustrating their interchangeability.

OPERATING INSTRUCTIONS

Ensure your skin is clean and dry before use, unless performing wet shaving.

1. Using the Facial Hair Remover Head

- Attach the facial hair remover head to the device.
- Press the power button to turn on the device.
- Gently press the head against your skin and move it in small, circular motions to remove unwanted facial hair.
- Avoid applying excessive pressure to prevent skin irritation.
- This head is suitable for areas such as the upper lip, chin, cheeks, and peach fuzz.



Image: A woman using the facial hair remover head on her cheek, demonstrating gentle circular motions.

2. Using the Nose and Ear Trimmer Head

- Attach the nose and ear trimmer head to the device.
- Press the power button to turn on the device.
- Carefully insert the trimmer tip into your nostril or ear canal, ensuring not to insert it too deeply.
- Move the trimmer gently to cut unwanted hair.
- This head is specifically designed to prevent accidental pinching.



Image: A woman using the nose trimmer head for nose hair removal, with an inset showing ear hair trimming.

3. Wet and Dry Use

The device features an IPX6 waterproof design, allowing for safe use in both wet and dry conditions. You can use it in the shower or with shaving cream for a smoother experience.



Image: The device being used in a wet environment, highlighting its waterproof capability.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your device.

1. **Remove the Head:** Turn off the device and detach the trimmer head by twisting counter-clockwise.
2. **Brush Cleaning:** Use the small cleaning brush (if included) to brush away any loose hairs from the blades and inside the head.
3. **Rinse:** Rinse the detached trimmer head under running water. Ensure no water enters the main body of the device.
4. **Dry:** Allow the head to air dry completely before reattaching it to the device or storing.
5. **Storage:** Store the device with its magnetic lid in a cool, dry place. The magnetic lid ensures hygienic storage and protects the device.

HOW TO CLEAN



Image: A four-step visual guide demonstrating how to detach, brush clean, rinse, and reattach the trimmer head.



Image: The device with its magnetic lid, illustrating how it protects the trimmer head for storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device not charged.	Charge the device fully using the USB Type-C cable.

Problem	Possible Cause	Solution
Poor trimming performance.	Blades are dull or clogged with hair.	Clean the trimmer head thoroughly. If performance does not improve, the blades may need replacement (contact support).
Device feels hot during use.	Prolonged use or internal issue.	Discontinue use and allow the device to cool down. If overheating persists, contact customer support.
Skin irritation after use.	Excessive pressure, sensitive skin, or improper technique.	Use gentle, light pressure. Ensure skin is clean. If irritation persists, consult a dermatologist.

SPECIFICATIONS

- **Model Number:** VG-105
- **Brand:** VG VOGCREST
- **Power Source:** Battery Powered (1 Lithium-ion battery required)
- **Charging:** USB Type-C
- **Dimensions (L x W x H):** 50 x 50 x 130 mm (5 x 5 x 13 cm)
- **Weight:** 118 grams
- **Blade Material:** Metal
- **Special Features:** USB Accessible, Waterproof (IPX6), Wet/Dry Use
- **Color:** Rose
- **UPC:** 860008671998
- **Recommended Uses:** Face, Nose, Ears, Lips, Chin

WARRANTY INFORMATION

This VG VOGCREST product comes with a **Lifetime Warranty** against product defects. For any manufacturing defects, please contact customer support for assistance. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, warranty claims, or general inquiries, please contact VG VOGCREST customer support through the retailer's platform or visit our official website.

Online Support: www.vogcrest.com/support (Note: This is a placeholder URL, please refer to your product packaging for actual support contact details.)