

[Manuals.plus](#) /

› [CHIQ](#) /

› CHIQ CBM159LEBD Refrigerator Freezer User Manual

CHIQ CBM159LEBD

CHIQ CBM159LEBD Refrigerator Freezer User Manual

Model: CBM159LEBD | Brand: CHIQ

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CHIQ CBM159LEBD refrigerator freezer. Please read it thoroughly before installation and use, and keep it for future reference.

Safety Information

Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury when using this appliance.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or maintenance.
- Keep ventilation openings clear of obstruction.

2. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your refrigerator freezer.

Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

Placement

Choose a location with sufficient space for the appliance to operate efficiently. Ensure adequate air circulation around the unit. Avoid direct sunlight or heat sources.

Technologie Low Frost

Meilleure vitesse de refroidissement et de congélation et meilleure conservation.



Facile et pratique pour une utilisation quotidienne



Congélateur statique conventionnel



Image: The CHIQ CBM159LEBD refrigerator freezer in a living room setting, illustrating its compact size (47.4x49.5x144 cm) and how it fits into various spaces. This model occupies approximately 0.23m².


Leveling

The appliance must be level to function correctly. Use the adjustable leveling feet at the bottom to ensure stability and proper door alignment.

Plus de détails



Pieds réglables en hauteur

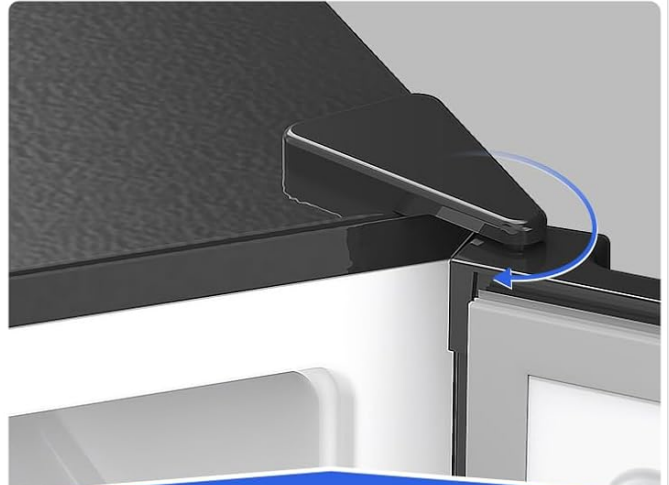

Porte réversible



Lumière automatique



Poignée de porte cachée

Image: A detailed view of the adjustable leveling feet located at the base of the refrigerator, designed to ensure the appliance remains stable on uneven surfaces.

Initial Power-On

After placement, wait at least 4 hours before plugging in the appliance to allow the refrigerant to settle. Once plugged in, allow it to run for several hours to reach optimal temperature before storing food.

3. OPERATING INSTRUCTIONS

Understanding the controls and features will help you maximize the efficiency and convenience of your CHIQ refrigerator freezer.

Temperature Control

The CHIQ CBM159LEBD features variable temperature settings. The refrigerator compartment temperature ranges from

2°C to 8°C, while the freezer compartment maintains a constant temperature between -16°C and -24°C.

Double zone de température



Réfrigérateur 109L
Température (2~8°C)



Congélateur 48L
Température (-16~-24°C)



Image: An illustration demonstrating the dual temperature zones of the CHIQ refrigerator freezer. The upper refrigerator section (109L) operates between 2°C and 8°C, and the lower freezer section (48L) operates between -16°C and -24°C.

Use the temperature dial or control panel to adjust settings. Typically, a setting of 3 or 4 is recommended for general use.



Image: A close-up of the temperature control dial, showing settings from 1 to 5 and a 'SET' button, allowing users to precisely adjust the cooling level.

Low Frost Technology

This appliance features Low Frost technology, which significantly reduces ice build-up in the freezer compartment compared to conventional static freezers. This means less frequent manual defrosting and better preservation of food.

Taille parfaite pour n'importe quel endroit

occupe 0.23m² taille du produit : 47.4x49.5x144 cm



Image: A visual comparison highlighting the benefits of Low Frost technology, showing minimal ice accumulation in the CHIQ freezer compared to heavy frost in a conventional static freezer, indicating improved cooling speed and food preservation.

Internal Features

- **Removable Shelves:** The refrigerator is equipped with adjustable and removable shelves to accommodate various food items and storage needs.
- **Vegetable Crisper Drawer:** A dedicated drawer helps maintain humidity levels for fresh fruits and vegetables, keeping them juicy and crisp.
- **LED Lighting:** An internal LED light illuminates the refrigerator compartment, making it easy to find items, even in low light conditions.
- **Reversible Door:** The door hinges can be reversed to open from either the left or right side, offering flexibility in

placement.

Juste ce qu'il faut

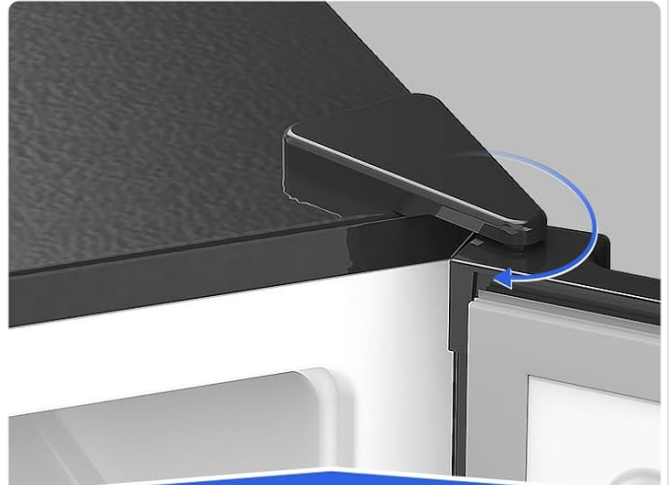


Image: An open view of the CHIQ refrigerator freezer, detailing the internal layout with shelves, crisper drawer, and freezer compartments, along with their respective dimensions.

Plus de détails



Pieds réglables en hauteur



Porte réversible



Lumière automatique



Poignée de porte cachée

Image: A collage showing various detailed features of the refrigerator, including height-adjustable feet, a reversible door mechanism, the automatic LED light inside, and the hidden door handle design.

4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

Cleaning

Always unplug the refrigerator freezer before cleaning. Clean the interior and exterior with a soft cloth and mild detergent. Avoid abrasive cleaners or solvents. The door gaskets are removable for thorough cleaning.

Defrosting

While Low Frost technology reduces ice build-up, occasional manual defrosting of the freezer compartment may still be

necessary. When the ice layer reaches about 3-5 mm thickness, defrost the unit. Remove all food, unplug the appliance, and allow the ice to melt naturally. Use the provided defrosting tool if necessary. Do not use sharp objects to remove ice.

Power Outage

In case of a power outage, keep the refrigerator door closed to maintain the internal temperature for as long as possible. Food can remain frozen for several hours depending on the ambient temperature and how full the freezer is.

5. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not operate	No power; plug not inserted; circuit breaker tripped.	Check power supply; ensure plug is firmly in socket; reset circuit breaker.
Temperature is not cold enough	Door opened too frequently; large amount of warm food added; poor ventilation; temperature setting too high.	Minimize door openings; allow warm food to cool before storing; ensure proper ventilation; adjust temperature setting lower.
Excessive noise	Appliance not level; contact with wall/furniture; normal operating sounds.	Adjust leveling feet; move appliance away from obstructions; gurgling/humming sounds are normal.
Door alarm sounds	Door not fully closed.	Ensure door is completely shut.

If the problem persists after checking these points, please contact CHIQ customer support.

6. SPECIFICATIONS

Key technical specifications for the CHIQ CBM159LEBD refrigerator freezer:

- **Brand:** CHIQ
- **Model Number:** CBM159LEBD
- **Dimensions (L x W x H):** 49.5 x 47.4 x 144 cm
- **Weight:** 40 kg
- **Total Capacity:** 157 Liters
- **Refrigerator Volume:** 109 Liters
- **Freezer Volume:** 48 Liters
- **Annual Energy Consumption:** 152 kWh/year
- **Energy Efficiency Rating:** D
- **Noise Level:** 39 dB
- **Installation Type:** Freestanding

- **Defrost System:** Low Frost (Freezer), Defrost (Refrigerator)
- **Door Finish:** Stainless Steel (Black)
- **Number of Doors:** 2
- **Special Features:** Door alarm, Reversible door, Adjustable leveling feet, LED lighting.

Efficacité énergétique 39 dB

fonctionnement silencieux



Image: The energy efficiency label for the CHI Q CBM159LEBD, showing an energy class D rating, 152 kWh/annum consumption, 48L freezer volume, 109L refrigerator volume, and 39 dB noise level. More details can be found on the [EPREL database](#).

7. WARRANTY AND SUPPORT

CHI Q provides comprehensive support for its products.

Warranty Information

This product comes with a **12-year warranty for the compressor** and lifetime after-sales service. Please retain your proof of purchase for warranty claims.



Image: A golden badge indicating a 12-year warranty for the compressor, highlighting CHIQ's commitment to product durability.

Customer Support

If you require assistance, have questions, or need to make a warranty claim, please contact CHIQ customer service. Refer to the contact information provided with your purchase or visit the official CHIQ website. You can also visit the [CHIQU Brand Store on Amazon](#) for more information and support.

© 2024 CHIQ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C5CTDGSH>

More documents and user manuals: <https://manuals.plus/>