



Manuals.plus /

› HZLSBL /

› HZLSBL Vintage Gramophone with Bluetooth Output User Manual

HZLSBL HZLSBL

HZLSBL Vintage Gramophone with Bluetooth Output User Manual

Model: HZLSBL

Brand: HZLSBL

1. INTRODUCTION

Thank you for choosing the HZLSBL Vintage Gramophone. This device combines classic aesthetics with modern audio technology, offering multiple playback options including vinyl records, Bluetooth connectivity, FM radio, CD, USB, and cassette tape. This manual provides detailed instructions to help you set up, operate, and maintain your gramophone for optimal performance and enjoyment.



Figure 1: The HZLSBL Vintage Gramophone in a home environment.

Your browser does not support the video tag.

Video 1: An overview of the HZLSBL Vintage Gramophone's design and features.

2. WHAT'S IN THE BOX

Upon unpacking, please ensure all the following components are present:

- Host (Cabinet)
- Instruction Manual (this document)
- Metal Loudspeaker (Horn)
- Power Adapter
- Remote Control

3. SETUP

3.1 Unpacking and Placement

Carefully remove all components from the packaging. Place the main unit on a stable, flat surface away from direct sunlight, heat sources, and moisture. Ensure adequate ventilation around the unit.

3.2 Assembling the Metal Loudspeaker (Horn)

Attach the metal loudspeaker to the designated port on the main unit. Gently twist until it is securely fastened. Avoid overtightening.

3.3 Power Connection

Connect the power adapter to the DC IN port on the back of the gramophone, then plug the adapter into a standard wall outlet.

Your browser does not support the video tag.

Video 2: Guide on how to install and play records on a similar gramophone model.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the 'POWER' button on the front panel to turn the unit on or off.

4.2 Mode Selection

Use the 'MODE' button on the front panel or the remote control to cycle through available modes: PHONO (Vinyl), CD/USB, TAPE, FM, AUX, and Bluetooth.



Figure 2: Detailed view of the control panel, turntable, and horn.

4.3 Vinyl Record Playback (PHONO Mode)

1. Open the top lid and secure it with the lid support.
2. Place a vinyl record on the turntable.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch.
4. Gently lift the tonearm and position the stylus over the desired track on the record.
5. Lower the tonearm slowly onto the record. Playback will begin.
6. Adjust the volume using the 'VOLUME' knob.

Support 3 speed adjustment
and can play three sizes of vinyl



7 Inch



9 Inch



12 Inch

Figure 3: The gramophone supports 3-speed adjustment for 7, 9, and 12-inch vinyl records.

4.4 Bluetooth Operation

1. Switch the unit to Bluetooth mode. The display will show 'BLUE' or similar.
2. On your mobile device, enable Bluetooth and search for 'HZLSBL Gramophone' or similar.
3. Pair your device. Once connected, you can stream audio wirelessly.
4. Adjust volume from both your device and the gramophone.

4.5 FM Radio Operation

1. Switch the unit to FM mode.
2. Use the 'TUNING' knob to scan for radio stations.
3. Adjust the volume as desired.

4.6 CD Playback

1. Switch the unit to CD mode.
2. Press the 'EJECT' button to open the CD tray.

3. Place a CD in the tray with the label side up and close the tray.
4. Use the playback controls (Play/Pause, Skip, Repeat, Shuffle) on the front panel or remote.

4.7 Cassette Tape Playback

1. Insert a cassette tape into the cassette slot on the side of the unit.
2. Switch the unit to TAPE mode.
3. Use the basic controls (Play, Fast Forward, Eject) available for cassette playback.

4.8 USB Playback

1. Insert a USB drive into the USB port.
2. Switch the unit to CD/USB mode. The unit should automatically detect and play compatible audio files.
3. Use the playback controls to navigate tracks.

4.9 AUX Input

Connect an external audio device (e.g., MP3 player) to the AUX IN port using a 3.5mm audio cable. Switch the unit to AUX mode to play audio from the connected device.

4.10 Headphone Use

Plug headphones into the headphone jack for private listening. The main speakers will be muted automatically.

4.11 Remote Control

The included remote control allows for convenient operation of various functions from a distance, including power, mode selection, volume, and playback controls.

Remote control is more intelligent
 When you enjoy a leisurely
 home life Bringing you a more
 relaxed adjustment
 method Convenient and fast



Figure 4: The included remote control for convenient operation.

5. MAINTENANCE

5.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the stylus, use a soft brush to gently remove dust from front to back.

5.2 Stylus Care

A clean stylus ensures optimal sound quality and prolongs the life of your records. Replace the stylus when you notice a decrease in sound quality or increased skipping.



Figure 5: Close-up of the record player's stylus.

6. TROUBLESHOOTING

- **No Power:** Ensure the power adapter is securely connected to both the unit and a working power outlet.
- **No Sound:** Check the volume level on the unit and any connected external devices. Ensure the correct mode is selected. If using headphones, disconnect them to check main speakers.
- **Poor Sound Quality (Vinyl):** Clean the record and stylus. Ensure the record is placed correctly and the correct speed is selected.
- **Bluetooth Pairing Issues:** Ensure the unit is in Bluetooth mode and your device's Bluetooth is enabled and discoverable. Try restarting both devices.
- **Skipping Records:** Ensure the gramophone is on a stable, level surface. Clean the record and stylus.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	15 x 14.5 x 27.5 inches
Item Weight	17.2 pounds
Model Name	HZLSBL Vintage Gramophone with Bluetooth Output
Material	Wood, Zinc Alloy
Playback Modes	USB, Vinyl, FM Radio, Bluetooth, CD, Cassette, AUX
Vinyl Speeds	33/45/78 RPM
Speaker Configuration	10W tweeter (copper horn), two 20W full-range midrange speakers
Sound Output	360-degree stereo surround sound
Included Components	Host (cabinet), Instruction Manual, Metal loudspeaker, Power Adapter, Remote Control



Figure 6: Key features and dimensions of the gramophone.



Figure 7: Detailed product specifications.



US	Other
 <p>Size: 15in*14.5in*27.5in</p>	 <p>Size: 11in*11in*23in</p>
<p>Speakers: 10W Wooferx1 10W Tweeter x1 20W Full-range Stereo Speakers x2</p>	<p>Speakers: 20W Full-range Stereo Speakers x2</p>
<p>Speed: 3(33/45/78RPM)</p>	<p>Speed: 2(33/45RPM)</p>
<p>Craftsmanship: Smooth and even surface. Vintage Craft Metal Roman Column. Hand-polished finish with nature-inspired paint formula</p>	<p>Craftsmanship: Simple wooden casing</p>

Figure 8: Comparison of specifications between the US model and other models.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided on the product packaging or the official HZLSBL website. Keep your purchase receipt as proof of purchase for warranty claims.