

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOBUSA](#) /

› [TOBUSA 65-inch Floor Lamp with 3CCT LED Bulb Instruction Manual](#)

TOBUSA JF17061A.BK

TOBUSA 65-inch Floor Lamp with 3CCT LED Bulb Instruction Manual

Model: JF17061A.BK

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your TOBUSA 65-inch Floor Lamp. Please read this manual thoroughly before use and retain it for future reference. This modern standing lamp features a drum shade, a black pole, a convenient foot switch, and includes a 3CCT (Correlated Color Temperature) A19 LED bulb, offering adjustable lighting for various environments.

SAFETY INSTRUCTIONS

- Ensure the lamp is unplugged before assembly, cleaning, or replacing the bulb.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact qualified service personnel.
- This lamp is designed for indoor use only. Do not expose to water or high humidity.
- Place the lamp on a stable, level surface to prevent tipping. The heavy-weighted base is designed for stability.
- Use only bulbs of the specified type and wattage (E26 base, max 60W incandescent or equivalent LED). The included LED bulb is 9W.
- Keep the lampshade clear of flammable materials.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Base
- Lamp Pole Sections (multiple, to be screwed together)
- Lampshade (fabric drum shade)
- Fixing Ring for Lampshade

- A19 3CCT LED Bulb (E26 base, 9W)
- Power Cord with Foot Switch

SETUP AND ASSEMBLY

No tools are required for the assembly of this floor lamp. Follow these steps:

1. **Install the Lampshade:** Carefully unroll and attach the fabric lampshade to its metal rings, if it comes flat-packed. Ensure it forms a cylindrical shape.
2. **Assemble the Lamp Pole:** Screw all the individual pole sections together clockwise until they are securely connected.
3. **Attach Pole to Base:** Thread the power cord through the lamp base and then screw the assembled lamp pole into the lamp base clockwise until it is firm.
4. **Secure the Lampshade:** Place the assembled lampshade onto the lamp holder. Screw the fixing ring onto the lamp holder to secure the lampshade in place.
5. **Install the LED Bulb:** Carefully screw the included A19 LED bulb into the E26 socket. Do not overtighten.
6. **Connect to Power:** Plug the power cord into a standard 120V AC electrical outlet.



Image: Step-by-step assembly guide for the TOBUSA floor lamp, showing how to install the lampshade, screw pole sections, attach to base, secure shade, and insert the bulb.

OPERATING INSTRUCTIONS

The TOBUSA floor lamp is operated using a convenient foot switch located on the power cord.

- **Power On/Off:** Step on the foot switch once to turn the lamp on. Step on it again to turn the lamp off.
- **Adjusting Color Temperature (3CCT):** The included LED bulb offers three color temperature settings: 3000K (Warm White), 4000K (Natural White), and 6500K (Cool White). To cycle through these settings, simply turn the lamp off and then immediately back on using the foot switch. Each toggle will change the color temperature.

3 Color Temperatures Selectable (A19 LED Bulb Included)

3000K

4000K

6500K



Image: The TOBUSA floor lamp displaying the three selectable color temperatures: 3000K (warm), 4000K (natural), and 6500K (cool).



Image: A detailed view of the simple foot pedal switch, allowing for easy operation of the lamp.

MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged before cleaning. Wipe the metal pole and base with a soft, dry cloth. For the fabric lampshade, use a lint roller or a soft brush to remove dust. Do not use liquid cleaners or abrasive materials.
- **Bulb Replacement:** When replacing the bulb, ensure the lamp is unplugged and the bulb has cooled down. Use an E26 base LED bulb, maximum 60W equivalent.

- **Cord Care:** Regularly inspect the power cord and plug for any signs of damage. Do not place heavy objects on the cord or run it under carpets.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------------|---|---|
| Lamp does not turn on. | <ol style="list-style-type: none"> 1. Power cord not fully plugged in. 2. Wall outlet is not active. 3. Bulb is loose or faulty. | <ol style="list-style-type: none"> 1. Ensure the plug is securely inserted into the outlet. 2. Test the outlet with another device or check the circuit breaker. 3. Tighten the bulb or replace it with a new one. |
| Light flickers. | <ol style="list-style-type: none"> 1. Bulb is loose. 2. Incompatible bulb. 3. Faulty wiring. | <ol style="list-style-type: none"> 1. Tighten the bulb. 2. Ensure you are using an E26 base LED bulb. Replace if necessary. 3. If flickering persists, discontinue use and contact customer support. |
| Cannot change color temperature. | <ol style="list-style-type: none"> 1. Not using the included 3CCT bulb. 2. Incorrect operation. | <ol style="list-style-type: none"> 1. Ensure the included 3CCT LED bulb is installed. Other bulbs may not have this feature. 2. Turn the lamp off and immediately on again using the foot switch to cycle through settings. |

SPECIFICATIONS

- **Model:** JF17061A.BK
- **Dimensions:** 12.5"D x 12.5"W x 65"H (31.75 cm D x 31.75 cm W x 165.1 cm H)
- **Item Weight:** Approximately 8.2 Pounds (3.7 kg)
- **Base Material:** Metal
- **Shade Material:** Fabric (Cream)
- **Finish Type:** Coated (Black Pole)
- **Bulb Base:** E26
- **Included Bulb:** 9W A19 LED, 3CCT (3000K/4000K/6500K), 805 Lumens
- **Maximum Compatible Wattage:** 60 Watts
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Switch Type:** Foot Switch
- **Indoor/Outdoor Usage:** Indoor



Image: A visual representation of the lamp's dimensions (65 inches tall, 12.5-inch shade diameter) and the included LED bulb's specifications, including 9W wattage, E26 base, A19 model, 270-degree beam angle, 25,000-hour lifespan, and 3CCT options.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the current documentation. For warranty details, technical support, or replacement parts, please contact TOBUSA customer service directly through their official website or the retailer where the product was purchased.