

BELLEZE 050-HA-50323_2

BELLEZE 23-inch Electric Fireplace Insert User Manual

Model: 050-HA-50323_2 | Brand: BELLEZE

1. IMPORTANT SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install this electric fireplace. Failure to do so could result in electric shock, fire, serious injury, or death.

- This electric fireplace operates on a standard 120V 60Hz outlet and consumes 1400 Watts.
- Ensure the power cord is not pinched or routed against sharp edges.
- Do not operate the fireplace if the cord or plug is damaged.
- Keep combustible materials at least 3 feet (0.9 meters) away from the front of the fireplace.
- Do not block air vents.
- This unit is equipped with an overheating protection system that automatically shuts off the heater if it gets too hot.
- This product is CSA/UL certified for safety.

2. PACKAGE CONTENTS

- Electric Fireplace Insert
- Remote Control
- User Manual

3. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	BELLEZE
Model Name	050-HA-50323_2
Product Dimensions	24"W x 5"D x 18.1"H
Power Source	Corded Electric
Voltage	120V 60Hz
Wattage	1400W
Heat Output	5000 BTU
Heating Coverage	Up to 400 sq ft
Adjustable Temperature	64°F to 82°F
Flame Brightness Levels	4 levels
Timer Function	1-8 hours
LED Lifespan	Over 50,000 hours
Material	Glass, Metal
Installation Type	Plug-In
Certifications	CSA/UL Certified

4. SETUP

4.1 Placement

This electric fireplace insert is designed for recessed installation into compatible furniture such as TV stands, sideboards, or bookshelves. Ensure the opening dimensions accommodate the unit's size (24"W x 5"D x 18.1"H).

This Heater Can Be Inserted Into Furniture of Compatible Sizes, Including Consoles or TV Stands (Refer to Measurements for Details)



Image: Electric fireplace insert fitted into a furniture unit, highlighting compatible dimensions.



Image: Detailed dimensions of the BELLEZE 23-inch Electric Fireplace Insert.

4.2 Electrical Connection

Plug the power cord into a standard 120V 60Hz grounded electrical outlet. Do not use extension cords or power strips with this appliance.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel is located on the top right of the unit. It includes buttons for Power, Flame Control, Heater Control, and Timer.



Image: Control panel and remote control for the electric fireplace.

5.2 Remote Control Overview

The included remote control allows for convenient operation of all fireplace functions from a distance. It features buttons for Power, Flame Control, Heater Control, Temperature Adjustment, and Timer.

5.3 Power On/Off

- Press the **Power** button on the control panel or remote to turn the unit on or off.

5.4 Adjusting Flame Brightness

- Press the **Flame** button on the control panel or remote to cycle through 4 levels of flame brightness.

5.5 Adjusting Heat Settings

- Press the **Heater** button on the control panel or remote to activate the heating function.
- Use the **Temperature Up/Down** buttons on the remote to adjust the desired temperature between 64°F and 82°F.



64°F

82°F

5000 BTU of Heating Power
Provides Ample Heating for Your
Indoor Space



Image: Temperature control range and heating capacity.

5.6 Setting the Timer

- Press the **Timer** button on the control panel or remote to set the automatic shut-off timer from 1 to 8 hours.

5.7 Fire Crackling Sound

- The unit includes realistic fire crackling sounds. These can be turned on or off using the remote control. Refer to the remote control diagram for the specific button.

6. MAINTENANCE

6.1 Cleaning

- Always disconnect the power before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or sprays.
- Clean the glass front with a soft cloth and a glass cleaner.
- Periodically check the air intake and exhaust vents for dust or debris and clean as necessary to ensure proper airflow.

6.2 Storage

- When not in use, store the fireplace in a cool, dry place.
- Keep the unit covered to protect it from dust.

7. TROUBLESHOOTING

- **No Power:** Ensure the unit is properly plugged into a working 120V outlet. Check the circuit breaker.
- **Heater Not Working:** Verify the heater function is activated. Check the temperature setting; if the room temperature is above the set temperature, the heater will not activate.
- **Remote Control Not Working:** Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unit Shuts Off Automatically:** This may indicate the overheating protection system has activated. Unplug the unit, allow it to cool for 10-15 minutes, and check for any blocked vents before restarting.

8. WARRANTY AND SUPPORT

This BELLEZE Electric Fireplace Insert comes with a **Lifetime Warranty**. For warranty claims, technical support, or any questions regarding your product, please contact BELLEZE customer service through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for warranty validation.