

## Steelplay 3760352735322

# Steelplay Adventure Controller for Nintendo Switch User Manual

Model: 3760352735322



## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Steelplay Adventure Controller for Nintendo Switch. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

## 2. PACKAGE CONTENTS

---

- Steelplay Adventure Controller
- USB Charging Cable
- User Manual (this document)

## 3. CONTROLLER LAYOUT

---

Familiarize yourself with the buttons and features of your Steelplay Adventure Controller.



**Figure 1:** Front view of the Steelplay Adventure Controller. This image displays the controller's ergonomic design, featuring a teal main body, brown grips, and yellow accents on the analog sticks, D-pad, and face buttons. The layout includes two clickable analog sticks, a directional pad, A/B/X/Y action buttons, Home, Capture, Plus, Minus, and Turbo buttons.

- **Left Analog Stick:** For movement and camera control.
- **Right Analog Stick:** For camera control or specific in-game actions.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **HOME Button:** Returns to the Nintendo Switch HOME Menu.
- **CAPTURE Button:** Takes screenshots or video clips.
- **+ (Plus) Button:** Start/Pause button.
- **- (Minus) Button:** Select button.
- **TURBO Button:** For setting rapid-fire functionality (refer to operating section).
- **LED Indicators:** Display connection status, player number, and charging status.

## 4. SETUP AND CONNECTION

---

### 4.1 Initial Charging

Before first use, fully charge the controller. Connect the USB charging cable to the controller's charging port and the other end to a USB power source (e.g., Nintendo Switch dock, USB wall adapter, computer USB port). The LED indicators will show charging status and turn off or change color when fully charged.

## 4.2 Pairing with Nintendo Switch

1. On your Nintendo Switch HOME Menu, select "Controllers".
2. Select "Change Grip/Order".
3. On the Steelplay Adventure Controller, press and hold the **HOME button** and the **Y button** simultaneously for a few seconds until the LED indicators start flashing rapidly. This indicates the controller is in pairing mode.
4. The Nintendo Switch will detect the controller. Once detected, the LED indicators on the controller will stop flashing and remain solid, indicating a successful connection.
5. Press the L+R buttons on the controller as prompted by the Switch screen to finalize the connection.

Once paired, the controller will automatically connect to your Nintendo Switch when powered on and within range.

## 5. OPERATING THE CONTROLLER

---

### 5.1 Basic Controls

The Steelplay Adventure Controller functions similarly to official Nintendo Switch Pro Controllers. Use the analog sticks for movement, D-pad for directional input, and A/B/X/Y buttons for in-game actions. The L/R and ZL/ZR buttons provide additional input options.

### 5.2 Motion Control

The controller supports motion control functionality, allowing for immersive gameplay in compatible titles. Ensure your Nintendo Switch system software is up to date for optimal motion control performance.

### 5.3 TURBO Function

The TURBO function allows a button to be pressed repeatedly as long as it is held down, providing a rapid-fire effect.

1. **To activate TURBO:** Press and hold the **TURBO button**, then press the desired action button (e.g., A, B, X, Y, L, R, ZL, ZR). The button will now have TURBO functionality.
2. **To deactivate TURBO:** Press and hold the **TURBO button** again, then press the same action button. The TURBO function for that button will be turned off.

## 6. MAINTENANCE

---

### 6.1 Cleaning

To clean your controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and gently wipe the surface. Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish and internal components.

### 6.2 Storage

Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the controller to prevent damage to the buttons or casing.

### 6.3 Battery Care

The controller contains a built-in Lithium-ion battery. To prolong battery life, avoid fully discharging the battery frequently. If storing the controller for an extended period, charge it to approximately 50% capacity every few months.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not connect to Switch.	Low battery. Not in pairing mode. Interference. Switch system software outdated.	Charge the controller fully. Ensure controller is in pairing mode (HOME + Y). Move closer to the Switch, reduce other wireless devices. Update your Nintendo Switch system software.
Input lag or unresponsive buttons.	Low battery. Wireless interference. Controller too far from Switch.	Charge the controller. Minimize other wireless devices. Ensure clear line of sight to the Switch.
Controller does not charge.	Faulty cable or power source. Charging port obstruction.	Try a different USB cable and power source. Check the charging port for debris.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Steelplay
Model Number	3760352735322
Connectivity	Bluetooth (Wireless)
Compatible Devices	Nintendo Switch
Color	Multicolore (Teal, Brown, Yellow)
Special Features	Wireless, Motion Control, TURBO Function
Weight	185 Grams
Dimensions (L x W x H)	16 x 11.5 x 6.3 centimeters
Battery Type	1 Lithium-ion (built-in)

## 9. WARRANTY AND SUPPORT

The product packaging indicates a 5-year warranty. For specific warranty terms, conditions, and support inquiries, please refer to the official Steelplay website or contact their customer service directly. Keep your proof of purchase for warranty claims.






**Figure 2:** Packaging of the Steelplay Adventure Controller. The box prominently features the controller's design, compatibility with various Nintendo Switch models, Bluetooth logo, and a "5 years warranty" seal. The reverse side provides product information in multiple languages.



**Related Documents - 3760352735322**

	<p><a href="#">Steelplay Adventure Twin Pads Controllers: User Guide &amp; Setup Instructions</a></p> <p>Explore the Steelplay Adventure Twin Pads Controllers for Nintendo Switch. This guide provides setup instructions, product details, safety warnings, and technical specifications for JVASWI00101, JVASWI00102, and JVASWI00106 models.</p>
	<p><a href="#">Steelplay Wireless Controller User Manual</a></p> <p>User manual for the Steelplay Wireless Controller, providing instructions on setup, usage, safety, and warranty information.</p>
	<p><a href="#">Steelplay Wired Controller for Nintendo Switch - User Manual</a></p> <p>Comprehensive user manual for the Steelplay Wired Controller (Model SP5028 / JVASWI00028), designed for Nintendo Switch. Covers product features, safety guidelines, usage instructions, firmware updates, customer support, warranty, and disposal information.</p>

	<p><a href="#">Steelplay Customizable Wireless Controller User Manual (Model S800)</a></p> <p>Download the Steelplay Customizable Wireless Controller User Manual (Model S800). Find setup, operation, and troubleshooting guides for your Steelplay wireless controller for Nintendo Switch, PC, and Android.</p>
	<p><a href="#">Steelplay Pro Light Pad Evo Wired Controller User Manual</a></p> <p>User manual for the Steelplay Pro Light Pad Evo Wired Controller, detailing setup, features, safety information, and warranty for PlayStation 4 systems.</p>
	<p><a href="#">Steelplay MetalTech Wireless Controller for PS4 User Manual</a></p> <p>User manual for the Steelplay MetalTech Wireless Controller for PS4, detailing setup, usage, safety information, and warranty terms.</p>

Documents - Steelplay – 3760352735322

Product sheet

COMPATIBLE SWITCH™

### Adventure Wireless Controller (Switch™)

Enjoy your favourite adventure games wherever you are, thanks to the Adventure Wireless Controller! As it's wireless or wired, this controller comes equipped with a full range of buttons and functions. Comfortable regardless of age and hand size, this controller will be your best ally in your sessions at home or on the go!

Features

- Wireless Switch™ compatible controller (Bluetooth®).
- Max. range 8m.
- Touch function.
- 300 ms latency < Over 10 h of use.

Key Strengths

- Compatible with Switch in both wired and wireless mode.
- Ergonomic shape suitable for children and adults.
- Lightweight and comfortable use time.

Technical specifications

Compatibility	Nintendo Switch™ (Switch Lite, Switch, OLED™)
Connection	Wireless (Bluetooth®)
Buttons	30
Ports	USB-C 3.0
Control battery	Up to 12 h - a charging cable with USB-C to USB-A is included with the controller.
Stress weight	250g
Net weight	280g
Box contents	Wireless controller, charging cable

Information retail

SKU	JVASWI00099
EAN	3760352735322
PACKING	6/36
PACK DIMENSIONS	16,3 x 11,8 x 6,6 cm
SRP	€59,90

WARRANTY

5 YEARS



[\[pdf\]](#) Specifications Dimension Guide

Product Sheets EN € Steelplay 2024 DAF4Egvv vc BAEuB81JKgs Laurie Markarian STEELPLAY JVASWI00099 DB cdn reichelt de documents datenblatt E910 |||

Product sheet COMPATIBLE SWITCH Adventure Wireless Controller SwitchTM

Enjoy your favourite adve ... controller, charging cable Informations retail REF EAN PACKING PACK. DIMENSIONS SRP JVASWI00099 **3760352735322** 6/36 16,3 x 6,6 x 11,8 cm 19,90 ...

lang:en score:22 filesize: 674.09 K page\_count: 1 document date: 2024-05-07