

[Manuals.plus](#) /

› [Raymate](#) /

› Raymate Bluetooth Speaker S7 Instruction Manual

Raymate S7

Raymate S7 Bluetooth Speaker Instruction Manual

Model: S7 | Brand: Raymate

PRODUCT OVERVIEW

The Raymate S7 is a versatile portable Bluetooth speaker designed for high-fidelity audio and robust outdoor use. It features advanced Bluetooth 5.3 connectivity, IPX7 waterproofing, and a long-lasting battery, making it suitable for various environments.



Figure 1: Raymate S7 Bluetooth Speaker

Key Features

- **Unique Design:** Integrated turntable button for easy control.
- **HiFi Stereo Sound:** Dual speaker drivers and a powerful amplifier module deliver balanced, distortion-free audio.
- **IPX7 Waterproof:** Fully enclosed body provides protection against rain, dust, snow, and splashes, ideal for outdoor use.
- **Simple and Stylish:** Golden ratio cylindrical body with pure colors, suitable for various venues.
- **Extended Battery Life:** 3600mAh high-capacity battery offers over 15 hours of playtime. Features a stable Type-C charging port.

SETUP GUIDE

1. Unboxing and Initial Charge

Carefully remove all contents from the packaging. The box should contain the Raymate S7 speaker, a USB-C charging cable, and an audio cable. Before first use, fully charge the speaker. Connect the USB-C cable to the speaker's charging port (located under the rubber flap) and the other end to a compatible USB power source (e.g., computer USB port, wall adapter). The power indicator light will show charging status. A full charge typically takes approximately 3 hours.

2. Bluetooth Pairing

To connect your Raymate S7 speaker via Bluetooth:

1. Power on the speaker by pressing and holding the Power button until you hear an audible cue and the power indicator light illuminates.
2. Activate Bluetooth on your mobile device (smartphone, tablet, laptop).
3. Search for available Bluetooth devices. The speaker will appear as "Raymate S7".
4. Select "Raymate S7" from the list to initiate pairing. You will hear a confirmation tone once successfully paired.



Figure 2: Bluetooth pairing with a mobile device.

3. Multi-Speaker Pairing (Party Mode)

The Raymate S7 supports connecting up to 100 speakers for a synchronized audio experience. Follow these steps for multi-speaker pairing:

1. Ensure both (or all) speakers are powered off and disconnected from any Bluetooth devices.
2. Power on the first speaker (designated as the "leader") by pressing and holding the Power button.

3. Connect your mobile device to the "leader" speaker via Bluetooth as described in Section 2.
4. Power on the second speaker (designated as the "follower") by pressing and holding the Power button.
5. On the "follower" speaker, press the Mode/TWS button (often indicated by a symbol like $\infty+$). You may hear a distinct sound indicating it is searching for party mode.
6. The "follower" speaker should automatically connect to the "leader" speaker. A confirmation sound will indicate successful pairing.
7. If the connection fails, power down the "follower" speaker and repeat steps 4-6. Ensure your audio source is playing to confirm both speakers are working.

Note: This feature typically provides mono audio from both speakers, not stereo separation.

IPX7 WATERPROOF SPEAKERS

Fully enclosed body, truly waterproof



Figure 3: Multiple Raymate S7 speakers connected in Party Mode.

INTEGRATED TURNTABLE BUTTON

Making it easier to control the Bluetooth speaker.



Figure 4: Detailed view of Raymate S7 control buttons and dial.

- **Power Button:** Press and hold to power on/off. Short press to cycle through sound modes (if applicable).
- **Volume Dial (Top):** Rotate clockwise to increase volume, counter-clockwise to decrease. Press down on the dial to Play/Pause audio.
- **Bass Boost Button:** Located near the Power button, press to activate or deactivate enhanced bass.

- **Previous Track Button (▲):** Short press to go to the previous track.
- **Next Track Button (▼):** Short press to go to the next track.
- **Mode/TWS Button (∞+):** Short press to change input mode (e.g., Bluetooth, AUX). Long press to initiate TWS (True Wireless Stereo) pairing for multi-speaker setup.

Audio Playback

Once paired via Bluetooth or connected via the AUX input, audio will play through the speaker. Adjust volume using the top dial or your connected device. Use the track buttons to navigate through your playlist.

Hands-Free Calling

The built-in HD microphone allows for hands-free calling when connected to a smartphone. Incoming calls will pause music playback. Press the Play/Pause button (top dial) to answer or end a call.

MAINTENANCE

Waterproof Care

The Raymate S7 is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. To maintain its waterproof integrity, ensure the rubber flap covering the charging and AUX ports is securely closed when not in use. Avoid exposing the speaker to saltwater or chemicals, as this may degrade the seals over time. If exposed to water, wipe dry before opening ports or charging.

Charging Precautions

Use only the provided USB-C charging cable or a compatible 5V/2A charger. Avoid using fast chargers with higher voltage or amperage, as this may cause permanent damage to the internal battery or circuitry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected to another device. Bluetooth on device is off.	Ensure speaker is powered on and not connected to another device. Turn off and on Bluetooth on your device. Restart both devices and try pairing again.
No sound or low volume.	Volume too low on speaker or connected device. Incorrect input mode.	Increase volume on both the speaker and your connected device. Press the Mode button to ensure correct input (Bluetooth/AUX).

Problem	Possible Cause	Solution
Multi-speaker pairing fails.	Incorrect pairing sequence or previous connection interference.	Ensure both speakers are powered off before starting. Follow the multi-speaker pairing steps precisely (Section 3). If issues persist, try resetting both speakers (refer to manual for reset procedure if available, otherwise power cycle).
Sound distortion.	Volume too high or Bass Boost overdriven.	Reduce volume. If Bass Boost is active, try deactivating it.

SPECIFICATIONS

Feature	Detail
Model Name	S7
Speaker Type	Subwoofer
Special Feature	Waterproof
Connectivity Technology	Bluetooth 5.3
Speaker Maximum Output Power	60 Watts
Battery Capacity	3600 mAh
Playtime	Up to 15 hours
Charging Time	Approx. 3 hours
Water Resistance Level	IPX7
Product Dimensions	8.3"D x 3.2"W x 3.4"H
Item Weight	1.72 Pounds
Included Components	Speaker, USB-C Charging Cable, Audio Cable

WARRANTY AND SUPPORT

Warranty Information

The Raymate S7 Bluetooth Speaker comes with a Limited Warranty. Please refer to the product packaging or contact the manufacturer for specific terms and conditions regarding warranty coverage.

Customer Support

For further assistance, technical support, or warranty claims, please visit the official Raymate website or contact their customer service department. Specific contact details are typically provided on the product packaging or within the purchase documentation.

© 2023 Raymate. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I prevent the Raymate S7 Bluetooth speaker from automatically powering off?

Based on the Raymate S7 instruction manual, there is no documented setting or button combination to disable the automatic power-off feature. Most Bluetooth speakers of this type are programmed with an energy-saving function that...

[Read full answer](#)