

[manuals.plus](#) /› [Supersonic](#) /› [Supersonic SC-4032WKB 10.1-inch Windows 10 Tablet with Full Keyboard User Manual](#)

Supersonic SC-4032WKB

Supersonic SC-4032WKB 10.1-inch Windows 10 Tablet with Full Keyboard User Manual

Model: SC-4032WKB

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Supersonic SC-4032WKB 10.1-inch Windows 10 Tablet with Full Keyboard. Please read this guide thoroughly before using your device to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Supersonic SC-4032WKB is a versatile 10.1-inch tablet powered by Windows 10, designed for productivity and entertainment. It features a capacitive touchscreen, an Intel Quad Core processor, and comes with a full keyboard for enhanced usability.

Key Features:

- 10.1-inch Capacitive Touchscreen Display
- Windows 10 Operating System
- Quad Core 1.84GHz Intel Processor
- Bluetooth 4.0 Compatibility
- Built-in 2.0MP Front & 2.0MP Rear Cameras
- Includes a Full Keyboard

Package Contents:

- Supersonic SC-4032WKB Tablet
- Full Keyboard
- Power Adapter
- User Manual (this document)



Figure 1: Supersonic SC-4032WKB Tablet with its detachable keyboard, displaying the Windows 10 Start screen.



Figure 2: Top view of the full keyboard accessory for the Supersonic SC-4032WKB tablet, showing the touchpad and key layout.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the provided power adapter to the tablet's charging port and then to a power outlet. The charging indicator light will illuminate.

2. Attaching the Keyboard

Align the tablet with the magnetic connector on the keyboard dock. Gently push the tablet down until it securely clicks into place. The keyboard will automatically connect to the tablet.



Figure 3: Front view of the Supersonic SC-4032WKB tablet, showing the display and front camera. The bottom edge contains the magnetic connector for the keyboard.

3. First Boot and Windows Setup

1. Press and hold the Power button on the tablet until the screen turns on.
2. Follow the on-screen prompts to complete the Windows 10 initial setup, including language selection, region, network connection, and user account creation.

4. Bluetooth Pairing (Optional)

To connect external Bluetooth devices:

1. Go to *Settings > Devices > Bluetooth & other devices*.
2. Ensure Bluetooth is turned *On*.
3. Select *Add Bluetooth or other device* and follow the instructions to pair your device.

OPERATING INSTRUCTIONS

1. Power On/Off and Sleep Mode

- **Power On:** Press and hold the Power button until the screen illuminates.
- **Power Off:** From the Start Menu, select *Power > Shut down*.
- **Sleep Mode:** Briefly press the Power button to put the tablet into sleep mode. Press it again to wake it up.

2. Using the Touchscreen

The 10.1-inch capacitive touchscreen supports multi-touch gestures:

- **Tap:** Select an item or open an application.
- **Tap and Hold:** Access contextual menus or drag items.
- **Swipe:** Scroll through content or navigate between screens.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

3. Using the Keyboard and Touchpad

When the keyboard is attached, you can use it for typing and the touchpad for cursor control, similar to a laptop.

- **Typing:** Use the physical keys for text input.
- **Touchpad:** Move your finger across the touchpad to control the cursor. Tap to click, and use two fingers for scrolling.

4. Connecting to Wi-Fi

1. Click the Wi-Fi icon in the system tray (bottom right of the screen).
2. Select your desired Wi-Fi network from the list.
3. Enter the network password if prompted and click *Connect*.

5. Using the Cameras

The tablet features a 2.0MP front camera and a 2.0MP rear camera.

1. Open the *Camera* application from the Start Menu.
2. Switch between front and rear cameras using the icon in the app interface.
3. Tap the shutter button to take photos or record videos.



Figure 4: Rear view of the Supersonic SC-4032WKB tablet, showing the rear camera lens and the tablet's sleek design.

6. Office 365

The tablet supports Microsoft Office 365 applications. A subscription may be required to access full features. You can download and install Office applications from the Microsoft Store.

MAINTENANCE

1. Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals.
- Ensure the device is powered off and unplugged before cleaning.

2. Software Updates

Regularly check for and install Windows updates to ensure your tablet has the latest security patches and features. Go to *Settings > Update & Security > Windows Update*.

3. Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided power adapter or a compatible charger.

TROUBLESHOOTING

Tablet does not power on:

Ensure the battery is charged. Connect the power adapter and try again. If the issue persists, perform a hard reset by holding the power button for 10-15 seconds.

Keyboard is not responding:

Check if the tablet is securely docked to the keyboard. Detach and reattach the tablet. Restart the tablet

if necessary.

Wi-Fi connection issues:

Verify that Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are entering the correct Wi-Fi password.

Slow performance:

Close unnecessary applications. Check for and install any pending Windows updates. Consider running a disk cleanup or antivirus scan.

Screen is unresponsive:

Restart the tablet. If the issue continues, ensure the screen is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model Name	SC-4032WKB
Operating System	Windows 10
Processor	Quad Core 1.84GHz Intel (Z8350 CherryTrail)
RAM	4GB
Storage Capacity	32GB
Screen Size	10.1 Inches
Display Resolution	1280x800
Bluetooth	Bluetooth 4.0
Cameras	2.0MP Front, 2.0MP Rear
Product Dimensions	9 x 0.38 x 6 inches
Item Weight	1 pound
Manufacturer	Supersonic

WARRANTY AND SUPPORT

Your Supersonic SC-4032WKB tablet is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Supersonic website. For technical support, product registration, or service inquiries, please contact Supersonic customer service.

Supersonic Official Website: [Visit the Supersonic Store on Amazon](#)