

[Manuals.plus](#) /

> [CUSIMAX](#) /

> CUSIMAX Indoor Grill Instruction Manual

CUSIMAX GR-200A

CUSIMAX Electric Smokeless Indoor Grill

Model: GR-200A

INTRODUCTION

Thank you for choosing the CUSIMAX Electric Smokeless Indoor Grill. This 2-in-1 grill and griddle is designed to bring the authentic grilling experience indoors with minimal smoke. Featuring a powerful 1500W heating system, LED smart display, and non-stick removable plates, it offers versatile cooking options for various foods. Please read this manual thoroughly before use to ensure safe and optimal performance.



Image: The CUSIMAX Electric Smokeless Indoor Grill, showcasing its dual functionality with both grill and griddle plates.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

INCLUDED COMPONENTS

The CUSIMAX Indoor Grill comes with the following parts:

- Main Electric Smokeless Grill Unit
- Removable Grill Plate
- Removable Griddle Plate
- Tempered Glass Lid
- Drip Tray
- Silver Heat Reflector
- Tongs (Included for convenience)

NON-STICK REMOVABLE

Grill & Griddle Plates



Image: The interchangeable grill and griddle plates, offering versatile cooking options.


SETUP

1. **Unpack:** Carefully remove all components from the packaging. Remove any protective films or stickers.
2. **Clean Components:** Before first use, wash the grill plate, griddle plate, glass lid, drip tray, and silver heat reflector with warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.
3. **Assemble Drip Tray:** Place the drip tray into the base of the main unit. Ensure it is properly seated.
4. **Add Water to Drip Tray:** Pour approximately 2 cups of water into the drip tray. This helps to reduce smoke during cooking.
5. **Place Heat Reflector:** Position the silver heat reflector over the heating element, ensuring it sits correctly.
6. **Install Cooking Plate:** Choose either the grill plate or the griddle plate and place it firmly onto the heating element.
7. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet.



Add the right amount of pure water to the drip tray | **1**

Makes your house
NO MORE CLOUDY SMOKE!

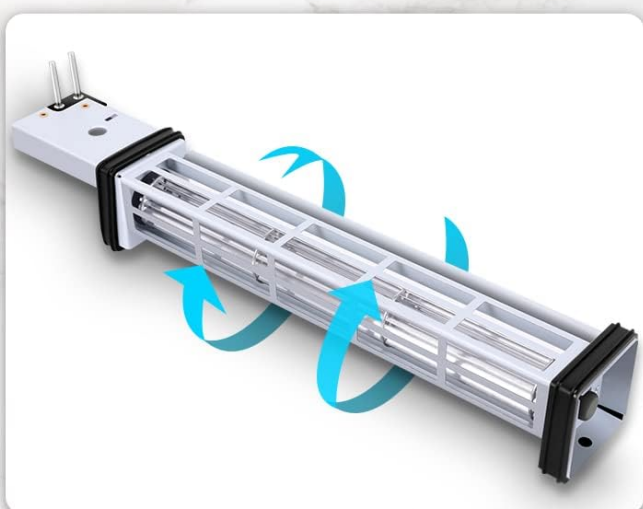

2 | Press the fan button to activate the turbo smoke extraction component



*
**Reduce
95% smoke**



3 | Cover with the lid to retain heat and block the spread of smoke

Image: Visual guide for initial setup, including adding water to the drip tray for smokeless operation.

OPERATING INSTRUCTIONS

- Power On:** Press the Power Button () on the LED Smart Display to turn on the grill.
- Activate Fan:** Press the Fan Button () to activate the turbo smoke extraction component. This is crucial for smokeless operation.
- Set Temperature:** Use the Up (▲) and Down (▼) arrows to adjust the cooking temperature. The temperature range is from 200°F to 450°F. The LED display will show the set temperature.
- Preheat:** Allow the grill to preheat for 5-10 minutes until it reaches the desired temperature.
- Place Food:** Carefully place your food onto the preheated grill or griddle plate.
- Use Lid:** It is recommended to keep the tempered glass lid on while cooking. This helps to retain heat, speed up cooking, and block the spread of smoke.
- Monitor Cooking:** Monitor your food and adjust temperature as needed. The transparent lid allows you to view food

without lifting.

8. **Power Off:** Once cooking is complete, press the Power Button () to turn off the unit and unplug it from the outlet.

Cooking Versatility

The CUSIMAX Indoor Grill is suitable for a wide variety of foods, including:

- Meats (Steaks, Burgers, Chicken, Sausages)
- Skewers (Vegetable, Meat, or Mixed)
- Vegetables and Fruits
- Breakfast items (Pancakes, Bacon, Eggs)



Image: Burgers cooking on the grill plate, demonstrating the indoor grilling capability.

HEALTHIER INDOOR GRILLING

UP to 450°F
Grill & Griddle ANYTHING

cusimax



Image: A spread of different foods, such as steak, corn, and pancakes, prepared using the grill and griddle functions.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your CUSIMAX Indoor Grill.

1. **Cool Down:** Always allow the appliance to cool completely before cleaning.
2. **Disassemble:** Remove the grill/griddle plate, glass lid, silver heat reflector, and drip tray from the main unit.
3. **Dishwasher Safe Parts:** The Glass Lid, both heating plates (grill and griddle), silver heat reflector, and drip tray are dishwasher safe for easy cleaning.
4. **Hand Washing:** For best results and to prolong the non-stick coating, hand washing with warm, soapy water and a soft sponge is recommended for the plates.
5. **Clean Main Unit:** Wipe the main electric unit with a damp cloth. Do NOT immerse the main unit in water or any other liquid.
6. **Empty Drip Tray:** Discard any water and grease from the drip tray. Clean it thoroughly.

7. **Storage:** Ensure all parts are completely dry before reassembling or storing the grill. Store in a cool, dry place.



Image: The removable grill plate being placed into a dishwasher, highlighting the ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill not turning on.	Not plugged in; Power button not pressed; No power at outlet.	Ensure power cord is securely plugged into a working outlet. Press the Power button. Check household circuit breaker.
Excessive smoke during cooking.	Fan not activated; Insufficient water in drip tray; Too much grease buildup.	Ensure the Fan button is pressed and the fan is running. Add water to the drip tray. Clean the drip tray and cooking plate regularly. Keep lid on during cooking.
Food not cooking evenly.	Temperature set too low; Grill not preheated sufficiently; Uneven food placement.	Increase temperature setting. Allow grill to fully preheat before adding food. Distribute food evenly on the cooking surface.
Food sticking to plate.	Non-stick coating damaged; Plate not properly cleaned; Food not oiled.	Ensure proper cleaning and avoid abrasive cleaners. Lightly oil food or cooking surface if necessary.

SPECIFICATIONS

- **Brand:** CUSIMAX
- **Model Name:** GR-200A
- **Product Dimensions:** 15"D x 10"W x 6"H

- **Item Weight:** 16 Pounds
- **Color:** Black
- **Material:** Stainless Steel, Tempered Glass
- **Fuel Type:** Electric
- **Voltage:** 120 Volts (AC)
- **Wattage:** 1500 watts
- **Temperature Range:** 200°F to 450°F
- **Special Features:** 2-in-1 Grill & Griddle, LED Smart Display, Non-Stick Coating, Smokeless



Image: Detailed dimensions of the CUSIMAX Indoor Grill and its removable parts.

WARRANTY AND SUPPORT

CUSIMAX stands by the quality of its products. This grill comes with:

- **Free Lifetime Customer Service:** For any questions or assistance, please contact CUSIMAX customer support.

- **180-Day Worry-Free Return Policy:** Refer to your purchase documentation for details on the return policy.

For technical support or warranty claims, please visit the official CUSIMAX website or contact their customer service department directly. Contact information can typically be found on the product packaging or the brand's official website.

© 2024 CUSIMAX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question