

[Manuals.plus](#) /

› [FANGOR](#) /

› FANGOR Wi-Fi Digital Photo Frame 10.1-inch (Model SS-F-102KZ-101-JP) User Manual

FANGOR SS-F-102KZ-101-JP

FANGOR Wi-Fi Digital Photo Frame 10.1-inch User Manual

Model: SS-F-102KZ-101-JP

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your FANGOR Wi-Fi Digital Photo Frame. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



Figure 1: FANGOR 10.1-inch Digital Photo Frame with companion app.

2. PRODUCT OVERVIEW

2.1 Key Features

- **10.1-inch Full HD Display:** Features a 1280x800 resolution IPS panel with a 16:9 aspect ratio for clear image and video display.
- **32GB Internal Storage:** Stores approximately 16,000 photos.
- **Expandable Memory:** Supports up to 32GB microSD cards (sold separately).
- **Wi-Fi Connectivity:** Enables high-speed photo and video transfer from smartphones via the dedicated 'Uhale' app (iOS/Android) or from a PC.
- **Automatic Orientation:** Automatically adjusts photo orientation (vertical/horizontal) without manual frame adjustment.
- **Slideshow Function:** Customizable slideshow intervals (5s/10s/30s/1min/5min/30min).
- **2-Minute Video Playback:** Supports video playback up to 2 minutes in length.
- **Weather Forecast Display:** Shows current weather information in the bottom right corner of the screen.
- **Timed On/Off:** Schedule automatic power on and off times.
- **Touch Panel Operation:** Intuitive touch controls for brightness and volume adjustment.

2.2 Package Contents

- FANGOR Wi-Fi Digital Photo Frame
- AC Adapter
- User Manual

3. SETUP

3.1 Initial Power On

1. Connect the provided AC adapter to the photo frame's power port and then to a power outlet.
2. The frame will automatically power on. Follow the on-screen instructions for initial setup.

3.2 Wi-Fi Connection

1. On the photo frame, navigate to the Settings menu.
2. Select 'Wi-Fi' and choose your desired network from the list.
3. Enter the Wi-Fi password if prompted.
4. Once connected, the Wi-Fi icon will appear on the screen.

3.3 App Installation (Uhale)

1. Download the free 'Uhale' app from the App Store (iOS) or Google Play Store (Android) on your smartphone.
2. Open the app and follow the instructions to pair it with your FANGOR Digital Photo Frame.

ワイヤレス転送 瞬時に画像や動画が供給できる

専用のアプリ「Uhale」を介してスマホに保存した写真を取り込んで表示できます。最大50枚まで転送します。

独立開発したウェブアップロードシステムを介して、最大まで500枚写真を転送できます。



Figure 2: Wireless transfer via the Uhale app.

4. OPERATING INSTRUCTIONS

4.1 Photo and Video Transfer

- **From Smartphone (Uhale App):** Open the Uhale app, select up to 100 photos or videos, and send them to the frame. The app will automatically convert formats if necessary.
- **From PC:** Use the dedicated web upload system to send up to 500 photos from your computer to the frame.
- **From SD Card:** Insert a microSD card (up to 32GB) into the designated slot. Photos and videos can be displayed directly from the SD card or transferred to the frame's internal memory. Ensure the frame's firmware is updated for optimal SD card compatibility.

32GB+32GB

32GBの大きいメモリ搭載し、メモリカードも利用でき

写真なら約16000枚、2分程度の動画を2000個保存でき



Figure 3: 32GB internal memory and SD card expansion.

4.2 Display and Playback

- **Brightness Adjustment:** Swipe up or down on the **left side** of the screen to adjust display brightness.
- **Volume Adjustment:** Swipe up or down on the **right side** of the screen to adjust video playback volume.
- **Slideshow Settings:** Access the settings menu to customize slideshow intervals (5s, 10s, 30s, 1min, 5min, 30min).
- **Automatic Orientation:** The frame automatically detects and adjusts the orientation of photos and videos, whether placed vertically or horizontally.
- **Weather Display:** The current weather forecast is shown in the bottom right corner of the screen when connected to Wi-Fi.



Figure 4: Automatic orientation, slideshow, and weather forecast.

4.3 Timed On/Off

1. In the Settings menu, locate the 'Timed On/Off' option.
2. Set your desired power-on and power-off times.
3. When powered off, the frame can display a clock.



Figure 5: Timed On/Off function.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- **Software Updates:** Periodically check for firmware updates in the settings menu to ensure optimal performance and compatibility.
- **Storage:** Store the frame in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the AC adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Incorrect password, out of range, or network issue.	Verify Wi-Fi password. Move the frame closer to the router. Restart your router and the photo frame.
Photos/Videos not transferring.	No Wi-Fi connection, app issue, or unsupported format.	Check Wi-Fi connection. Ensure the Uhale app is updated. The app automatically converts formats, but ensure files are standard image/video types. Restart the app and frame.
SD card not recognized.	SD card faulty, incorrect format, or frame firmware outdated.	Ensure the SD card is inserted correctly. Try a different SD card. Update the frame's firmware to the latest version.
Screen is unresponsive.	Temporary software glitch.	Restart the photo frame by disconnecting and reconnecting the power.

7. SPECIFICATIONS

Feature	Detail
Brand	FANGOR

Feature	Detail
Model Number	SS-F-102KZ-101-JP
Screen Size	10.1 inches
Resolution	1280x800 pixels (Full HD)
Aspect Ratio	16:9
Internal Storage	32GB
External Memory Support	microSD card up to 32GB (sold separately)
Connectivity	Wi-Fi
Compatible Devices	iOS, Android
Product Dimensions	26.5 x 18.2 x 2.51 cm
Weight	780 g
Color	Black
Included Accessories	AC Adapter, User Manual

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your product packaging or visit the official FANGOR website. Keep your purchase receipt for warranty claims.

© 2023 FANGOR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C5HWKYGZ>

More documents and user manuals: <https://manuals.plus/>