

[Manuals.plus](#) /

› [BOIFUN](#) /

› BOIFUN 15.7" Portable DVD Player User Manual

BOIFUN BFN-142


BOIFUN 15.7" Portable DVD Player User Manual

Model: BFN-142

INTRODUCTION

Thank you for choosing the BOIFUN 15.7" Portable DVD Player. This device is designed to provide high-quality entertainment on the go, featuring a large 14.1" HD swivel screen, a long-lasting 4,000mAh rechargeable battery, and support for multiple disc and file formats. This manual will guide you through the setup, operation, and maintenance of your new portable DVD player to ensure optimal performance and enjoyment.

PACKAGE CONTENTS

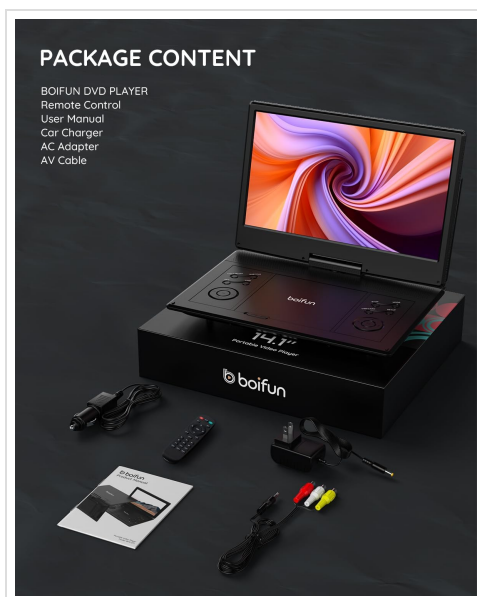

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact BOIFUN customer support.

- Portable DVD Player
- Remote Control
- User Manual

- Car Charger
 - AC Adapter
 - AV Cable
-

SETUP

Charging the Device



The BOIFUN Portable DVD Player is equipped with a powerful 4,000mAh rechargeable battery, providing up to 6 hours of continuous playback. Before first use, fully charge the device using the provided AC adapter. For on-the-go charging, utilize the included car charger. The charging indicator light will show the charging status.

Inserting a Disc




Gently open the disc cover located on the main unit. Place your DVD or CD onto the spindle, ensuring it clicks securely into place. Close the disc cover firmly. The player supports various disc formats including CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, and DVD±RW.

Connecting to External Devices (BOIFUN SimpleSync)

Utilize the BOIFUN SimpleSync feature to connect your portable DVD player to a larger screen, such as a TV or projector.

Simply connect the provided AV cable from the player's AV OUT port to the corresponding AV IN ports on your television or projector. This allows you to enjoy your movies on a bigger display. The video demonstrates the connection process and screen mirroring.

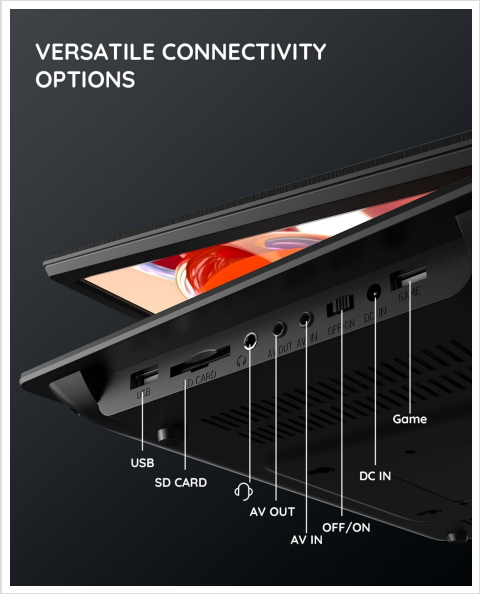

The player offers versatile connectivity options. On the side, you will find ports for USB, SD card, AV OUT, AV IN, DC IN for power, and a Game port for compatible accessories. These ports allow for expanded functionality, including playing media from USB drives or SD cards, and connecting to other audio/video equipment.

OPERATING THE DVD PLAYER

Basic Controls



The control panel on the main unit provides intuitive access to all primary functions. Use the 'MODE' button to switch between DVD, USB, and SD card inputs. The 'PLAY/PAUSE' button controls playback, while 'STOP' halts it. Directional buttons (Up, Down, Left, Right) and 'ENTER' are used for menu navigation. Volume controls (VOL-, VOL+) adjust the audio output, and 'LCD ON/OFF' manages the screen display. An upgraded remote control is also included for convenient operation from a distance.

Supported Formats

The BOIFUN Portable DVD Player is designed to be region-free and supports a wide array of media formats for both discs and digital files. Compatible disc formats include CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, and DVD±RW. For digital media, it supports MP3, WMA, OGG, AAC audio files, and AVI, MPG, VOB, FLV, RMVB video files (MP4 needs to be converted to AVI). It also supports JPG image files.

Last Memory Display (Resume Playback)



The player features a convenient Last Memory Display function. This allows the device to remember the exact point where you stopped watching a movie or show. The next time you power on the player, it will automatically resume playback from that precise moment, ensuring a seamless viewing experience without needing to manually find your place.

Swivel Screen



The 14.1" HD screen of the BOIFUN DVD player is designed with a swivel mechanism, allowing it to rotate and fold. This flexibility provides optimal viewing angles in various environments, whether you're in a car, at home, or outdoors. The thin bezel design enhances the immersive viewing experience.

MAINTENANCE

Cleaning

To maintain the longevity and performance of your DVD player, regularly clean its exterior with a soft, dry cloth. For the screen, use a microfiber cloth specifically designed for electronics. Avoid using abrasive cleaners or solvents, as these can damage the surface. Keep the disc tray free from dust and debris.

Storage

When not in use, store the portable DVD player in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the disc tray is empty and the screen is folded securely to prevent damage. If storing for an extended period, it is

recommended to fully charge the battery before storage and recharge it every few months to preserve battery health.

TROUBLESHOOTING

If you encounter any issues with your BOIFUN Portable DVD Player, please refer to the table below for common problems and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Player does not power on.	Low battery or power adapter not connected properly.	Connect the AC adapter and ensure it's plugged into a working outlet. Allow time for charging if the battery is depleted.
No disc detected.	Disc inserted incorrectly or disc is dirty/damaged.	Ensure the disc is placed correctly on the spindle. Clean the disc with a soft, lint-free cloth. Try a different disc.
No sound or low volume.	Volume too low, mute activated, or external speakers/headphones not connected properly.	Increase volume using VOL+ button or remote. Check if mute is active. Ensure headphones or external speakers are fully plugged into the correct port.
Poor picture quality or skipping.	Dirty/scratched disc, unstable surface, or incompatible video format.	Clean the disc. Ensure the player is on a stable surface; the anti-shock protection helps but extreme movement can affect playback. Verify video file format compatibility.
Cannot connect to TV/projector.	Incorrect cable connection or TV input selection.	Ensure AV cable is securely connected to the player's AV OUT and the TV's AV IN. Select the correct input source (e.g., AV, Video 1) on your TV.

SPECIFICATIONS

Feature	Detail
Brand	BOIFUN
Model Number	BFN-142
Screen Size	14.1 Inches
Display Type	LCD
Resolution	1366*768
Battery Capacity	4,000mAh Lithium Polymer
Playback Time	Up to 6 hours
Supported Disc Formats	CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, DVD±RW

Feature	Detail
Supported Media Types	MP3, WMA, OGG, AAC (Audio); AVI, MPG, VOB, FLV, RMVB (Video); JPG (Image)
Special Features	Region Free, Last Memory, Slow/Fast Playback, A-B Looping, Multi-Language Support, Upgraded Dual Speaker, Anti-Shock Protection
Item Weight	4.33 pounds
Product Dimensions	13.3 x 9.1 x 1.8 inches

WARRANTY AND SUPPORT

BOIFUN is committed to optimizing product quality and enhancing user experience. We offer problem-solving assistance to all customers as a duty. If you are experiencing any issues with your DVD player, please do not hesitate to let us know. Our dedicated Customer Helping Center team will get back to you within 24 hours and assist you until your problems are resolved.

For further assistance or to activate your warranty, please contact admin@boifun.net. Please provide your order number and a detailed description of the issue for prompt support.

You can also refer to the official User Manual PDF for more detailed information [Download User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

