

[Manuals.plus](#) /

› [LELO](#) /

› LELO DOT Cruise Pinpoint Massager User Manual

LELO DOT Cruise

LELO DOT Cruise User Manual

Model: DOT Cruise (B00180)

Brand: LELO

1. INTRODUCTION

The LELO DOT Cruise is a precision clitoral vibrator designed for targeted stimulation. It features innovative Infinite Loop Technology and Cruise Control for a consistent and satisfying experience. This manual provides essential information for the safe and effective use, care, and maintenance of your device.



Image 1.1: LELO DOT Cruise device in Peach Please color.

2. PRODUCT FEATURES

- **Infinite Loop Technology:** Inspired by the infinity symbol, this technology provides a figure-eight motion for continuous, precise stimulation.
- **8 Powerful Pleasure Settings:** Offers a range of vibration patterns, from gentle murmurs to intense pulses.
- **Cruise Control:** Automatically adjusts and maintains vibration intensity when pressed firmly against the body, ensuring consistent power.
- **Extra Soft Silicone:** Constructed from ultra-smooth, body-safe silicone for a comfortable and warm-to-the-touch feel.
- **USB Rechargeable & 100% Waterproof:** Designed for convenience and versatility, allowing use in the bath or shower.



Image 2.1: Diagram of the LELO DOT Cruise device.

3. SETUP

3.1. Charging

Before first use, fully charge your LELO DOT Cruise. The device includes one Lithium Polymer battery. Use the provided USB charging cable to connect the device to a USB power source. The indicator light will show charging status (refer to the device's specific light patterns for full charge indication, typically a steady light or change in color).

3.2. First Use

Clean the device thoroughly before its initial use. Refer to the 'Maintenance' section for detailed cleaning instructions. To activate the device, press and hold the power button for a few seconds until it turns on.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- To turn on: Press and hold the power button (usually the central button) for 3 seconds.
- To turn off: Press and hold the power button for 3 seconds.

4.2. Changing Settings

Once powered on, press the function button (often indicated by a wave or loop icon) to cycle through the 8 available vibration patterns. Each press will advance to the next setting.

4.3. Cruise Control Function

The LELO DOT Cruise features Cruise Control. When the device is pressed more firmly against the body, the motor's intensity will automatically increase to maintain a consistent level of power, preventing a drop in sensation.

4.4. Usage

Apply the pinpoint tip to the desired area for targeted stimulation. Experiment with different pressure levels and vibration settings to find your preferred experience. The device is 100% waterproof, allowing for use in wet environments.



Image 4.1: Illustrative use of the LELO DOT Cruise for pinpoint stimulation.

5. MAINTENANCE

5.1. Cleaning

Clean your LELO DOT Cruise after each use. Wash the device with warm water and a mild, antibacterial soap, or use a specialized toy cleaner. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

5.2. Storage

Store the device in a clean, dry, and dust-free environment, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential damage or reactions.

6. TROUBLESHOOTING

- **Device does not turn on:** Ensure the device is fully charged. Connect it to the USB charger and wait for the charging indicator to confirm power.
- **Vibrations are weak or inconsistent:** The battery may be low; recharge the device. If the issue persists after charging, contact customer support.
- **Device not charging:** Check the USB cable and power source. Try a different USB port or adapter. Ensure the charging contacts on the device are clean and dry.
- **Motor stops unexpectedly:** This could indicate a low battery or a potential internal issue. Try fully recharging the device. If the problem continues, refer to the warranty and support section.

7. SPECIFICATIONS

Model Name	DOT Cruise
Item Model Number	B00180
Brand	LELO
Material	Silicone
Color	Peach Please (variant)
Product Dimensions	1.97 x 4.33 x 7.4 inches; 3.46 ounces
Batteries	1 Lithium Polymer battery (included)
Vibration Settings	8
Waterproof	Yes, 100%

8. SAFETY INFORMATION

This product is intended for adult use only. Discontinue use immediately if you experience any discomfort or pain. Consult a healthcare professional if you have any health concerns or questions regarding the use of this product. Statements regarding this product have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to download the official user manual in PDF format, please visit the official LELO website or contact LELO customer service. A PDF version of the user manual may also be available [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question