

## EMtronics EMAFSD9S

# EMtronics EMAFSD9S Digital Air Fryer User Manual

Model: EMAFSD9S

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the mains socket before cleaning, servicing, or when not in use.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the appliance on a stable, heat-resistant surface, away from walls or other appliances, ensuring at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
- Do not cover the air inlet and air outlet openings while the appliance is operating.
- The surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.
- Do not place anything on top of the appliance.
- Only use accessories recommended by the manufacturer.
- Do not use the appliance for purposes other than those described in this manual.

## PRODUCT OVERVIEW

### Components

- Main Unit with Control Panel
- Removable Frying Basket
- Crisper Plate
- Handle



Image: Angled view of the EMtronics EMAFSD9S Digital Air Fryer, showcasing its stainless steel and black design with the digital control panel on top and the handle for the frying basket.

## Control Panel

The digital touch control panel allows for easy operation and precise control over cooking settings. It features a clear display for temperature and time, along with various pre-set program icons.

- **Power Button:** To turn the appliance on/off.
- **Temperature Control (+/-):** Adjusts cooking temperature from 50°C to 200°C.
- **Time Control (+/-):** Adjusts cooking time up to 99 minutes.
- **Pre-set Program Icons:** 8 dedicated icons for common dishes (e.g., Roast, Broil, Air Fry, Bake, Keep Warm,

Grill).

- **Start/Pause Button:** To begin or temporarily stop the cooking process.



Image: Front view of the EMtronics EMAFSD9S Digital Air Fryer, highlighting the digital display and touch controls for various cooking functions, including temperature, time, and pre-set options.

## SETUP AND FIRST USE

## Before First Use

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
3. Wipe the inside and outside of the main unit with a damp cloth.
4. Place the crisper plate inside the frying basket. Slide the frying basket back into the main unit.

## Initial Operation (Burn-in)

It is recommended to run the air fryer empty for about 10-15 minutes before cooking food for the first time to eliminate any manufacturing odors.

1. Plug the appliance into a grounded wall socket.
2. Press the Power button to turn on the display.
3. Set the temperature to 200°C and the time to 15 minutes.
4. Press the Start/Pause button to begin.
5. A slight odor may be present during this initial use; this is normal.
6. Once complete, unplug the appliance and allow it to cool down completely before proceeding.

## OPERATING INSTRUCTIONS

### Basic Manual Operation

1. Place the appliance on a stable, level, heat-resistant surface.
2. Carefully pull the frying basket out of the air fryer.
3. Place ingredients into the frying basket, ensuring not to overfill. Do not exceed the MAX fill line.
4. Slide the frying basket back into the air fryer until it clicks into place.
5. Plug the power cord into a grounded wall socket. The display will illuminate.
6. Press the Power button to activate the control panel.
7. Use the Temperature (+/-) buttons to set your desired cooking temperature (50°C - 200°C).
8. Use the Time (+/-) buttons to set your desired cooking time (1 - 99 minutes).
9. Press the Start/Pause button to begin the cooking process.
10. During cooking, you can pull out the basket to shake or check food. The appliance will automatically pause and resume when the basket is reinserted.
11. Once the timer reaches zero, the appliance will beep, indicating cooking is complete.
12. Carefully pull out the basket and transfer the cooked food to a serving plate.

### Using Pre-set Programs

The EMtronics EMAFSD9S features 8 pre-set cooking programs for convenience. These programs automatically set optimal temperature and time for specific food types.

1. Prepare your ingredients and place them in the frying basket as described above.
2. Press the Power button to activate the control panel.

3. Select the desired pre-set program by touching its icon on the control panel. The display will show the default temperature and time for that program.
4. You can adjust the pre-set temperature and time using the Temperature (+/-) and Time (+/-) buttons if needed.
5. Press the Start/Pause button to begin cooking.

## Pause and Resume Function

You can pause the cooking process at any time by pressing the Start/Pause button or by pulling out the frying basket. To resume, press the Start/Pause button again or reinsert the basket.

## COOKING GUIDE

The EMtronics EMAFSD9S Digital Air Fryer uses 'High Speed Air Circulation' technology to cook food with up to 80% less fat compared to traditional frying methods. For best results:

- **Oil Usage:** Most foods require little to no oil. For a crispier result, you can lightly brush or spray food with a small amount of oil.
- **Shaking:** For even cooking and browning, shake the basket halfway through the cooking time, especially for smaller items like fries or chicken nuggets.
- **Batch Cooking:** For larger quantities, cook in smaller batches to ensure even air circulation and optimal crispiness. The 9-liter capacity is ideal for family-sized meals.
- **Preheating:** Preheating the air fryer for 3-5 minutes before adding food can improve cooking results.
- **Doneness:** Always ensure food is cooked to a safe internal temperature. Cooking times may vary based on food density, size, and initial temperature.

## MAINTENANCE AND CLEANING

Regular cleaning will ensure optimal performance and extend the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Clean Basket and Crisper Plate:** The frying basket and crisper plate are non-stick and can be cleaned in the dishwasher or by hand. For hand washing, use hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in warm soapy water for about 10 minutes before cleaning.
3. **Clean Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Clean Heating Element:** If necessary, use a cleaning brush to remove any food residue from the heating element inside the appliance.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling and storing the appliance.



Image: The EMtronics EMAFSD9S Air Fryer with its removable basket and crisper plate detached, illustrating the components for easy cleaning.

## TROUBLESHOOTING

If you encounter any issues with your EMtronics EMAFSD9S Air Fryer, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
The air fryer does not turn on.	The appliance is not plugged in. The power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functional by plugging in another appliance.
Food is not cooked evenly.	Too much food in the basket. Food not shaken during cooking.	Cook food in smaller batches. Shake the basket halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Not enough oil (for certain foods). Temperature too low or cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke comes from the appliance.	Fat residue from previous use. Excess oil on food.	Clean the basket and crisper plate thoroughly. Remove excess oil from food before air frying.
The basket does not slide into the appliance properly.	Basket is overfilled. Crisper plate is not positioned correctly.	Do not overfill the basket. Ensure the crisper plate is flat at the bottom of the basket.

## SPECIFICATIONS

- Brand:** EMtronics
- Model Number:** EMAFSD9S
- Capacity:** 9 Litres
- Power:** 1600 Watts
- Voltage:** 220 Volts (AC)
- Material:** Plastic, Aluminium, Stainless Steel
- Color:** Stainless Steel
- Dimensions (Package):** 42 x 39 x 37 cm
- Item Weight:** 6.22 Kilograms
- Control Method:** Touch
- Special Feature:** Temperature Control

## WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your purchase or the retailer's terms and conditions. If you require technical support or have questions not covered in this manual, please contact EMtronics customer service through their official website or the contact information provided with your product documentation.