

Septpenta Septpenta 1080P Body Wearable Camera (64GB)

Septpenta 1080P Body Wearable Camera User Manual

Model: 64GB

1. INTRODUCTION

Thank you for choosing the Septpenta 1080P Body Wearable Camera. This device is designed for versatile recording in various environments, offering high-definition video and photo capabilities with a 180-degree rotatable lens and Wi-Fi connectivity for real-time playback. This manual provides detailed instructions for the proper use, setup, and maintenance of your body camera.





Image: The Septpenta 1080P Body Wearable Camera, a compact black device with a screen and buttons on the front, and a rotatable lens at the top.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids. If it gets wet, power it off immediately and allow it to dry completely before use.
- Use only the provided charging cable and a compatible power adapter to charge the device.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Ensure proper ventilation during charging to prevent overheating.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Septpenta Mini Body Camera
- 1 x Charging Cable (Type-C)
- 1 x User Manual



Power supply



**Charging bank
Power supply**



Built in battery

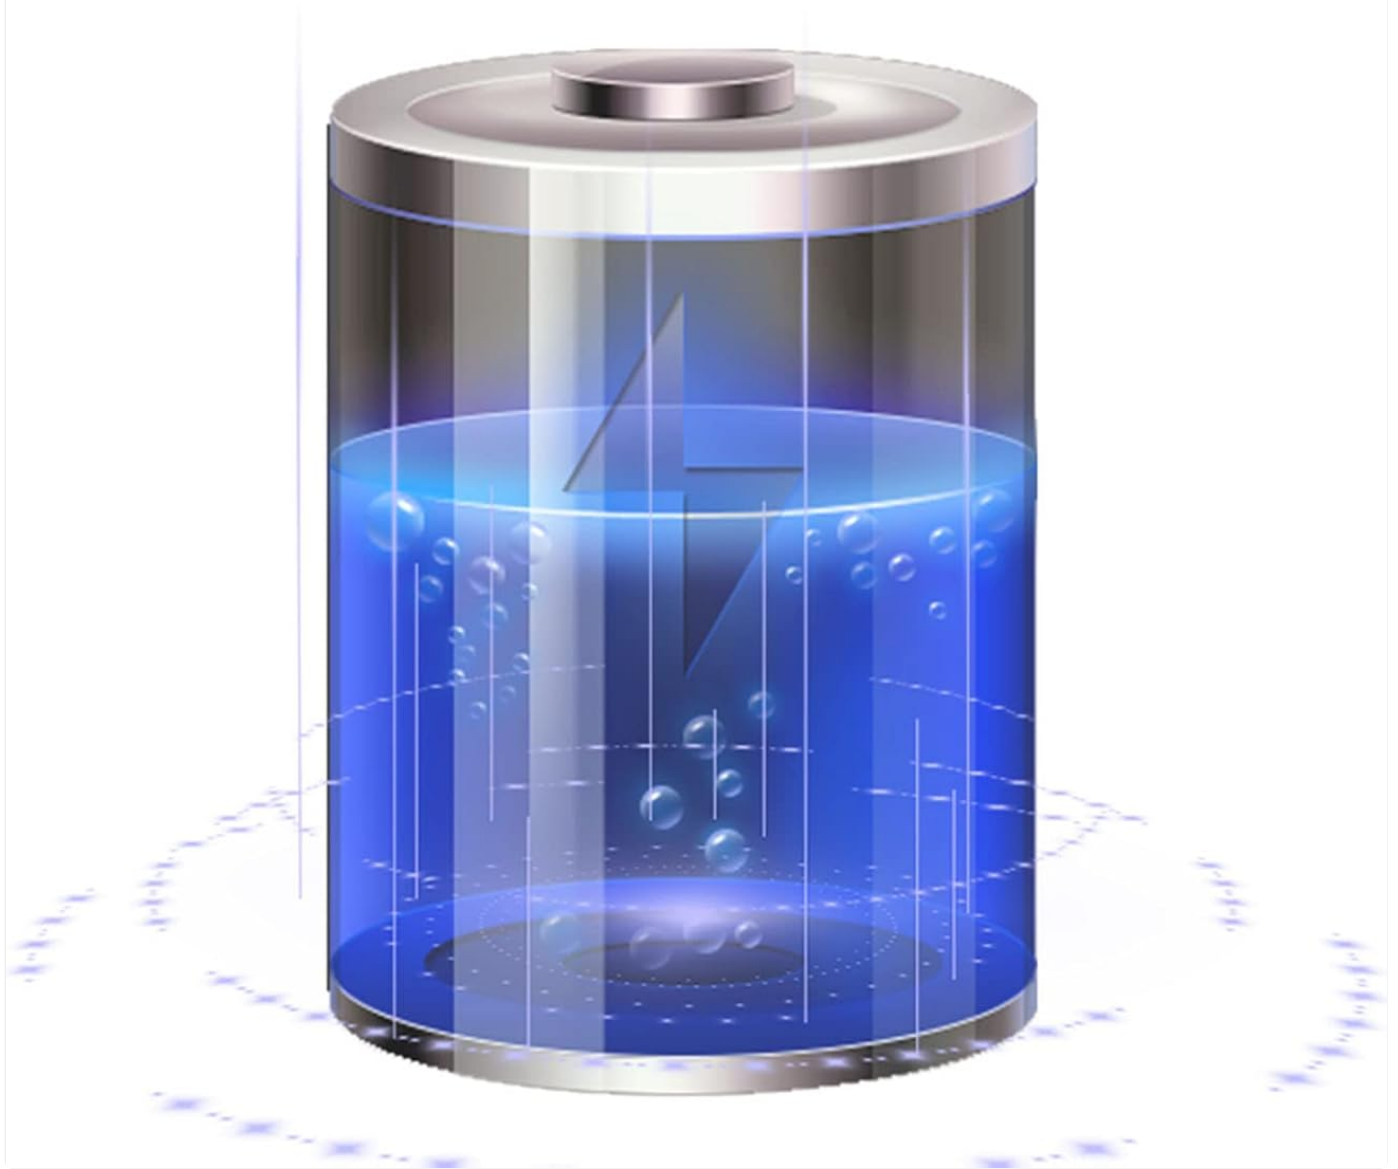


Image: The Septenta body camera shown next to its included USB Type-C charging cable.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Septenta Body Camera:

Audio Video Recording Body Camera



Image: A detailed diagram illustrating the various components and buttons of the Septpenta Body Camera from multiple angles.

1. **Wide Angle Lens:** Captures a broad field of view.
2. **Display Screen:** Shows live view, menu, and playback.
3. **Scroll Up Key:** Navigates up in menus or adjusts settings.
4. **Scroll Down Key:** Navigates down in menus or adjusts settings.
5. **Confirm Key (OK):** Selects options or confirms actions.
6. **Indicator Light:** Displays device status (e.g., recording, charging).
7. **Flip Key:** Likely for screen orientation or menu navigation.
8. **Recording Key:** Starts and stops video recording.
9. **Fill Light Key:** Activates or deactivates the LED fill lights for low-light conditions.
10. **Small Memory Card Slot:** Insert microSD card for storage.
11. **Microphone Hole:** Captures audio.
12. **Video Key:** Dedicated button for video functions.
13. **Photo Key:** Dedicated button for taking still photos.

14. **Power Key:** Turns the device on/off.
15. **Charging or Data Interface (Type-C):** For charging and data transfer.

5. SETUP

5.1 Charging the Battery

Before first use, fully charge the camera's built-in 1400mAh lithium-ion battery. Connect the provided Type-C charging cable to the camera's charging port (15) and the other end to a USB power adapter (not included) or a computer's USB port. The indicator light (6) will show charging status and turn off when fully charged. A full charge provides approximately 290 minutes of working time.

5.2 Inserting a Memory Card

The camera supports small memory cards (microSD) from 4GB up to 256GB. Locate the small memory card slot (10) on the side of the camera. Gently insert the microSD card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **To Power On:** Press and hold the Power Key (14) for a few seconds until the display screen (2) lights up.
- **To Power Off:** Press and hold the Power Key (14) again until the device shuts down.

6.2 Video Recording

1. Ensure a memory card is inserted and the battery is charged.
2. Power on the camera.
3. Press the Recording Key (8) or Video Key (12) once to start video recording. The indicator light (6) will change to indicate recording is in progress.
4. Press the Recording Key (8) or Video Key (12) again to stop recording. The video file will be saved to the memory card.

6.3 Taking Photos

1. Power on the camera.
2. Press the Photo Key (13) once to take a still photograph. The image will be saved to the memory card.

6.4 Wi-Fi Connectivity and Real-Time Playback

The camera supports Wi-Fi for real-time playback and control via a smartphone application. Refer to the specific app instructions (usually found in the camera's menu or a QR code in the packaging) for connecting your device.



Image: The Septenta body camera wirelessly connected to a smartphone, displaying a live feed or recorded content on the phone screen.

6.5 Motion Detection Recording

The camera features intelligent motion detection. When enabled in the settings, the camera will automatically begin

recording when it detects movement, saving storage space and capturing meaningful events. Consult the camera's on-screen menu for activating and configuring this feature.

6.6 Night Vision / Fill Light

For low-light or night conditions, activate the 4 LED fill lights using the Fill Light Key (9). This enhances visibility for clearer recordings and photos in dark environments.

6.7 180-Degree Rotatable Lens

The camera's lens can be manually rotated 180 degrees to adjust the recording angle without repositioning the entire device. This allows for flexible capture of various perspectives.



Image: The Septenta body camera positioned to demonstrate its wide-angle lens capability, capturing a broad scene.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Do not use abrasive cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the memory card if storing for extended periods.

- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use, to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted.	Charge the camera fully using the provided cable.
Cannot record video/take photos.	No memory card inserted or card is full/corrupted.	Insert a compatible microSD card. Format the card if necessary (this will erase all data). Check available storage.
Poor video/image quality.	Lens is dirty; insufficient lighting.	Clean the lens carefully. Activate the fill light in low-light conditions.
Wi-Fi connection issues.	Incorrect app settings; camera Wi-Fi not enabled.	Ensure Wi-Fi is enabled on the camera and your smartphone. Re-check app connection steps.

9. SPECIFICATIONS

Feature	Detail
Product Material	ABS
Video Resolution	1920x1080P
Video Format	MOV
Video Compression	H264
Video Frame Rate	About 25fps
Image Ratio	16:9
Image Resolution	4608x3456P
Image Format	Jpg
Battery Type	1400mAh Lithium-ion Battery
Working Time	Approx. 290 Minutes
Storage Support	MicroSD card, 4GB-256GB
Interface Type	Type-C
Lens Rotation	180 Degrees
Special Features	Wi-Fi Real-Time Playback, Motion Detection, 4 LED Fill Lights

10. WARRANTY AND SUPPORT

Septpenta products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Septpenta website. Please retain your proof of purchase for warranty claims.

For further assistance, you may contact Septpenta customer service through the contact information provided on their official website or through your retailer.

© 2023 Septpenta. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question